





## Parts Included

- Label rewriter
- Power adapter (24V)
- 1.5" core adapters (optional)
- 3" core adapters (optional)
- Manufacturer User Guide
- Quick Start Guide

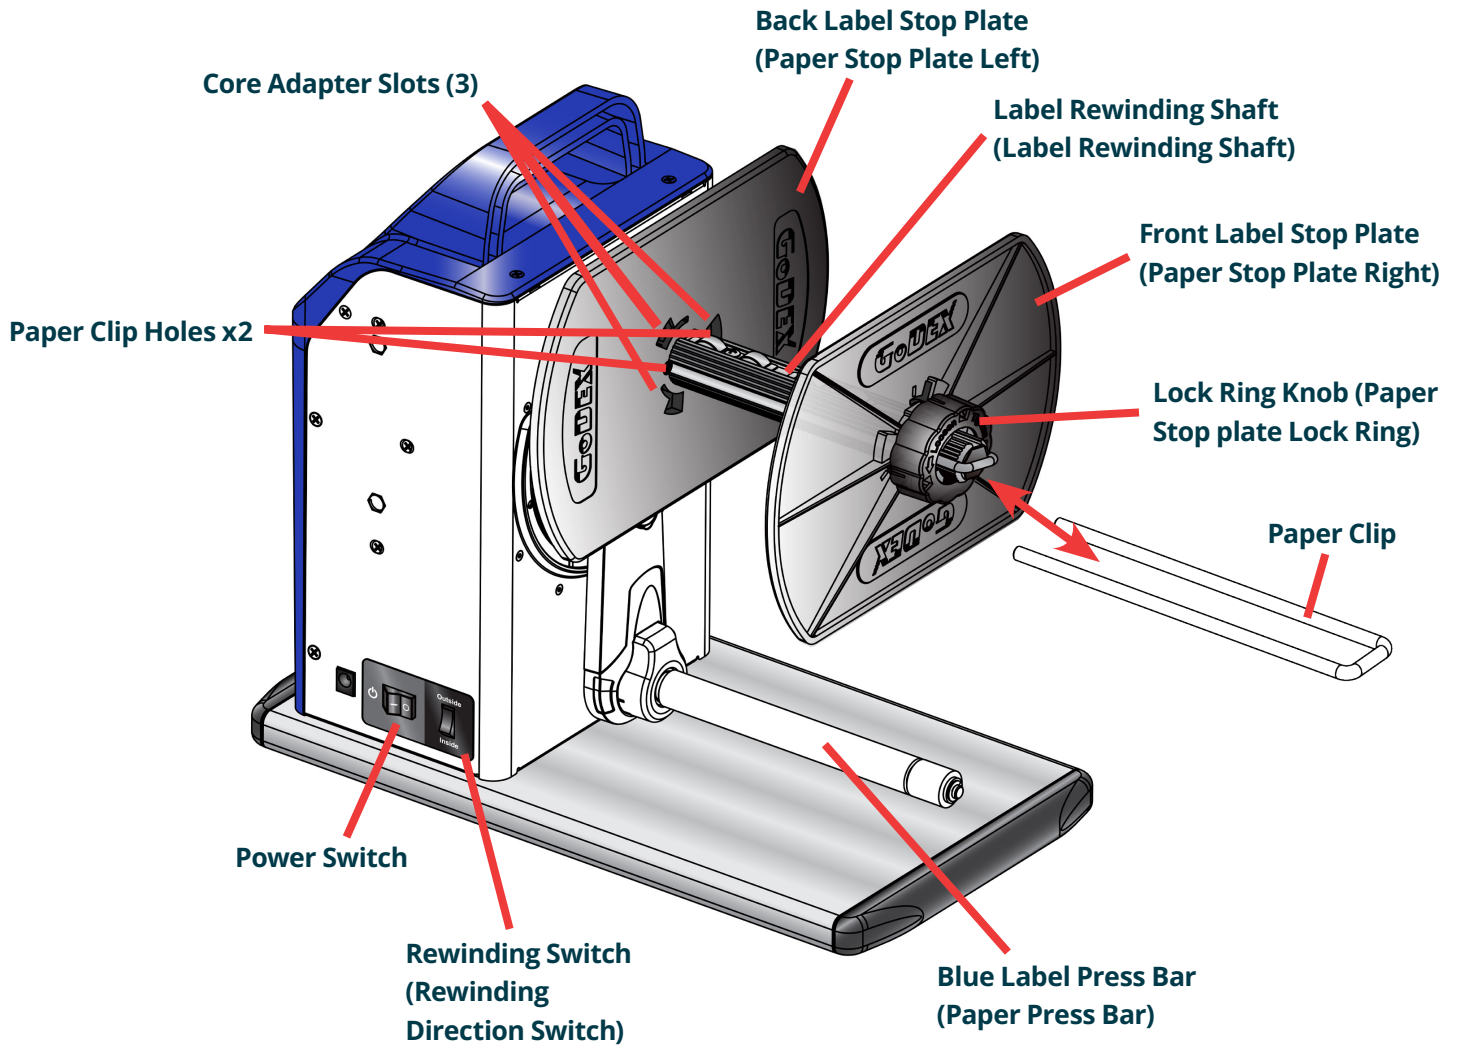

## Setup

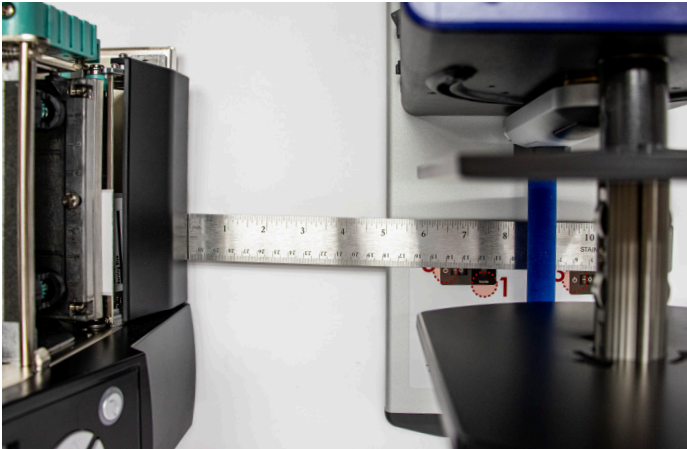


1. Place label rewriter parallel to printer with 5 inch minimum distance. Confirm printer to rewind and label rewinding shaft are in a straight line.



2. Plug power adapter into rewriter and working outlet. **Do not** turn on. Press the feed button of printer to extend labels 10-14 inches.




3. Turn the lock ring knob counterclockwise to remove and slide off front label stop plate. Pull paper clip from end of label rewinding shaft to remove. Set both aside.

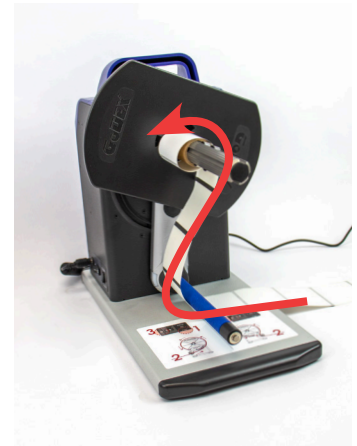

4. Wrap labels around the blue label press bar and over the rewinding shaft in an "S" pattern when labels feed from left or in a "Z" pattern when labels feed from right.

5. Secure labels to label rewinding shaft with cardboard core or paper clip option.

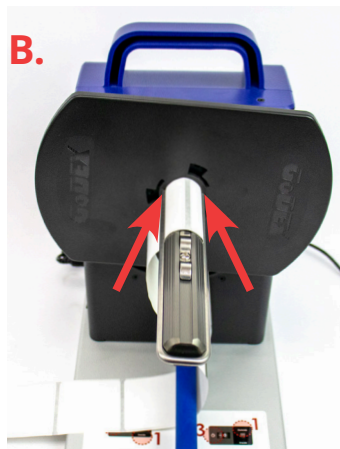

A.


B.

### A. Cardboard Core Option

- Slide cardboard core on label rewinding shaft verifying tight fit. Use core adapters, if needed. Use a piece of tape or remove the first label and use to affix labels to cardboard core.

### B. Paper Clip Option


- Extend labels 1" over label rewinding shaft, pinch to hold label in place. Line up paper clip with grooves on end of label rewinding shaft. Slide paper clip over labels and pinch slightly to press paper clip into 2 holes on back label stop plate.

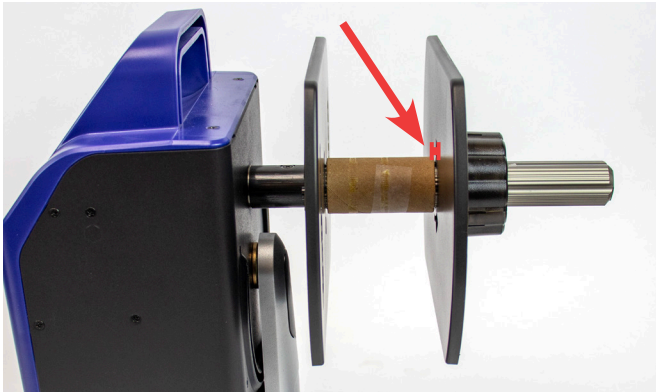

**6. Slide the front label stop plate on label rewinding shaft leaving 1 mm space between the cardboard core/ edge of labels and the front label stop plate. Slide and push the lock ring knob on the label rewinding shaft and turn clockwise to lock front label stop plate in place.**



**7. Toggle the rewinding switch to "Outside" (wind labels facing outward) and the power switch to "-" to power on, cycle through colored lights to display pink.**

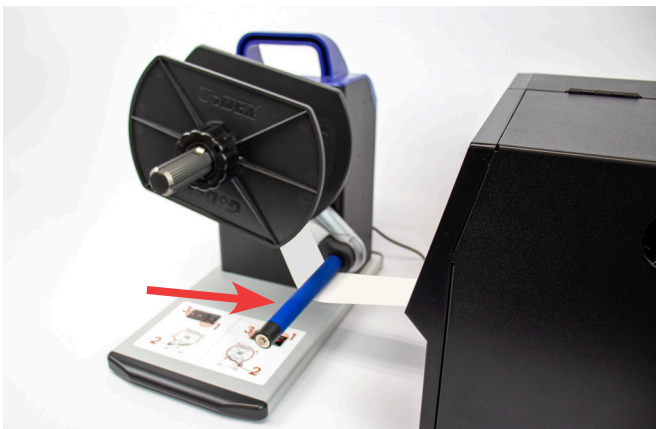

**8. Gently push the blue label press bar toward the printer to start label rewinder. Label rewinder automatically stops when labels are wound tight. Move printer for labels to lay flat, if needed.**



**9. Toggle power switch to "O", turning off power, and cut labels near printer. Turn the lock ring knob counterclockwise and remove. Slide the front label stop plate to remove.**





**10. Slide label roll with cardboard core off label rewinding shaft. Pull paper clip and remove to slide off label roll, if using paper clip.**

## Training Resources

Have a DateCodeGenie question?  
Find the answer in our knowledge base.  
[datecodegenie.com/support](https://datecodegenie.com/support)



Log into your portal at [datecodegenie.com](https://datecodegenie.com) and access all training tools from the Support tab. See videos, knowledge base and more.

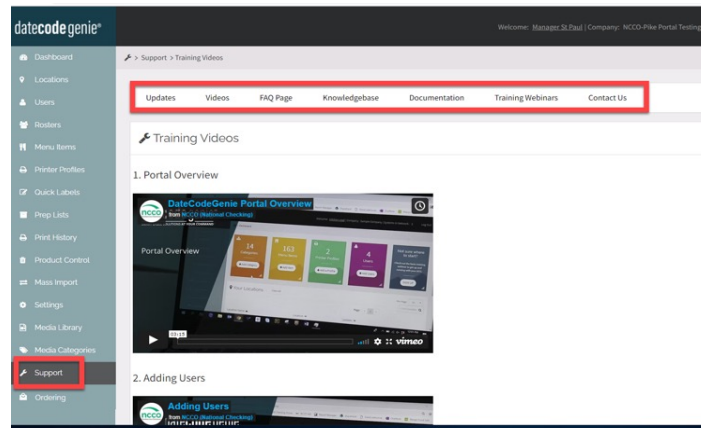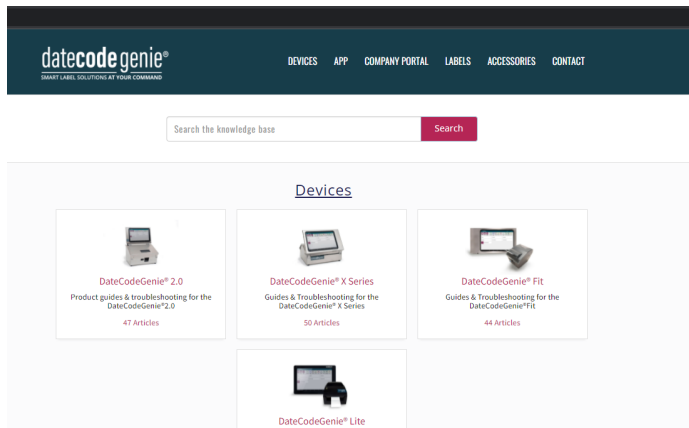

## Contact & Support

### Americas & Asia

#### Technical Support

800.774.0478 x 1  
[dcgsupport@ncco.com](mailto:dcgsupport@ncco.com)

#### Customer Service

800.328.6508  
[cs@ncco.com](mailto:cs@ncco.com)

### Europe & UAE

#### Technical Support

00 44 (0)1283 527299 x 4  
[supportdgc@ncco.com](mailto:supportdgc@ncco.com)

#### Customer Service

00 44 (0)1283 527977 option 4  
[supportdgc@ncco.com](mailto:supportdgc@ncco.com)

To learn more about NCCO and view a full list of our products, visit us at [ncco.com](https://ncco.com).

Looking for warranty information on your product? Limited-warranty information for DateCodeGenie products and third-party warranty information for accessories are all available to view and download at: [support.datecodegenie.com/warranty](https://support.datecodegenie.com/warranty)

