

EVO Force 1 Remote Guide

1/25/2024

This guide covers the EVO Force 1 Android STB with the TiVo Creek remote control.

Remote Overview

- 1 **POWER** turns television on or off.
- 2 **VOL** and **MUTE** control the TV audio.
- 3 When using the TiVo Stream app, the **TiVo button** opens the menu (Guide, My Shows, and more). From the Android TV home screen or any other app, the TiVo button opens the TiVo Stream app.
- 4 While navigating the TiVo menus, **UP**, **DOWN**, **LEFT**, or **RIGHT** move around. While watching video, LEFT and RIGHT are used for playback control (pause, fast-forward, rewind). Availability of playback control depends on the show and streaming service.
- 5 **OK/SELECT** chooses items on screen. A long press on a show title brings up an option menu. While watching video, OK/SELECT pauses/unpauses video.
- 6 **BACK** goes back to the previous screen. If no previous screen is available, BACK opens/closes the TiVo menu. In some streaming services, BACK returns to the TiVo Home screen.
- 7 The **circle button** opens the Android TV home screen.



- 8 **INPUT** changes your video source (TiVo Stream 4K, gaming system, etc).
- 9 **GUIDE** takes you to the program guide.
- 10 **CHANNEL UP/DOWN** change the channel while watching live TV, and lets you scroll through the program guide quickly.
- 11 **"i" (Info)** displays show information when watching TiVo+. A long press opens the Accessibility settings screen (does not apply when watching video).
- 12 **SKIP** jumps forward 30 seconds while watching video. Availability depends on the show and streaming app.
- 13 Press and release the **Google Assistant button** to talk to Google.
- 14 **LIVE** jumps to the last watched channel from any TiVo Stream app screen, the Android TV home screen, and other apps on your device.
- 15 **NETFLIX** launches the Netflix app.
- 16 **NUMBER BUTTONS** can be used to quickly enter numbers (for instance, when entering a password).

Using Voice Commands

- 1) Press and release the Google Assistant button on your remote (button 13 in the overview image)
- 2) Tell Google Assistant what you would like to open, search for, etc.
 - a) Search for a movie: "Star Wars"
 - b) Open settings: "Settings"
 - c) Ask for suggestions based on genre: "Show me action movies"

Re-pairing The Remote

If you are having issues with your remote control, it may need re-paired with the EVO Force 1 box.

- 1) On the remote hold down both the Silver TiVo button (button 3) and the back button (button 6) until the remotes activity light turns solid red.
- 2) Let go of both buttons, the light will now flash amber
- 3) The TV screen will now prompt to repair the remote, do not touch anything on the remote. The remote should pair automatically within 30 seconds.
- 4) If it doesn't pair automatically, retry steps 1-3.
 - a) If automatic pairing keeps failing, you may need to factory reset the remote.
 - b) If pairing still fails after factory resetting the remote, contact support for additional assistance.

Factory Reset the Remote

Only factory reset your remote if you are unable to repair the remote to the EVO Force 1 box or if instructed by support.

A factory reset will unpair the remote with the box and any other accessories it is setup for; TV, soundbar, etc.

- 1) Press and hold the TiVo button (button 3) and the TV power button (button 1) at the same time for approximately 3 seconds. Release the buttons.
- 2) The activity light will be solid red.
- 3) Press Volume down 3 times and then press the TiVo button (button 3).
- 4) The activity light will flash red 3 times.
- 5) Follow the re-pairing procedure above.