



US Wiring Instructions: Tungsten/Cobalt Electric

**2000W & 3000W Models
STANDARD INSTALLATION**

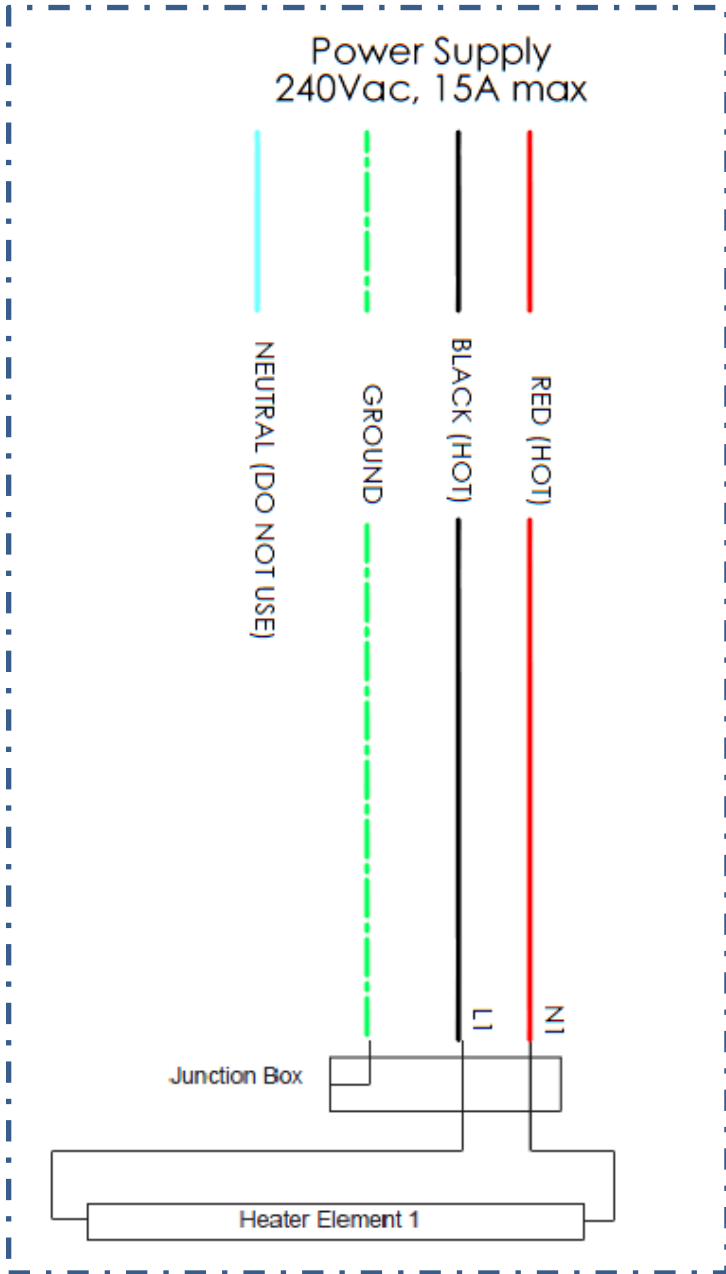


Any work conducted will be at the responsibility of the Installer/Technician.

**4000W & 6000W Models
OPTIONAL INSTALLATION**

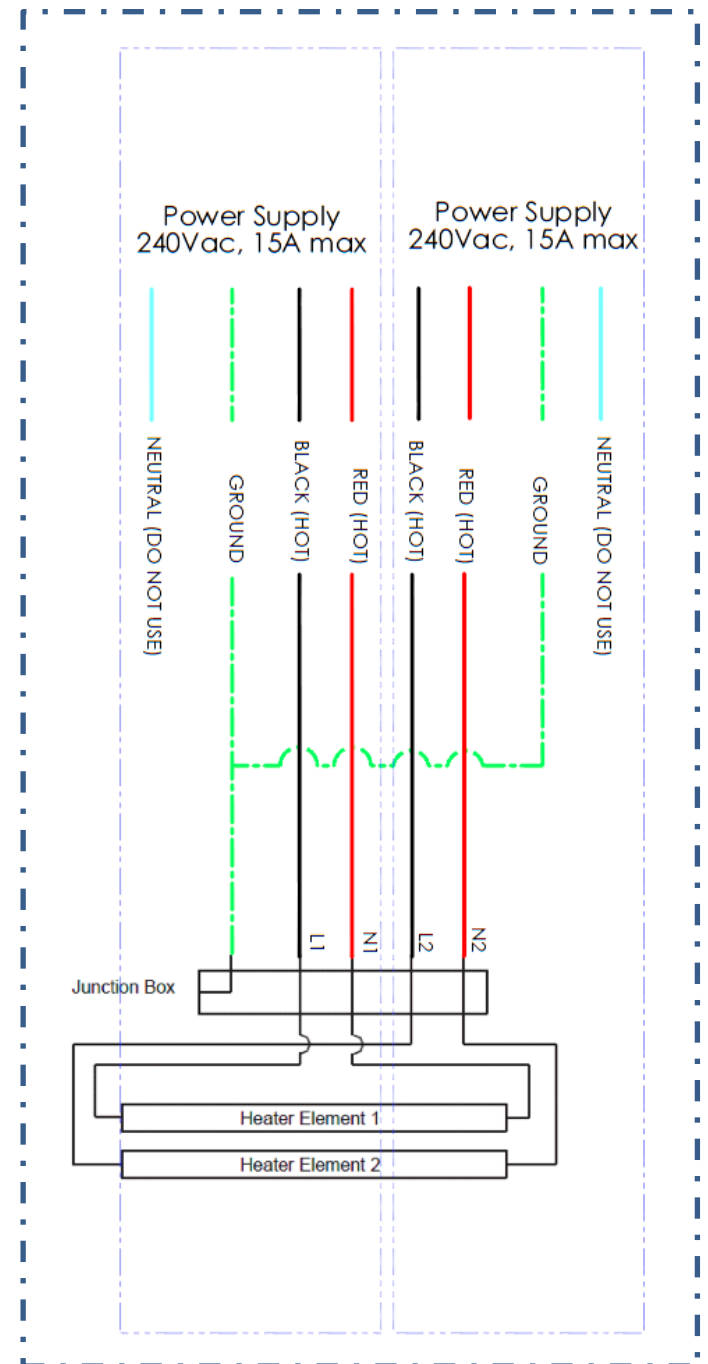

**4000W & 6000W Models
STANDARD INSTALLATION**

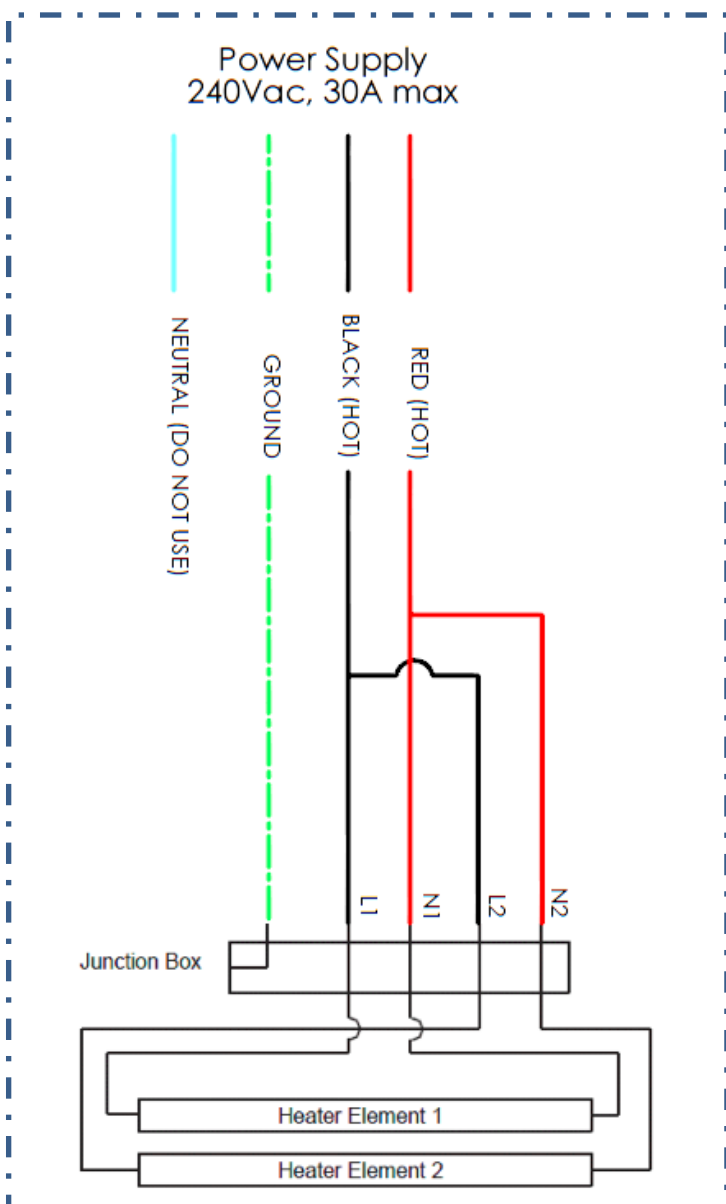

MUST BE INSTALLED BY LICENCED ELECTRICIAN

INSTALLATION CHECK:

- Voltage measured between BLACK and RED = 240Vac
- Voltage measured between BLACK and EARTH = 120Vac
- Voltage measured between RED and EARTH = 120Vac

The information contained in this document is provided as a guide only. Any installation must be completed by a licenced technician and be completed in accordance with all relevant jurisdictional electrical, fire and safety regulations and codes. It is the sole responsibility of the installer to check and confirm all codes and to perform installation correctly.