

Firmware Update Instructions - LE55FHDE5510C

WARNING!

Before updating, please confirm that your TCL TV meets BOTH of the following criteria:

- ☒ The firmware file name matches your specific TV model
- ☒ Your TV is experiencing problems or technical issues
- ☒ Your TV is unable to launch Netflix or Yahoo Apps

* If your TV is not experiencing any issues, DO NOT update the firmware

What's my TV model #?

Check the back of your TV for a black sticker with the model

HERE



Instructions

- 1) Load the firmware update file onto an empty USB flash drive.
- 2) Turn off the TV using the remote control.
- 3) Take the USB flash drive and plug it into the USB port on the TV.
- 4) Push and hold the power button on the front of the TV until it starts flashing.
- 5) Once it starts flashing, let go of the power key. The screen will stay black.
- 6) Once the firmware update is complete, the TV will automatically turn on.
- 7) Once the TV is on, please remove the USB flash drive.

Warning: Failure to follow the above instructions may result in damage to your TV!

If you have any questions, please call customer service 9am-9pm (EST)

US: 877-300-8837

HI, AK, PR: 877-300-1269