




Parts Included

- Star DCG-SCANBT-ST Scanner
- USB-A to USB-B Cable
- Scanner Dock
- Wireless Dongle

Scanner Setup



1. Connect USB-B end into corresponding port on the bottom of the scanner.

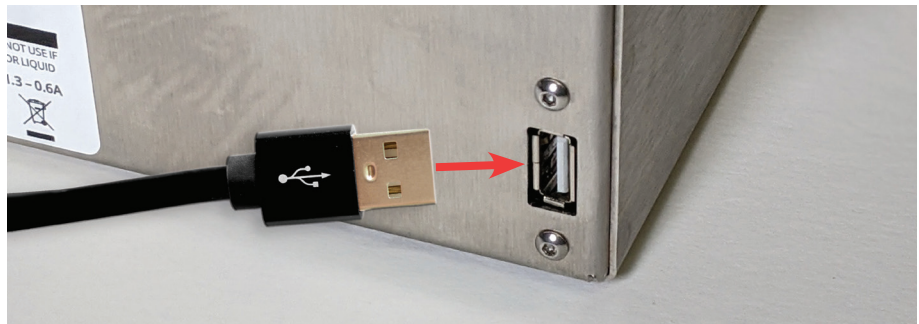

2. Connect USB-A end into corresponding port on the DateCodeGenie® device or different powered USB port to charge the scanner.



【Enter Setup】



【Bluetooth HID Mode】



【Exit Setup】

3. Press trigger on charged scanner and scan "Enter Setup" barcode. A beep will indicate that the barcode was scanned.

Scan "Bluetooth HID Mode" barcode.

Scan "Exit Setup" barcode.




4. Press trigger on charged scanner for 7 seconds to begin pairing; scanner will beep when it is powered on.


Tablet Setup




5. Click on the Optional Settings (gear icon) to access Manager Settings on the DCG Kiosk Home Screen.

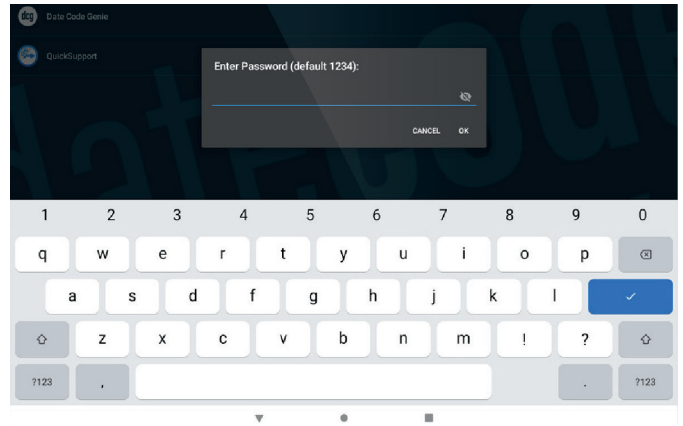


6. Enter the password to access Manager Settings.

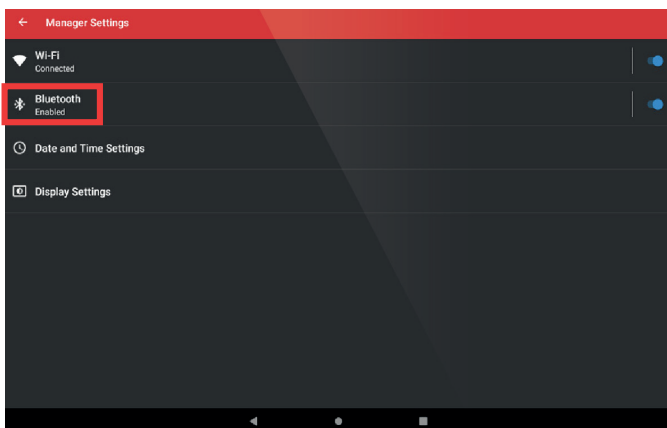


7. Click on Bluetooth in Manager Settings.

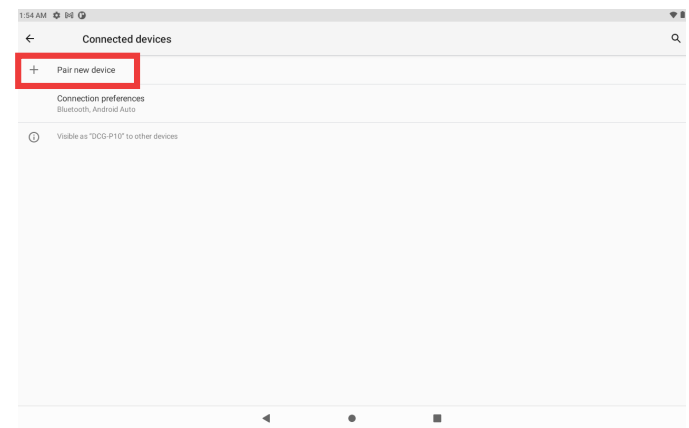


8. Click on Pair new device.

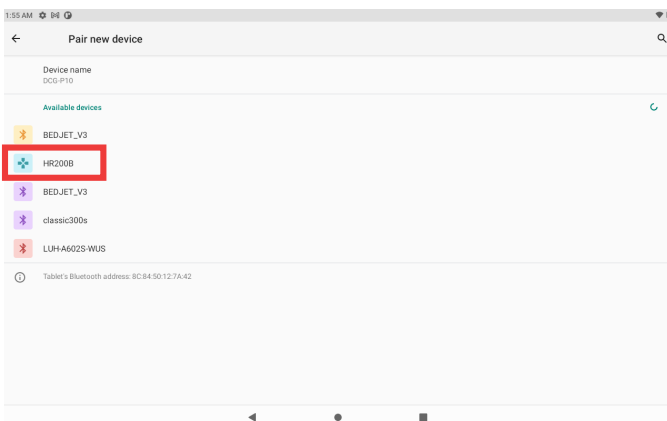


9. Locate "HR200B" and tap to pair. The scanner will beep, if successfully paired.

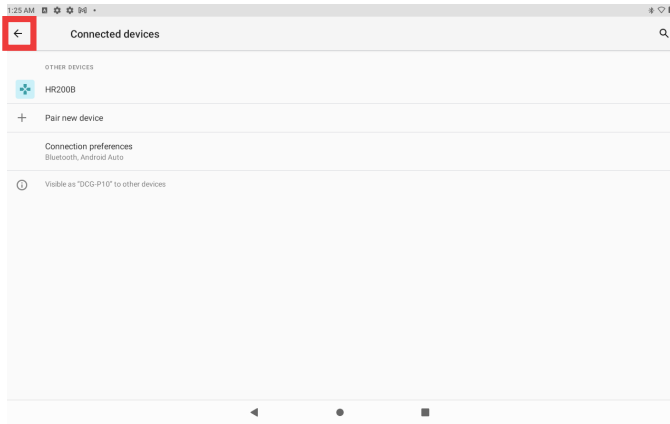


10. Return to the Settings screen by clicking the back-arrow button in the top left corner.

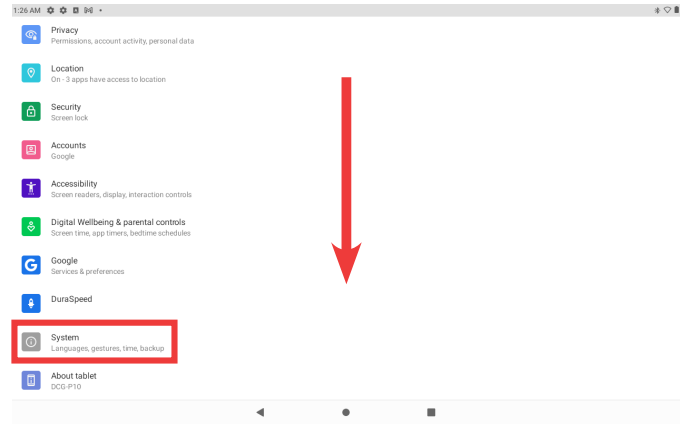


11. Scroll down in the Settings menu to locate System. Click on System to access system settings.

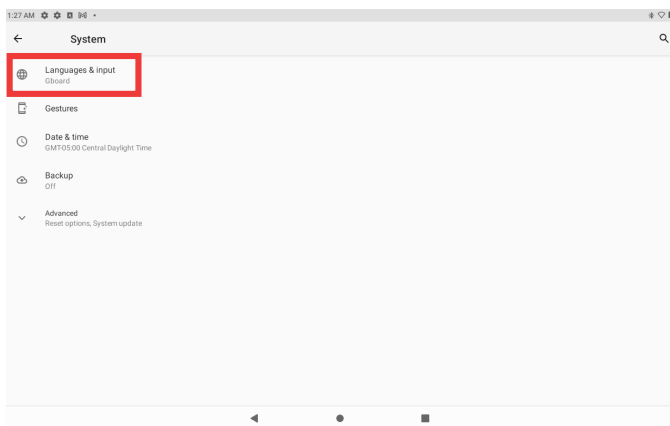

12. Click on Language & input.

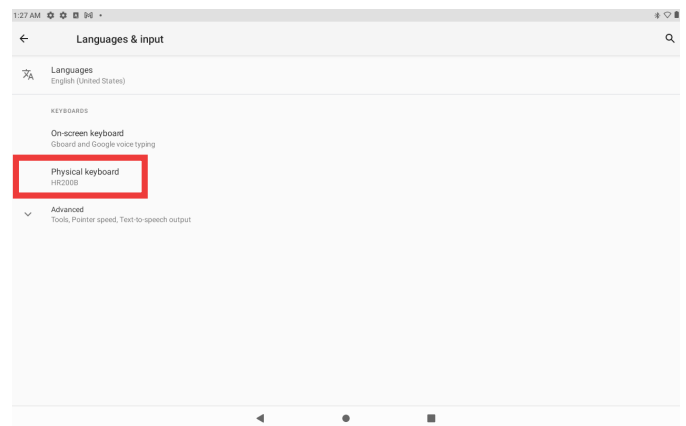

13. Click on Physical keyboard.

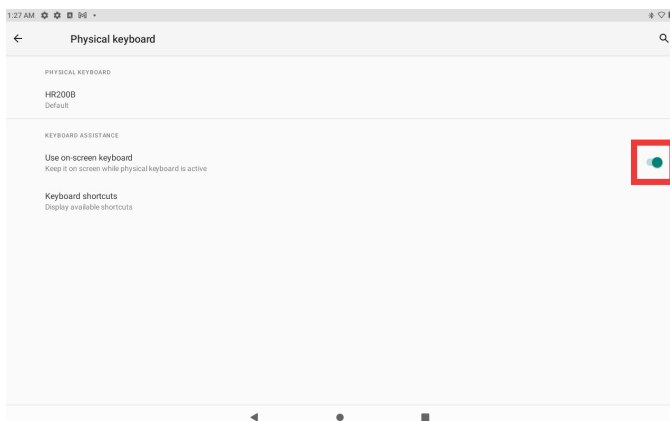



14. Tap the toggle to green, for Use on-screen keyboard to turn on.

Training Resources

Have a DateCodeGenie question?
Find the answer in our knowledge base.
datecodegenie.com/support



Log into your portal at datecodegenie.com and access all training tools from the Support tab. See videos, knowledge base and more.

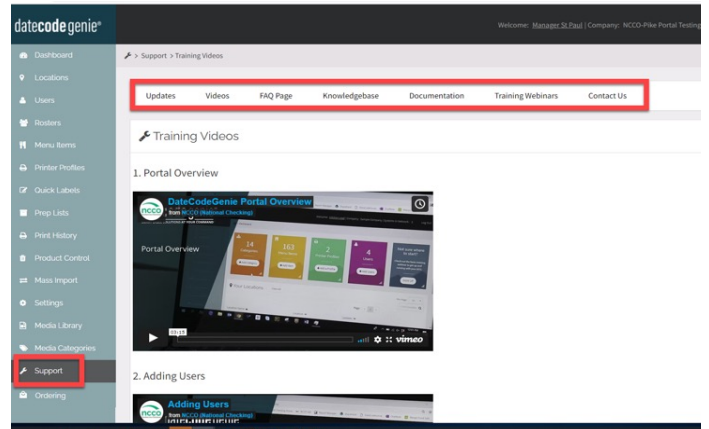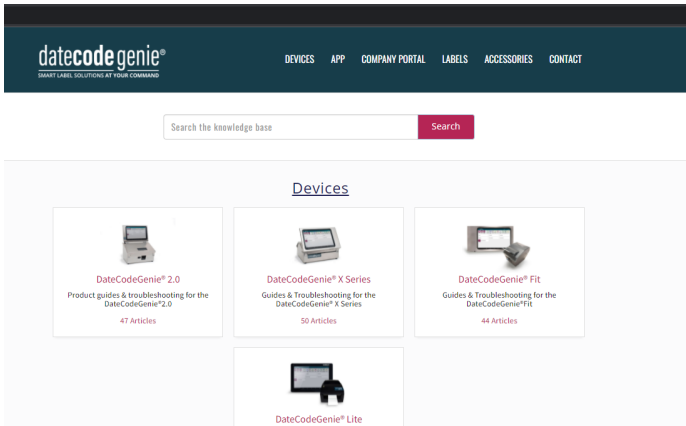

Contact & Support

Americas & Asia

Technical Support
800.774.0478 x 1
dcgsupport@ncco.com

Order Processing
800.774.0478 x 2
cs@ncco.com

Europe & UAE

Technical Support
00 44 (0)1283 527299 x 4
supportdgc@ncco.com

Customer Service
00 44 (0)1283 527299 x 1
DCGuksetup@ncco.com

