

**FURUNO**

# **INMARSAT-C MOBILE EARTH STATION FELCOM 15 *Installation Manual***

---

## **TABLE OF CONTENTS**

<b>SAFETY INSTRUCTIONS .....</b>	<b>i</b>
<b>EQUIPMENT LISTS.....</b>	<b>ii</b>
<b>SYSTEM CONFIGURATION .....</b>	<b>iv</b>
<b>1. MOUNTING THE UNIT.....</b>	<b>1</b>
1.1 Antenna Unit.....	1
1.2 Terminal Unit .....	4
1.3 Distress Alert/Received Call Unit IC-305/Alarm Unit IC-306 .....	6
1.4 Printer PP-510 (option)/EGC Printer PP-505 (option) .....	7
1.5 AC/DC Power Supply Unit PR-240 (option) .....	7
1.6 Junction Box IC-315 .....	8
<b>2. WIRING .....</b>	<b>9</b>
2.1 Antenna Cable Connector at the Terminal Unit.....	10
2.2 Distress Alert/Received Call Unit IC-305.....	14
2.3 Alarm Unit IC-306 .....	15
2.4 Junction Box IC-315 .....	16
<b>3. INITIAL SETTING.....</b>	<b>17</b>
3.1 Setting the IMN (INMARSAT MOBILE NO.).....	17
3.2 Setting for External Equipment.....	18
<b>4. INSTALLATION OF GPS BOARD (OPTION).....</b>	<b>19</b>
<b>5. CHANGING POWER SUPPLY SPECIFICATIONS .....</b>	<b>22</b>
<b>PACKING LISTS.....</b>	<b>A-1</b>
<b>OUTLINE DRAWINGS.....</b>	<b>D-1</b>
<b>INTERCONNECTION DIAGRAM .....</b>	<b>S-1</b>



**FURUNO ELECTRIC CO., LTD.**

[www.furuno.com](http://www.furuno.com)

All brand and product names are trademarks, registered trademarks or service marks of their respective holders.





(Elemental Chlorine Free)

The paper used in this manual  
is elemental chlorine free.

## FURUNO ELECTRIC CO., LTD.

9-52 Ashihara-cho,  
Nishinomiya, 662-8580, JAPAN

• FURUNO Authorized Distributor/Dealer

All rights reserved.

Printed in Japan

Pub. No. IME-56350-G3

(ETMI ) FELCOM15

A : DEC. 2002

G3 : MAR. 25, 2019



0 0 0 8 0 9 3 5 1 1 6





# SAFETY INSTRUCTIONS



## WARNING



### ELECTRICAL SHOCK HAZARD

**Do not open the equipment unless totally familiar with electrical circuits and service manual.**

Only qualified personnel should work inside the equipment.



**Do not approach the radome closer than 60 cm when it is transmitting.**

Microwave radiation can cause severe injury or illness.  
Radiation level:  
10 W/m<sup>2</sup> at 60 cm



**Turn off the power at the mains switchboard before beginning the installation. Post a sign near the switch to indicate it should not be turned on while the equipment is being installed.**

Fire, electrical shock or serious injury can result if the power is left on or is applied while the equipment is being installed.



## CAUTION

**Confirm that the power supply voltage is compatible with the voltage rating of the equipment.**

Connection to the wrong power supply can cause fire or equipment damage. The voltage rating appears on the label at the rear of the terminal unit.

### Use the correct fuse.

Use 10 A fuse (default setting) for 12 VDC power supply, or replace the fuse to 5 A (supplied as spare parts) with 24 VDC.

Use of wrong fuse can result in damage to the equipment.

### Keep the following compass safe distances.

	Standard	Steering
Antenna Unit IC-115	0.30 m	0.30 m
Terminal Unit IC-215	0.70 m	0.40 m
Printer PP-510	1.00 m	0.80 m
Junction Box IC-315	1.00 m	0.70 m
Distress Alert/ Received Call Unit IC-305	0.50 m	0.30 m
Alarm Unit IC-306	0.50 m	0.30 m
EGC Printer PP-505	2.05 m	1.40 m
AC/DC Power Supply Unit PR-240	0.90 m	0.60 m
Mini keyboard	0.30 m	0.30 m



**Attach securely protection earth to the ship's body.**

The protection earth is required to the power supply to prevent electrical shock.



# EQUIPMENT LISTS

## Standard Supply

Name	Type	Code No.	Qty	Remarks
Antenna Unit	IC-115	-	1	
Terminal Unit	IC-215	-	1	
Distress Alert/ Received Call Unit	IC-305	-	1	
Alarm Unit	IC-306	-	1	
Junction Box	IC-315	-	1	w/CP16-02501*
Installation Materials	CP16-02101	004-439-060	1 set	For 30 m antenna cable (w/o armor)*
	CP16-05001	001-101-960		For 30 m antenna cable (w/armor)*
	CP16-02111	004-439-070		For 50 m antenna cable (w/armor)*
	CP16-02121	004-439-080		For 100 m antenna cable (w/armor)*
	CP16-02300	000-043-433	1 set	CP16-02301 (for IC-215)*, CP16-02302 (for keyboard)*
	CP16-02201	004-438-890	1 set	For IC-305/306
	TP5FBAW-5DFB	000-159-523-11	1	30 m antenna cable (w/o armor)
	5D-FB-CV-NP	000-173-676-10		30 m antenna cable (w/armor)
	8D-FB-CV	000-168-241-10		50 m antenna cable (w/armor)
	12D-SFA-CV	000-138-866		100 m antenna cable (w/armor)
Accessories	FP16-00600	000-043-434	1 set	Mini keyboard (G84-4100PPAUS), FD (FP16-00601)
Spare Parts	SP16-01301	004-439-370	1 set	Fuse*

## Optional Supply

Name	Type	Code No.	Qty	Remarks
FD-ROM	16-5-0164	004-438-920	1 set	
GPS Board	OP16-47	001-017-110	1 set	
GPS Board Kit	OP16-48	000-011-766	1 set	
RF Cover (GPS)	OP16-49	000-011-767	1	
EGC Printer	PP-505	-	1	
Printer	PP-510	-	1	w/CP16-01200*
AC/DC Power Supply Unit	PR-240	-	1	w/CP24-00151*
5-pair cable	CO-SPEVV-SB-C 0.2x5P	000-560-452	1	For junction box, 10m
		000-103-868		For junction box, 20m
		000-103-869		For junction box, 30m
		000-132-829		For junction box, 40m
		000-132-828		For junction box, 50m
SSAS Modification Kit**	OP16-33	000-043-492	1	IC-307 (2units), FD-ROM (for RFCN CPU, for TERM CPU)
SSAS Alert Unit**	IC-307	000-043-473	1	w/CP16-03101, FP16-00901
Flush Mounting Kit	OP16-27	004-448-000	1	For distress alert/received call unit, alarm unit
	OP16-28	004-448-010	1	For SSAS alert unit
ALC (FFA) Modification Kit*	OP16-26	004-439-840	1	
Russian Language Kit	OP16-43	004-449-590	1	For IC-215
PC Terminal Software	OP16-45	004-449-600	1	Russian Language
Antenna Mounting Kit	CP16-03701	004-555-000	1 set	




Antenna Bracket	CP16-03702	001-016-260	1	See page D-14.
Antenna Mounting Pipe	CP16-03703	001-014-510	1	

\*: See packing lists at the back of this manual.

\*\*: The SSAS modification kit is required for the SSAS. For installation of three IC-307s, additional SSAS alert unit is necessary.



# SYSTEM CONFIGURATION

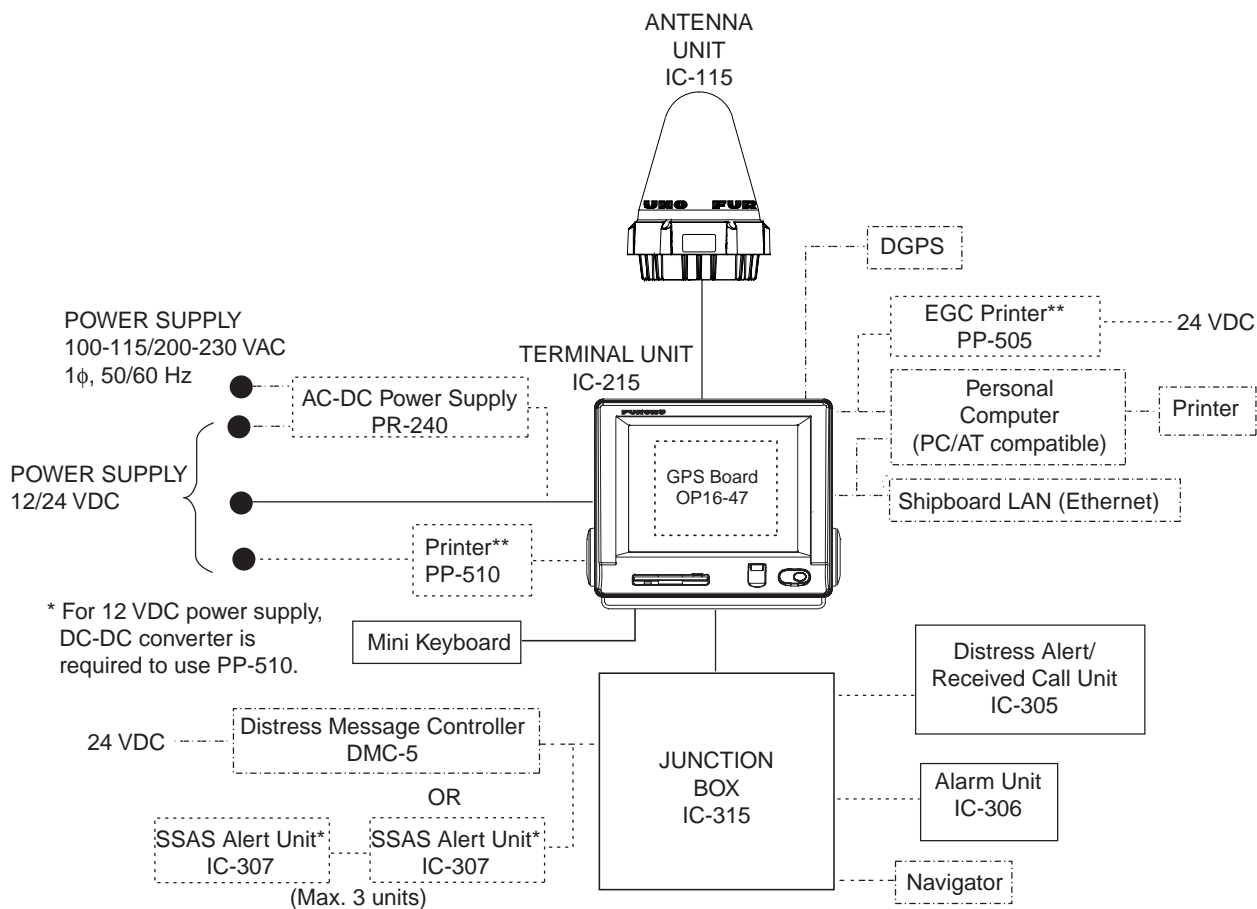

\*: At least two SSAS Alert Units are required.

\*\* : Mandatory for EGC operation as required by IMO RES. A.664(16).

—— : Standard Supply

----- : Option

..... : Local Supply

## CATEGORY OF UNITS

Unit	Category
Terminal Unit	Protected from weather
Antenna Unit	Exposed to weather
Other Units	Protected from weather



# 1. MOUNTING THE UNIT

## NOTICE


**Do not apply paint, anti-corrosive sealant or contact spray to coating or plastic parts of the equipment.**

Those items contain organic solvents that can damage coating and plastic parts, especially plastic connectors.

## 1.1 Antenna Unit


### Mounting Location

- Mount the omnidirectional antenna unit high atop a mast clear of stays and the turning diameter of a radar antenna. The ideal mounting location would be where no obstacle appears in the fore and aft directions down to  $-5^\circ$  and down to  $-15^\circ$  in the port and starboard directions. This concept is illustrated in the figure below. Shadow sector of the antenna mast, whip antenna, etc. should be within 2 degrees at one meter from the antenna unit.

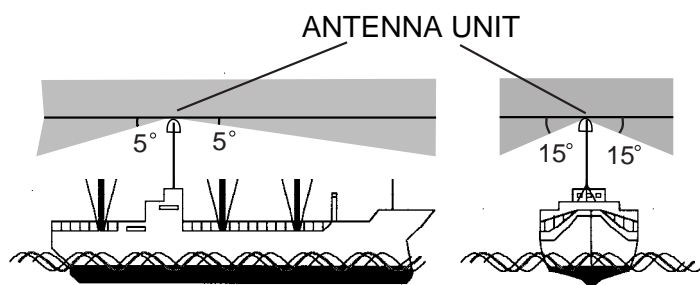

*Antenna unit mounting location*

- If both Inmarsat-B/F and Inmarsat-C ship earth stations are installed, separate the Inmarsat-B/F antenna at least 8 m from the Inmarsat-C antenna.
- Separate the antenna unit from an S-band radar as follows:

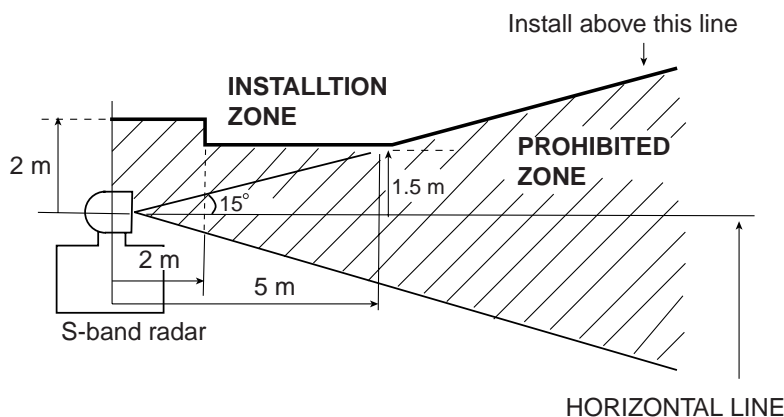

*S-band radar and installation area*



## 1. MOUNTING THE UNIT

- The allowable vibration level as specified by Inmarsat is as shown in the table below.

### Allowable vibration level

Frequency	Level
2 to 10 Hz	2.54 mm Peak Amplitude
10 to 100 Hz	9.8 m/s <sup>2</sup> Peak Acceleration

- Avoid the location near funnels and stacks; smoke and soot on the radome can lower signal level.
- Separate the antenna unit 5 m from HF, VHF or 27 MHz antenna.

## Mounting

The antenna cable is available in lengths of 30 m, 50 m and 100 m (see table below).

Cable length	Type	Remarks
30 m (no armor)	TP5FBAW-5DFB	TNC connector at both ends
30 m (w/armor)	5D-FB-CV-NP	N connector on one end (antenna side)
50 m (w/armor)	8D-FB-CV	
100 m (w/armor)	12D-SFA-CV	

To mount the antenna unit, an exclusive pipe is necessary.


**Note 1:** Do not shorten these cables. Interference can result, affecting performance.

**Note 2:** To mount the antenna unit with the optional antenna mounting kit (Type: CP16-03701, Code No.: 004-555-000), see page D-13.

Locally prepare an antenna mast with a ground stud (M6 stainless steel bolt welded to antenna mast) and mounting pipe with threads and plate (See the outline drawing of the mounting plate shown on the next page.) Weld the mounting pipe to the antenna mast. The distance between the stud and the earth terminal on the antenna unit should be within 340 mm, which also is the length of the supplied earth wire.



## 1. MOUNTING THE UNIT

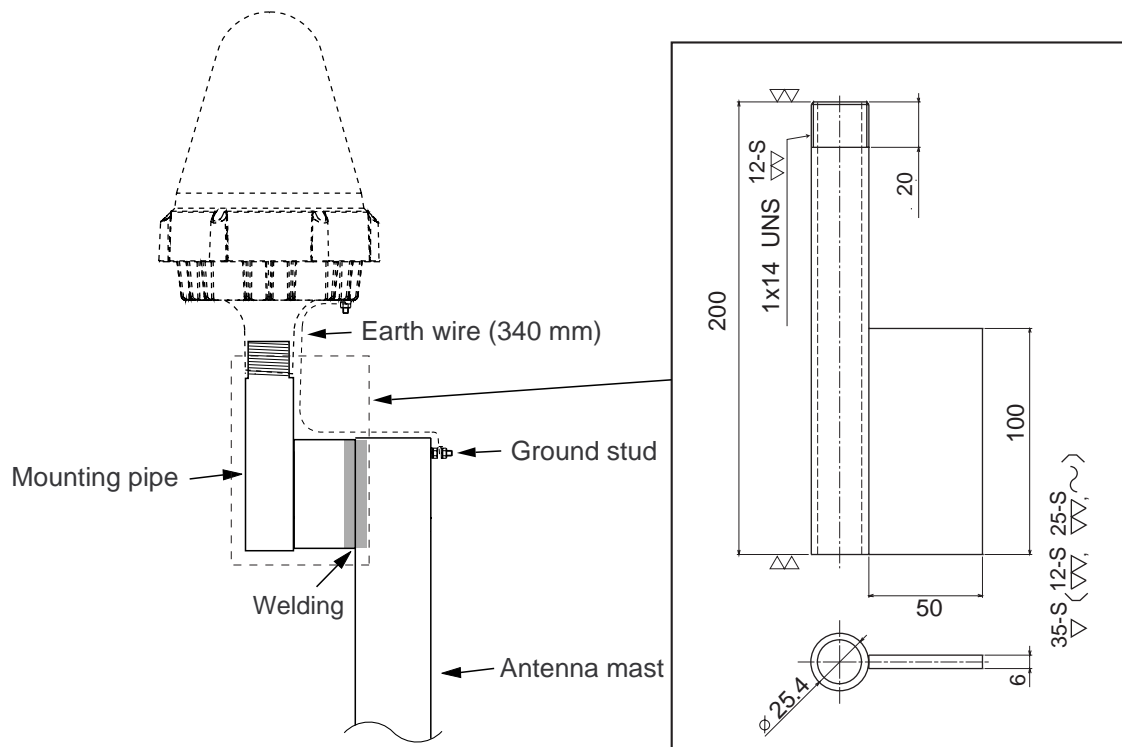

*Mounting pipe and antenna mast*

For how to wire the antenna cable, see "Installation and Replacement of Antenna Unit", included with the antenna unit.



## 1. MOUNTING THE UNIT

### 1.2 Terminal Unit


Select the following place to install the terminal unit.

- The temperature and humidity should be moderate and stable.
- For maintenance and checking purposes, leave sufficient space at the sides and rear of the unit and leave slack in cables.

#### Mounting

##### Tabletop mounting

1. Fix the hanger on a table with four tapping screws (5x20, supplied).

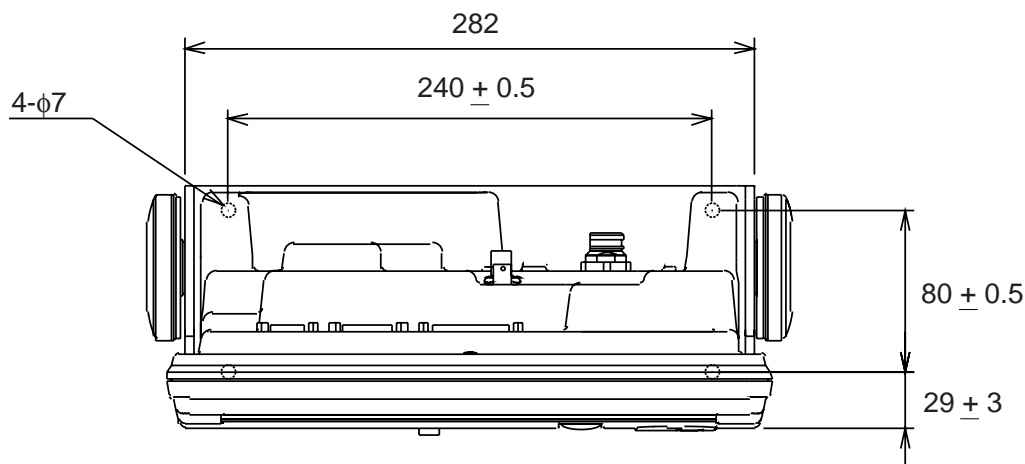


*Terminal unit, tabletop mounting*

2. Screw knobs and washers to terminal unit loosely.
3. Set the terminal unit to the hanger and tighten knobs.

##### Flush mounting


Use local supplied pan head screws (M4x20) when the thickness of the bulkhead is from 11 to 14 mm. For bulkhead which exceeds 14 mm in thickness the length of the pan head screws should be bulkhead thickness  $A + 7.8 \pm 2$  mm. Also the length of B should be max. 8 mm ( $B \leq 8$  mm).

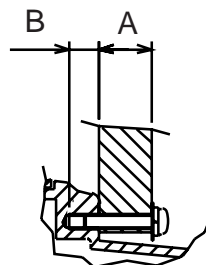

*Bulkhead, sectional view*

1. Prepare a cutout in the mounting location whose dimensions are as shown on next page.
2. Fix the display unit by six pan head screws M4x20, inserting from the inside of the bulkhead. Refer to the outline drawing at the end of this manual.



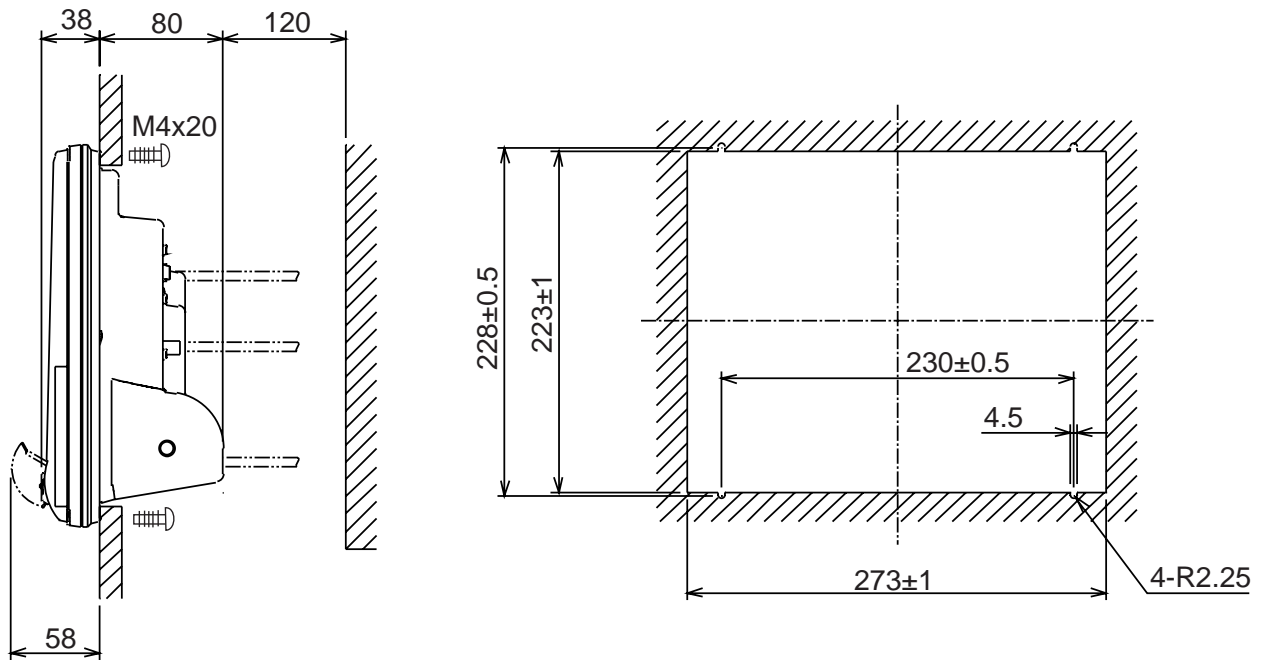


*Dimensions for flush mounting*

## **Keyboard**

1. Attach the function key label (<sup>INM-C 15</sup><sub>12</sub>) to the location shown below.

Function key label (supplied)

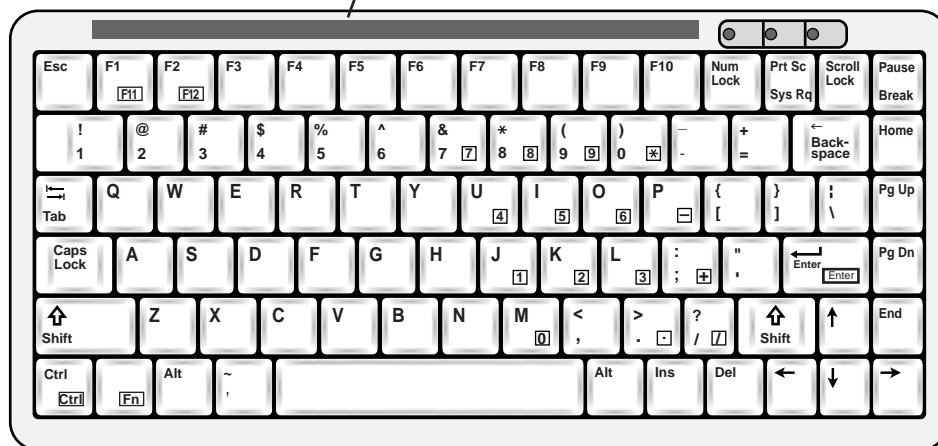


2. Attach four fasteners (small, supplied) to the bottom of the keyboard.
3. Attach four fasteners (large, supplied) to the small fasteners attached in step 3.
4. Peel the paper from four fasteners.
5. Fix the keyboard to the mounting place.




## 1. MOUNTING THE UNIT

### 1.3 Distress Alert/Received Call Unit IC-305/ Alarm Unit IC-306

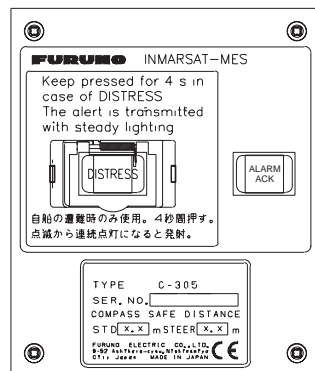

Distress alert/received call unit IC-305


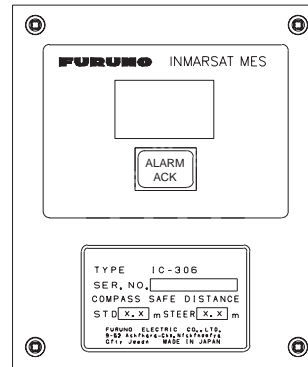


Alarm unit IC-306

#### Bulkhead mounting


1. Remove four screws from the unit to separate the bottom chassis from the top cover.
2. Fix the bottom chassis to the mounting location with four tapping screws (supplied).
3. Cable can be entered from bottom or rear panel. Select suitable entrance. For rear panel entrance, change the clamp orientation as follows.
  - a) Unfasten two screws to remove the cable clamp.
  - b) Turn the clamp 90 degrees.
  - c) Refasten two screws removed at step a) to fix the clamp.

Unfasten these screws.

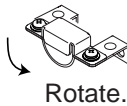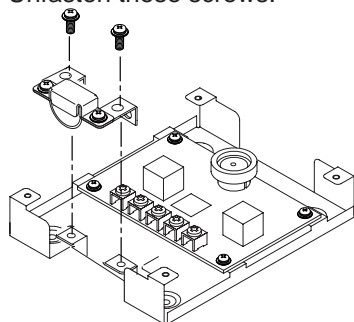

Rotate.

Refasten screws.

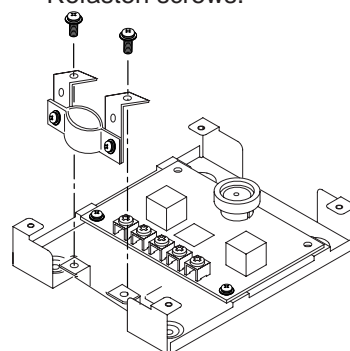

#### Cable clamp, rotating

4. Run the interconnection cable thru a cable entrance and connect it to terminal board.

#### Flush mounting

The optional flush mounting kit OP16-27 (Code No. 004-448-000) is required.

Name	Type	Code No.	Qty	Remarks
Fixture	16-018-4201-1	100-317-841	1	
Pan head screw	M3x6	000-800-362	4	
Self-tapping screw	4x16	000-162-605-10	4	

1. Cut out the mounting position referring to the outline drawings at the back of this manual.
2. Fix the unit to the fixture with four pan head screws (supplied as the option kit).
3. Fasten four tapping screws (ø5, supplied as the option kit) to mount the fixture to the mounting position.




## 1.4 Printer PP-510 (option)/ EGC Printer PP-505 (option)

### PP-510 (option)

Lay the printer on a table and fix it with printer fixtures 1 and 2.

Attach labels appropriately; right side of printer for the compass safety distance label and front of printer for INMARSAT C label.

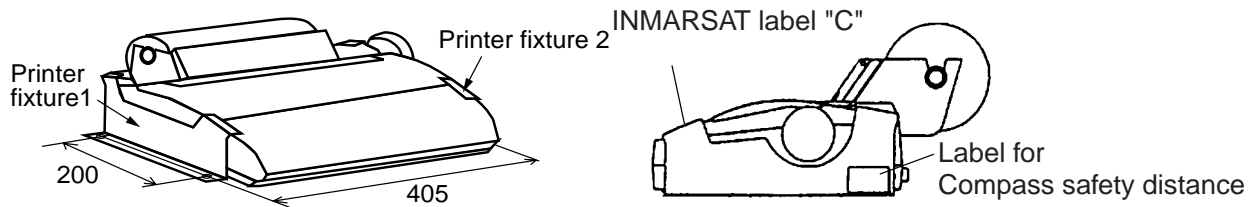


*Printer PP-510*

### PP-505 (option)

1. Fix the hanger on a table with four tapping screws.
2. Screw knobs into printer.
3. Set printer to hanger and tighten knobs.

## 1.5 AC/DC Power Supply Unit PR-240 (option)

Fix the unit on a table with four tapping screws.

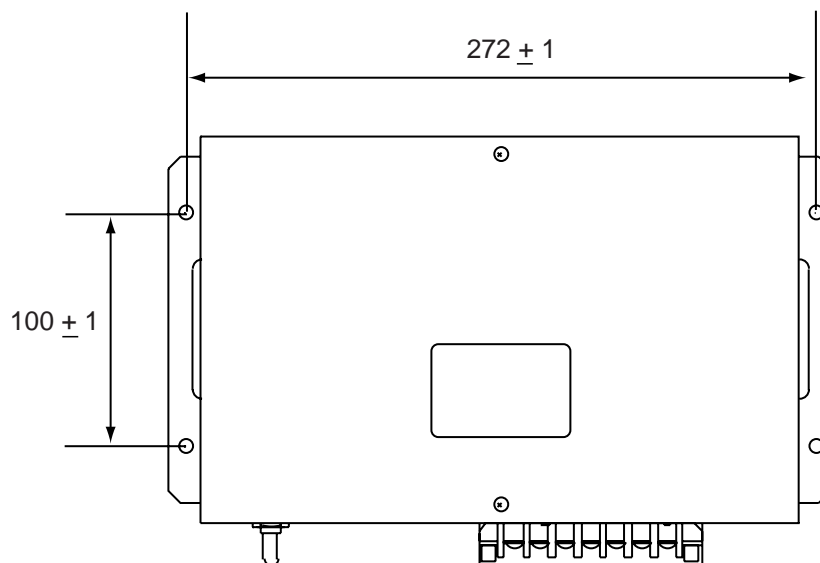


*AC/DC power supply unit, dimensions*



## 1.6 Junction Box IC-315

The junction box IC-315 is connected to the terminal unit by using the cable assy 16S0344 (2 m, attached to the junction box). Install the junction box within 2 m from the terminal unit.


1. Remove four screws from the unit to separate the bottom chassis from the top chassis.
2. Fix the bottom chassis to the mounting location with four tapping screws (4x16: supplied).
3. Connect the cables appropriately referring to Chapter 2.

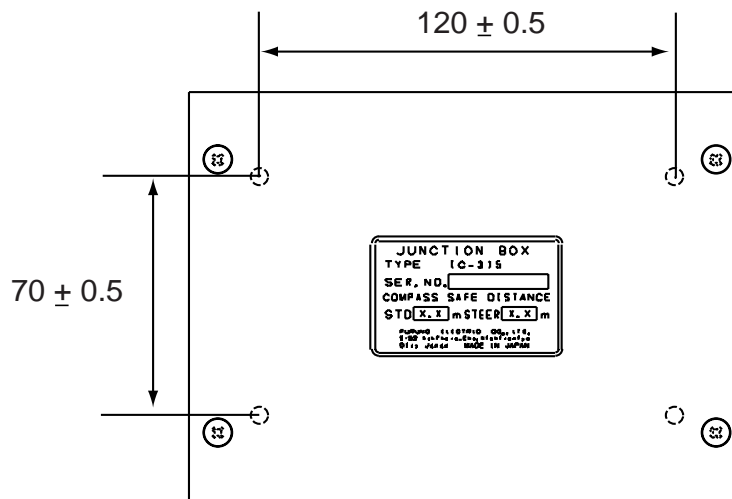

*Junction box IC-315, dimensions*



## 2. WIRING

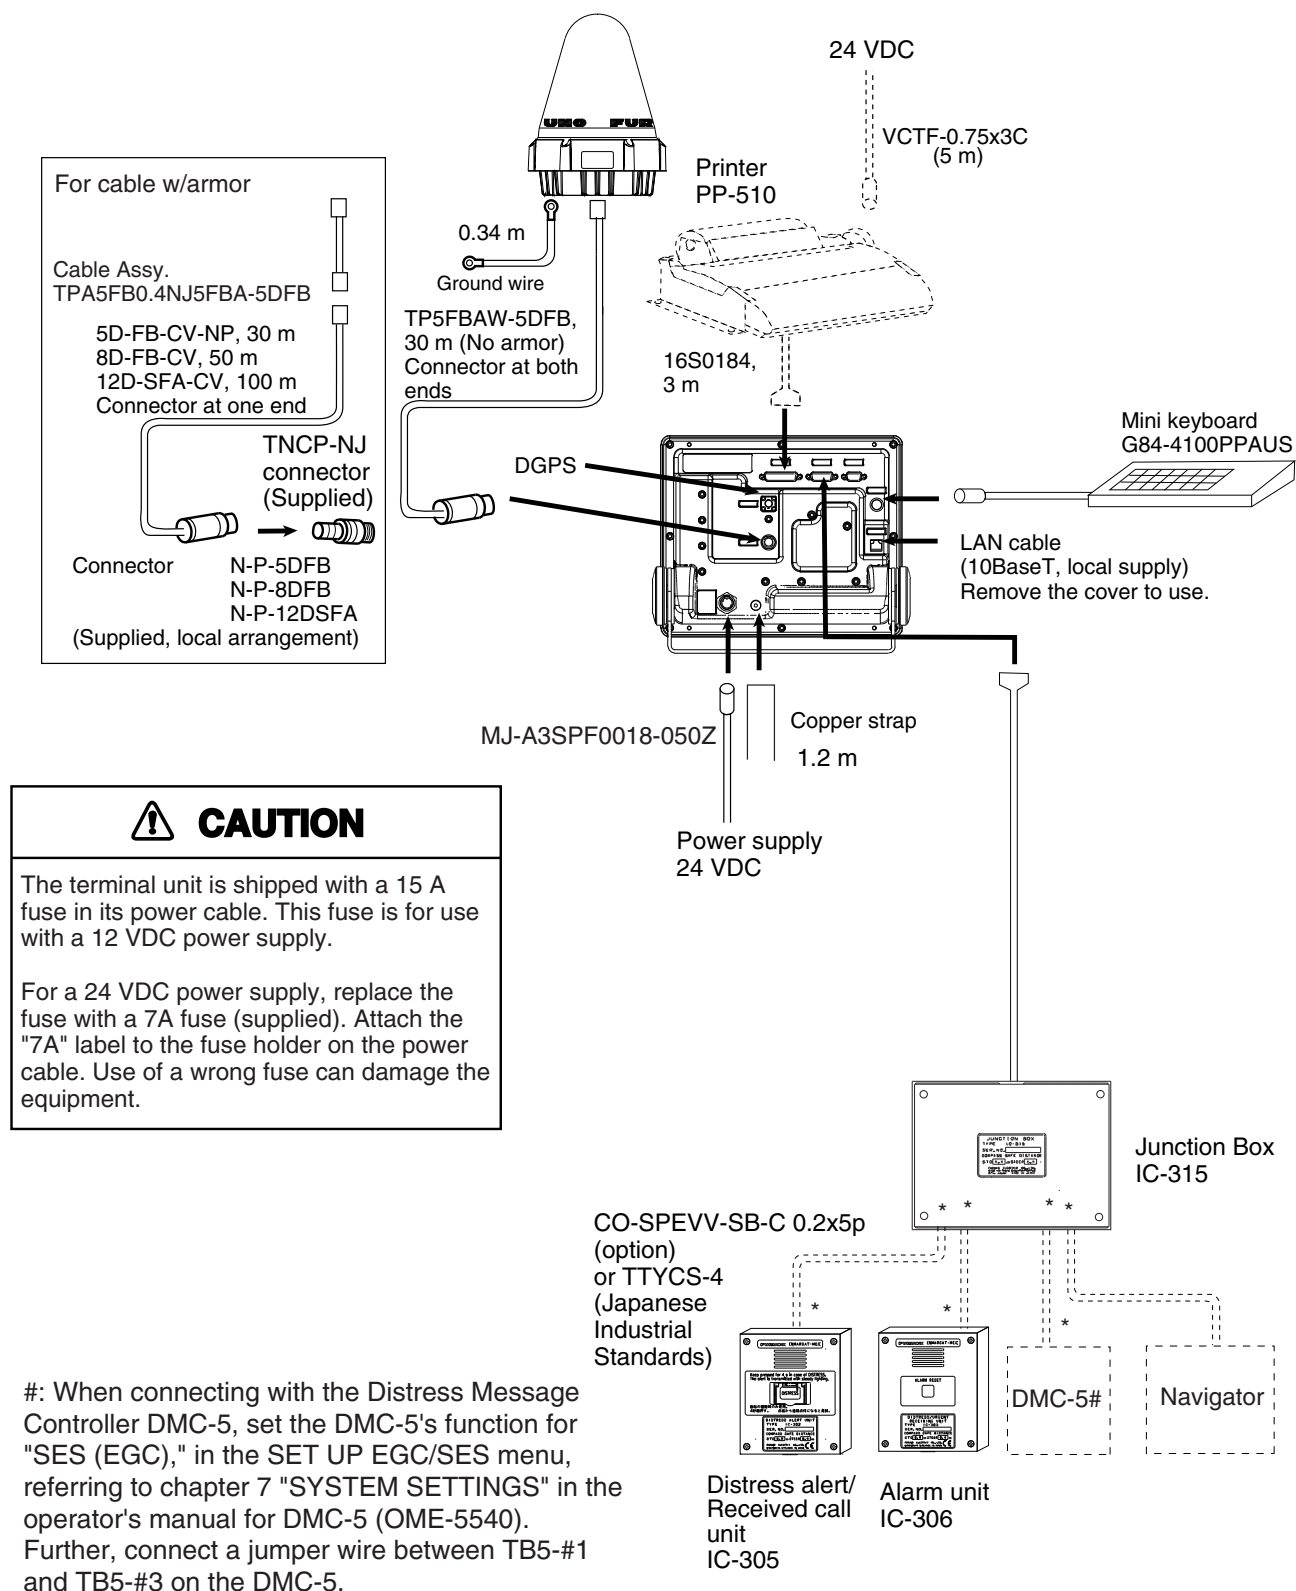


Wiring of FELCOM 15




## 2.1 Antenna Cable Connector at the Terminal Unit

### 5D-FB-CV-NP (30 m)

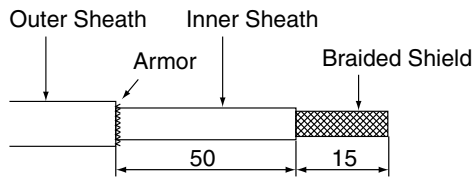


Remove the outer sheath, armor and inner sheath by the dimensions shown.

Cover with heat-shrink tubing and heat.

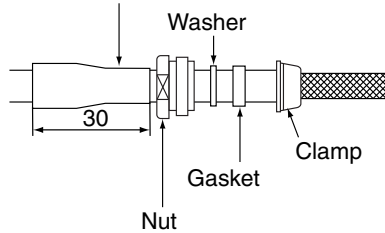

Set the nut, washer, gasket, clamp onto cable as shown.


- Be careful not to damage the braided shield.

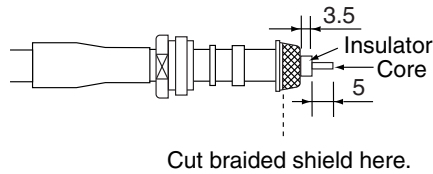

Fold back the braided shield onto the clamp and trim the shield as shown.

Make the length of insulator 3.5 mm and the length of the core 5 mm.

- Be careful not to damage the core.

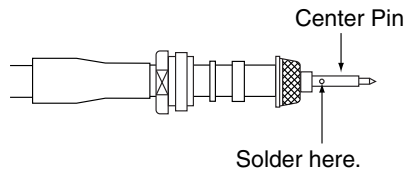


Set the center pin to the core and solder the pin from the hole in the pin.

(Pull the pin with approx. 1 kg of force to check strength of solder joint.)


- Be sure the solder is flush with surface of pin.

- Be sure there is no gap between center pin and insulator. Do not push the center pin into the insulator.

- Do the soldering as quickly as possible so as not to deform the insulator.

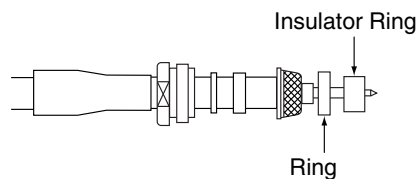

Set the ring and insulator ring onto the cable.

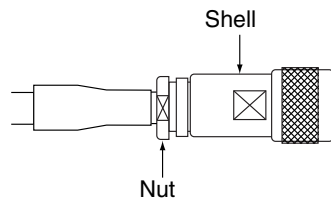


Set the shell to the cable then turn the nut to tighten. (Do not tighten by turning shell.)

- Use a wrench or the like to tighten the nut securely.


*How to fabricate antenna cable 5D-FB-CV-NP*





**8D-FB-CV (50 m)**

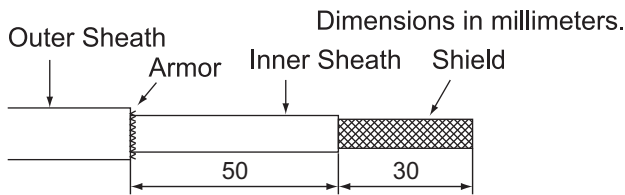


Remove outer sheath and armor by the dimensions shown left.  
Expose inner sheath and shield by the dimensions shown left.

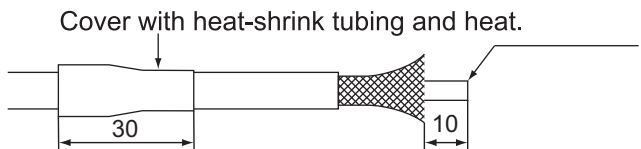



Remove insulator and core by 10 mm.

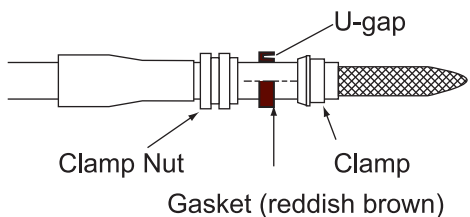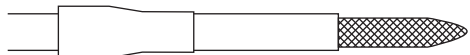



Slip on clamp nut, gasket and clamp as shown left.

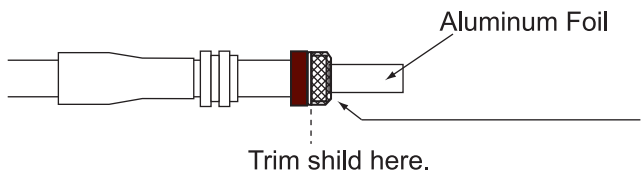

Fold back shield over clamp and trim.

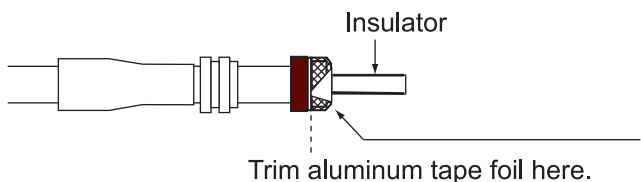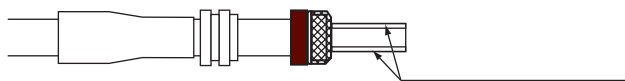

Fold back aluminum tape foil onto shield and trim.

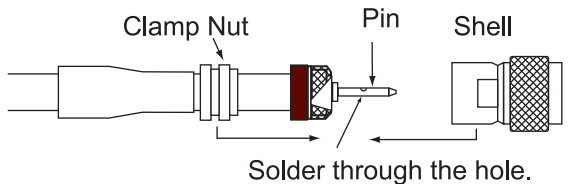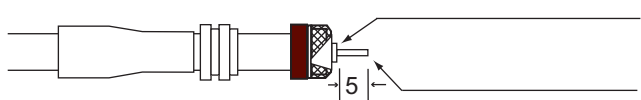


Slip the pin onto the conductor. Solder them together through the hole on the pin.

Insert the pin into the shell. Screw the clamp nut into the shell.  
(Tighten by turning the clamp nut. Do not tighten by turning the shell)

*How to fabricate antenna cable 8D-FB-CV*



**8D-SFA-CV (50 m)**

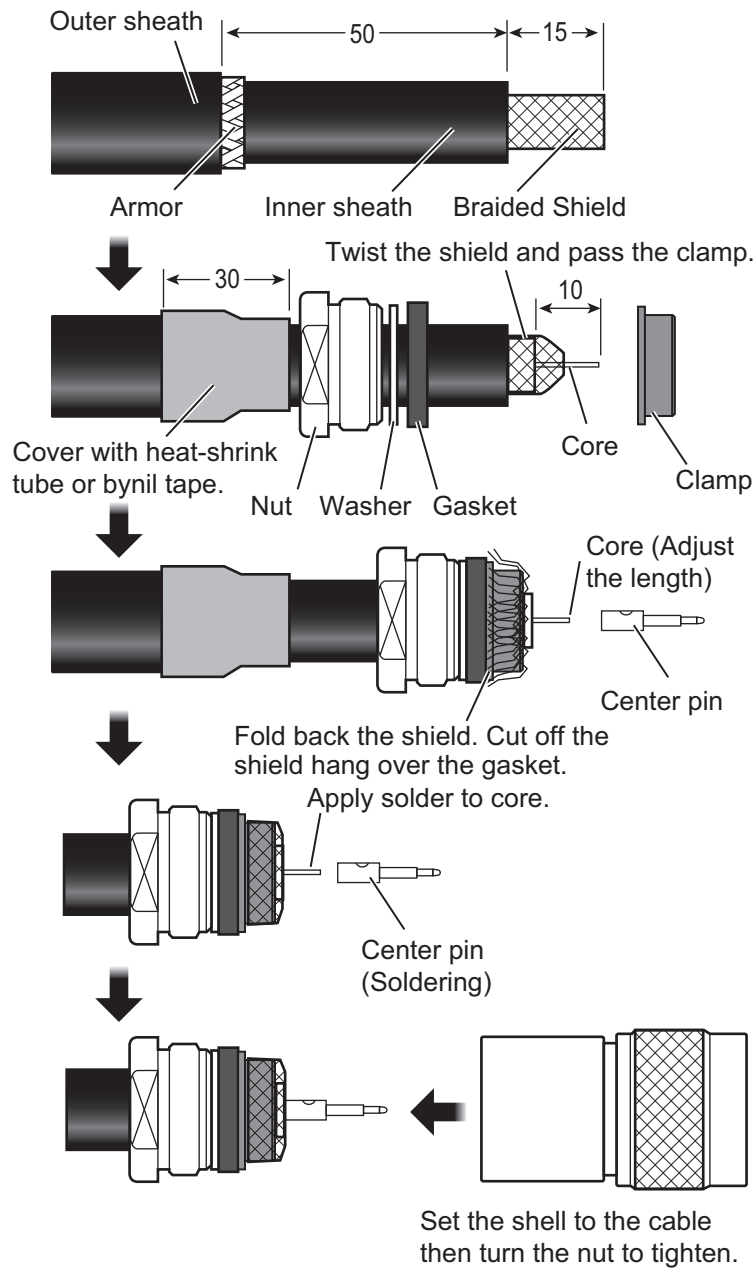


*How to fabricate antenna cable 8D-SFA-CV*




**12D-SFA-CV (100 m)**


Dimensions in millimeters

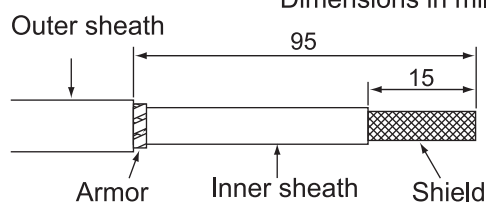

Remove outer sheath and armor by the dimensions shown left.  
Remove inner sheath and expose shield by the dimensions shown left.

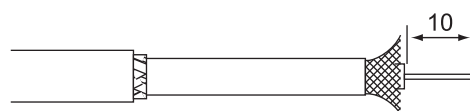


Remove the insulator beneath shield by 10 mm and expose the core.

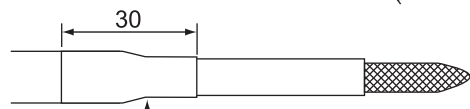


Twist shield end.


Heat shrinkable tube or vinyl tape.

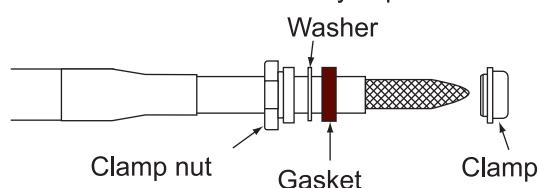


Slip on clamp nut, washer, gasket and clamp as shown left.

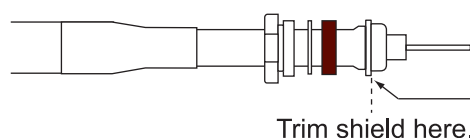


Fold back shield over clamp and trim.

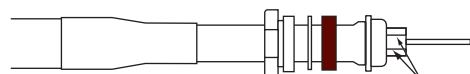

Cut aluminum tape at four places, 90° from one another.

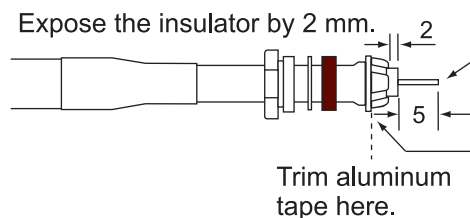

Fold back aluminum tape over clamp and trim.

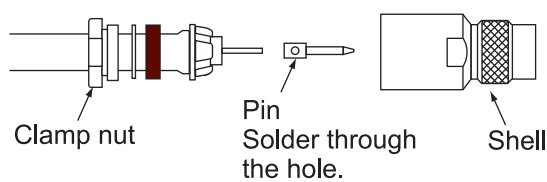


Slip the pin onto the conductor. Solder them together through the hole on the pin. Insert the pin into the shell. Screw the clamp nut into the shell. Tighten them by turning the clamp nut. (Do not tighten by turning the shell.)

*How to fabricate antenna cable 12D-SFA-CV*



## 2.2 Distress Alert/Received Call Unit IC-305


Use the installation material CP16-02201 to connect the distress alert IC-305. The optional CO-SPEVV-SB-C 0.2x5P cable or JIS cable (Japan Industrial Standards) TTYCS-4 or equivalent are available to connect with the junction box IC-305. Select the cable clamp attached depending on the diameter of cable, and fix the armor of cable with the clamp.

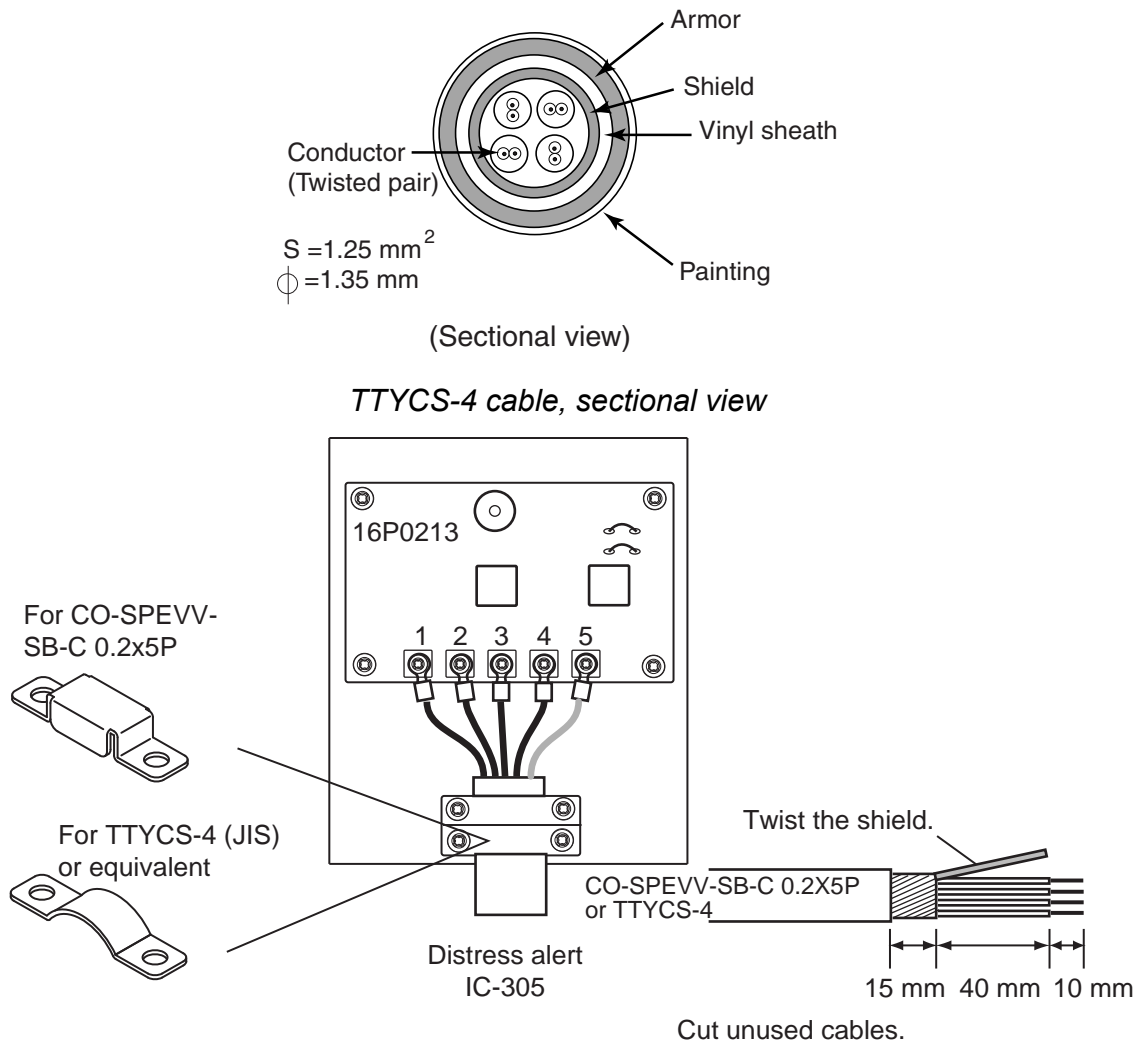



## 2.3 Alarm Unit IC-306

Maximum three alarm units can be connected to the junction box IC-315 in parallel. To distinguish the incoming indicators, set jumper wires for the second alarm unit as below. For connection, refer to the “2.2 Distress Alert/Received Call Unit IC-305.”

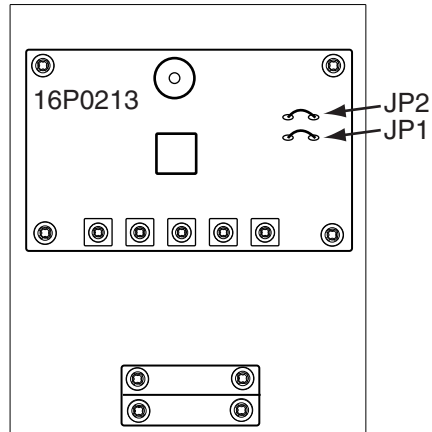

Alarm unit IC-306

	No. 1 (default setting)	No. 2	No. 3
JP1	Open	Open	Short
JP2	Short	Open	Open





## 2.4 Junction Box IC-315

Use the junction box IC-315 to connect the distress alert/received call unit IC-305 and other unit (max. four units) to the terminal unit.

Unfasten four screws to remove the box cover to connect cables.

For connection, use the optional 5 pair cable CO-SPEVV-SB-C 0.2x5P, JIS cable (Japan Industrial Standards) TTYCS-4 or equivalent. When using the CO-SPEVV-SB-C 0.2x5P cable, replace the cable clamp with the cable clamp 16-018-6008-1, supplied with IC-315.

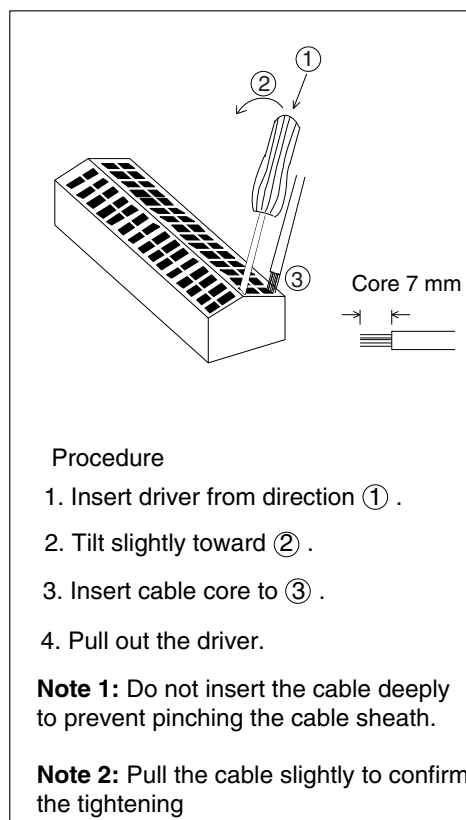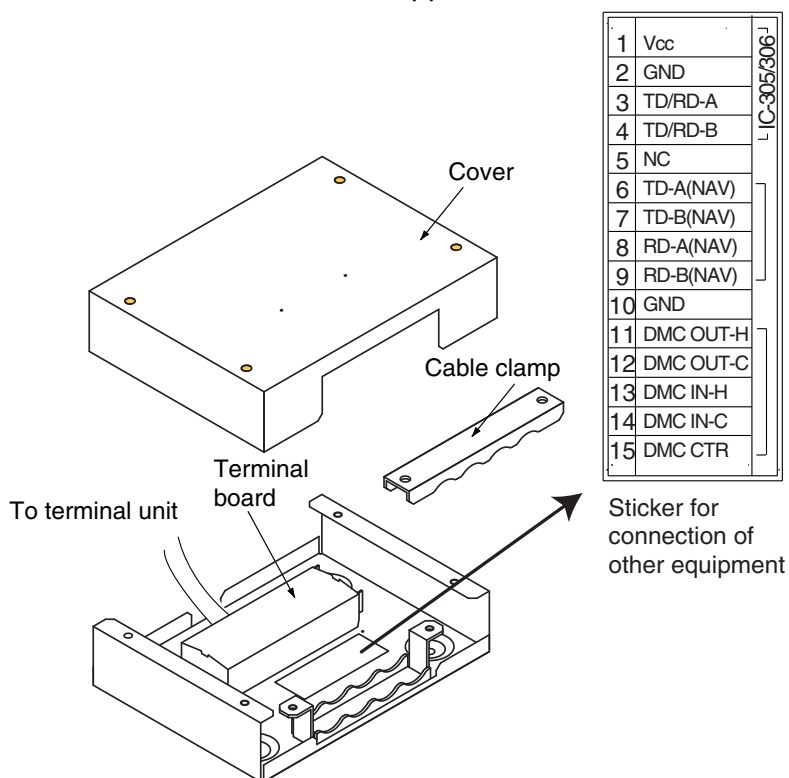

Junction Box IC-315

### Input/output sentences

The following sentences can be input/output with the navigator connected.

Input sentences	Output sentences
GGA, GLL, VTG, WPL, RMA, RMB, RMC, MTW, DBT, BWC, BWR, VDR, ZDA	GGA, ZDA, GLL, VTG, RMC, GSV




## 3. INITIAL SETTINGS

### 3.1 Setting the IMN (INMARSAT MOBILE NO.)


After the wiring, set your IMN (Inmarsat Mobile No.) as below.

1. Turn the power on.
2. Press the function key [F8] to show the Setup menu.

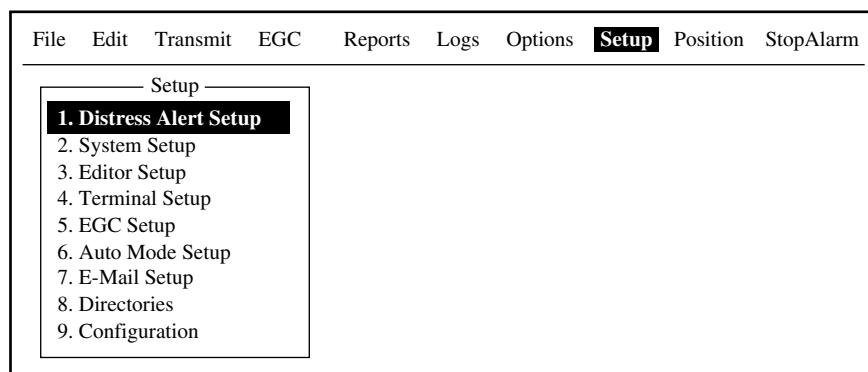

*Setup menu*

3. Press [2] key to display the System Setup menu.

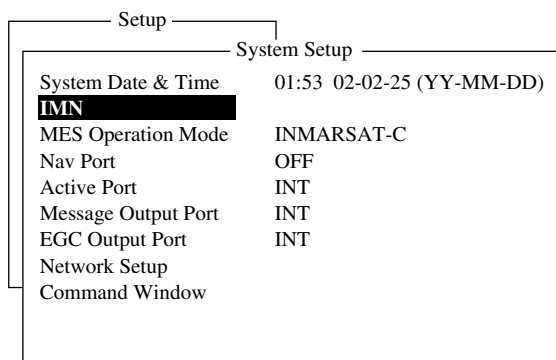

*System Setup menu*

4. Confirm that the IMN is selected, and then press the [Enter] key.  
The entering field appears.
5. Key in your IMN.
6. Press the [Enter] key.
7. Press the [Esc] key to disappear the entering field.
8. Press the [Enter] key.


To clear the IMN, press [I] [M] [N] in order while pressing the [Alt] key down at step 5.



## 3.2 Setting for External Equipment

The FELCOM 15 system had been set to accommodate to distress alert/received call unit IC-305, up to three alarm units IC-306 and distress message controller DMC-5 at factory. If less than three units are connected, change the setting to OFF as below.

1. Press the [F8] key to show the Setup menu.
2. Press the [2] key to show the System Setup menu.
3. Press the [↓] key to select "Command Window", and then press [Enter] key to show the Command Window screen.
4. Referring to the service manual for FELOM15, fill in the "Enter JOB No.:" and then press the [Enter] key.
5. As similar to step 4, fill in the "PASSWORD:", and then press the [Enter] key.  
[Main Menu] is highlighted.
6. Press the [1] and [Enter] keys in order.

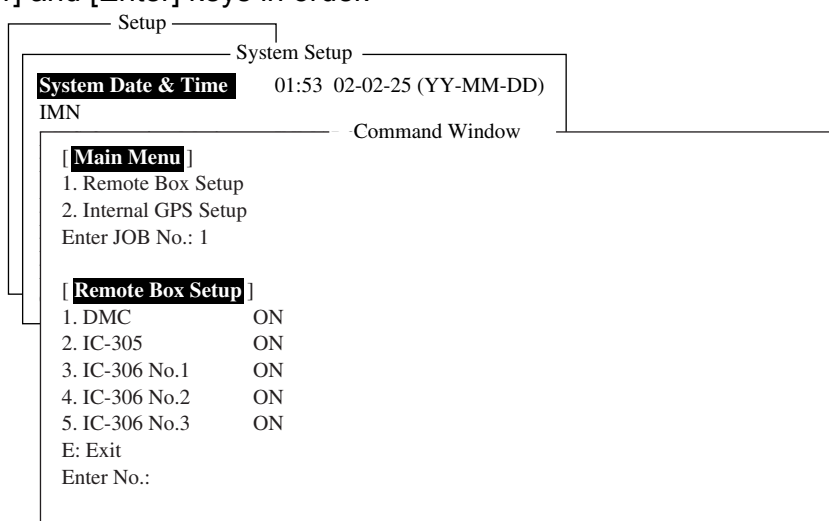

*Command Window screen*

7. Press the number key for unit not connected, and then press the [Enter] key.  
For example, press the [1] and [Enter] keys when the DMC-5 is not connected.



*Setting window for DMC-5*

8. Press the [2] key, and the [Enter] key.  
Instead of a numeric key, press the [E] key to return to Remote Box Setup menu.
9. Repeat steps 7 to 8 for other unit not connected.
10. Press the [Esc] key several times to close the menu.



## 4. INSTALLATION OF GPS BOARD (OPTION)

This chapter provides the procedure for the installation of the GPS board (in the terminal unit), which provides GPS position information.

Name: GPS board



Type: OP16-47

Code No.: 000-017-110

Name	Type	Code No.	Qty	Remarks
GPS board	16P0246	004-656-550	1	
Pan head screw	M3x8	000-163-190-10	3	

**Note:** Use anti-static gloves to treat board.

1. Unfasten 18 screws, six spacers and three nuts to remove the terminal unit cover.

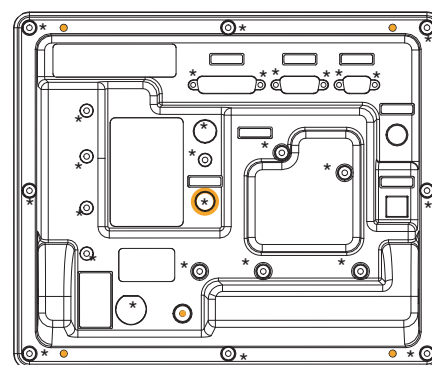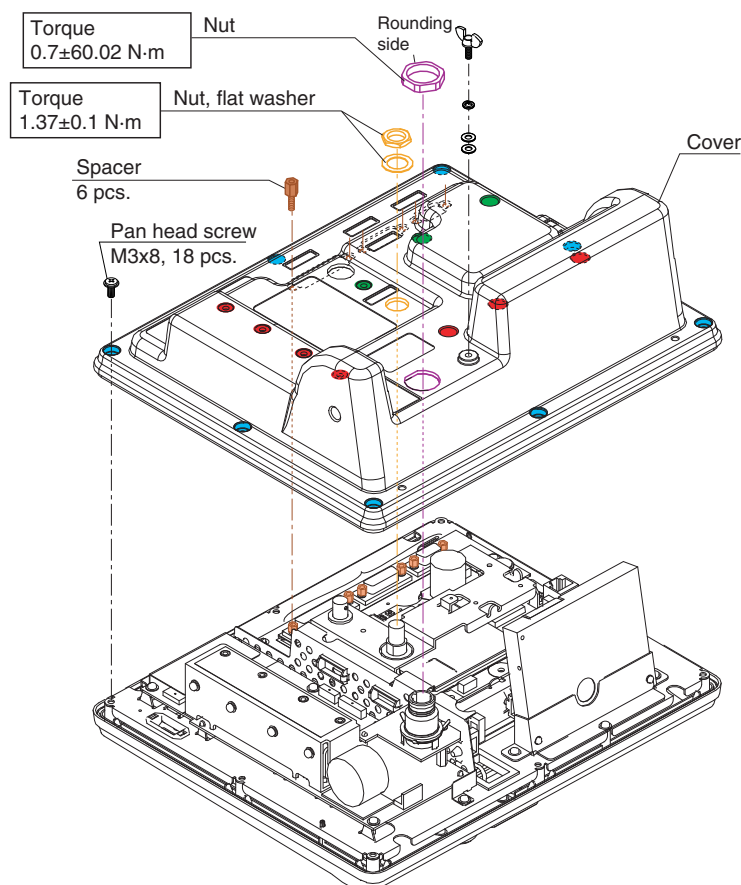


\*: Remove

*Terminal unit, cover removed*




#### 4. INSTALLATION OF GPS BOARD (OPTION)

- Unfasten four pan head screws (M3x8) to remove the RF cover (S).
- Fasten three pan head screws (M3x8, supplied with the kit) to attach the GPS board to the RF cover.
- Attach the 7P connector from the RF cover to the J1 on the GPS board.

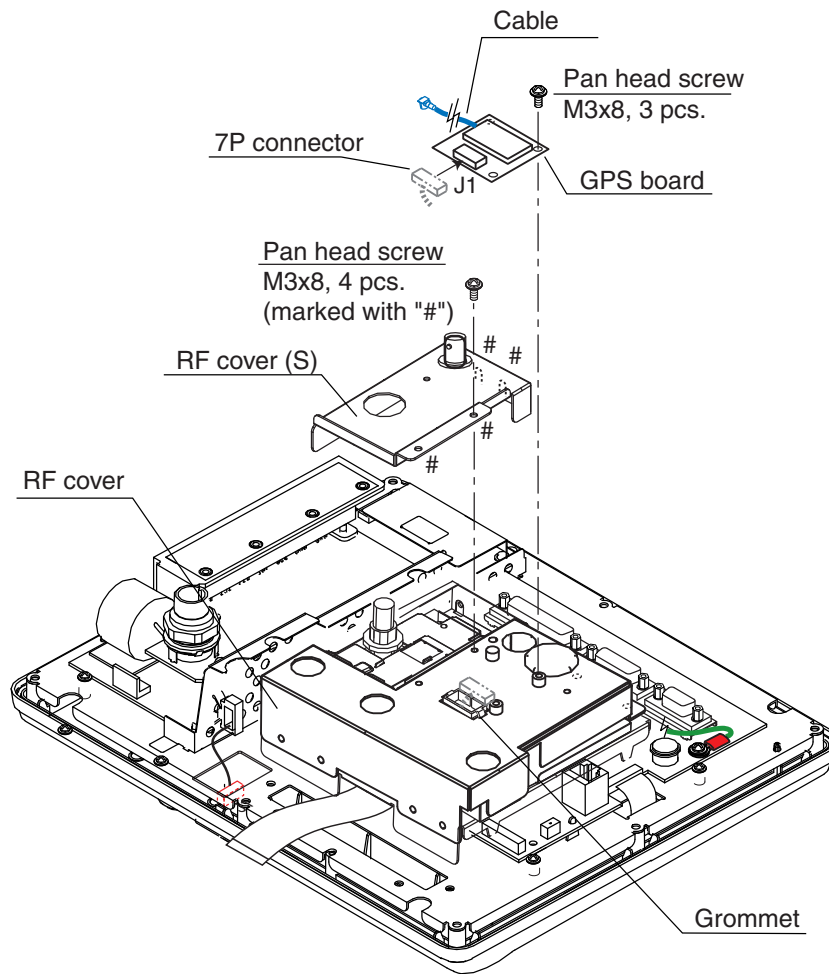


#### *Removing RF Cover (S)/Fixing GPS Board*

- Pass the cable from the GPS board through the hole on the RF cover, and then connect it to J4 on the RF CON/CPU board.

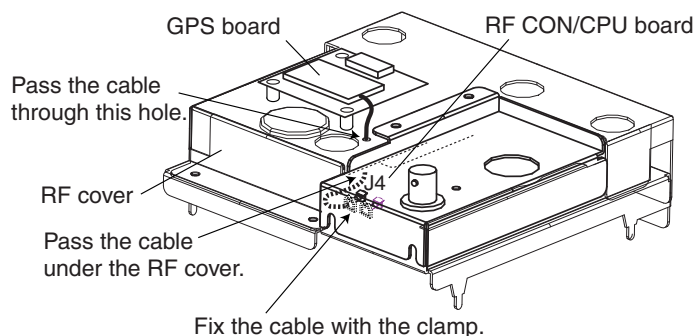

#### How to treat connectors

- Attach the connector at right angle. If not, connector pins may be bent.
- After connecting connector assemblies, the load on their cables should be as below.

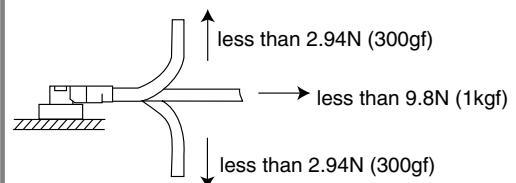


Fasten the cable at the clamp next to the J4 connector.

- Remount the RF cover (S) using four pan head screws (M3x8) unfastened at step 2.



#### 4. INSTALLATION OF GPS BOARD (OPTION)

7. Reassemble the terminal unit as below.
- a) Fasten six spacers **(a)** by hand tentatively.
  - b) Fasten eight pan head screws **(b)** tightly.
  - c) Fasten six spacers **(a)** by box driver tightly.
  - d) Fasten other screws and washers to complete.

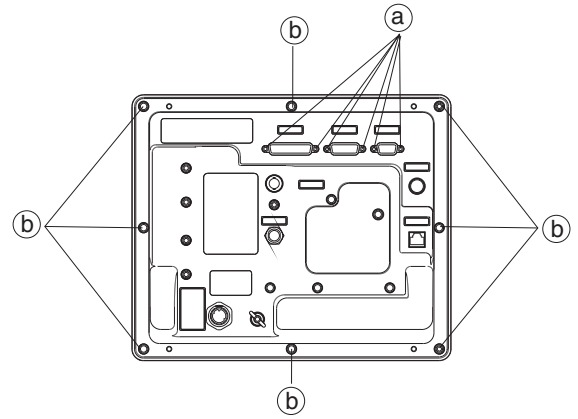



*Terminal unit, rear view*



# 5. CHANGING POWER SUPPLY SPECIFICATIONS

The AC-DC power supply PR-240 is shipped ready for connection to a 200-230 VAC ship's mains. If the ship's mains is 100 VAC-115 VAC, change the tap connection and terminal board connection as below. Attach a label supplied as accessories to the front panel according to the ship's mains.



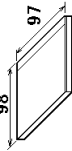
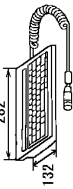


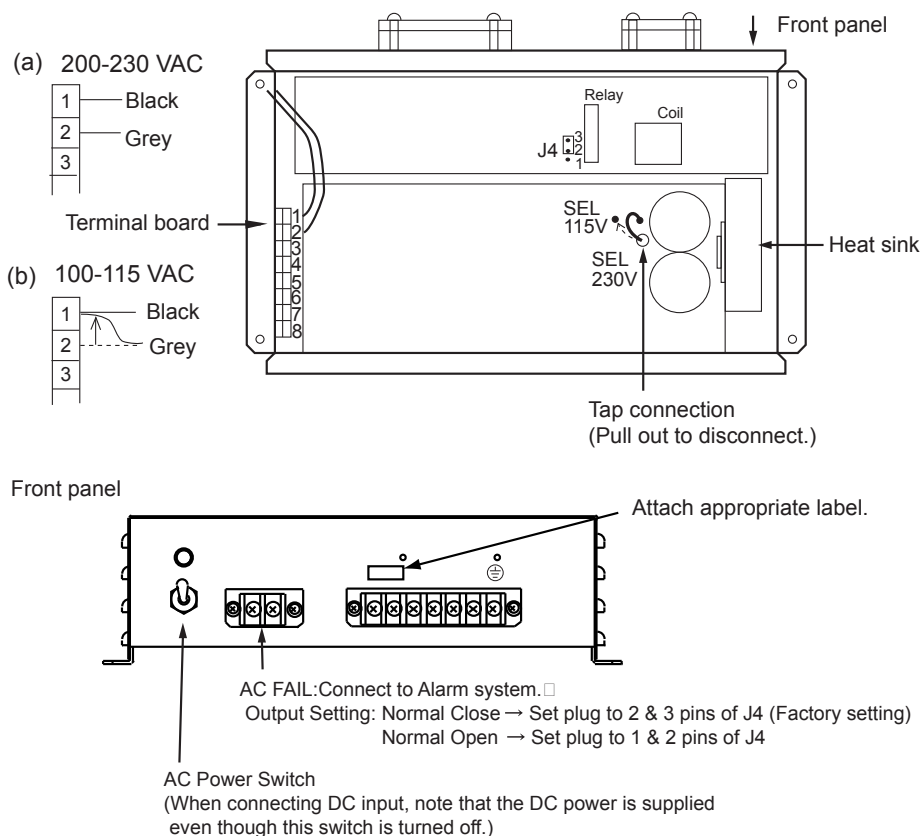
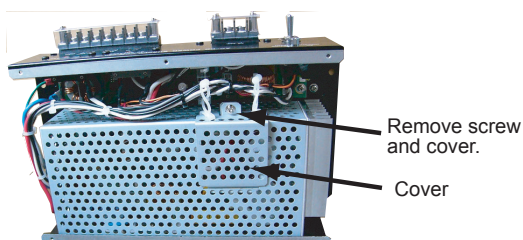
Ship's mains	Tap connection	Terminal board	Label
200-230 VAC	SEL 230 V	Below (a)	200-230 VAC 2.2-1.7 A 1 $\phi$ 50/60 Hz
100-115 VAC	SEL 115 V	Below (b)	100-115 VAC 3.2-2.6 A 1 $\phi$ 50/60 Hz



**Note:** The DC output load must be less than 8A.





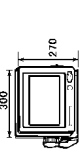


PACKING LIST IC-215-J\*/IC-215-E\*

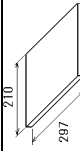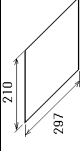NAME	OUTLINE	DESCRIPTION/CODE No.	Q'TY
ユニット UNIT			
ターミナルユニット TERMINAL UNIT		IC-215*	1
		000-043-432-00**	**
予備品 SPARE PARTS SP16-01301			
予備品 SPARE PARTS		SP16-01301	1
		004-439-370-00	
付属品 ACCESSORIES FP16-00600			
フロッピーディスク組品 FLOPPY DISK		FP16-00601	1
		004-439-400-00	
ミニキーボード* KEYBOARD		G84-4100PPAUS	1
		000-172-018-10	
工事材料 INSTALLATION MATERIALS CP16-02301			
工事材料 INSTALLATION MATERIALS		CP16-02301	1
		004-439-380-00	
工事材料 INSTALLATION MATERIALS CP16-02302			
工事材料 INSTALLATION MATERIALS		CP16-02302	1
		004-439-390-00	
図書 DOCUMENT			
アブ リケーションフォーム REGISTRATION FOR SERVICE ACTIVATION		J59-50010-* 7/14	1
		000-807-330-1*	
ヒューズ 変更のお願い NOTIFICATION DOCUMENT		G52-00206-* 7/14	1
		000-147-004-1*	

1.コード番号末尾の[\*]\*\*]は、選択品の代表型式/コードを表します。  
CODE NUMBER ENDING WITH “\*\*” INDICATES THE CODE NUMBER OF REPRESENTATIVE MATERIAL

(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY. )

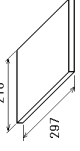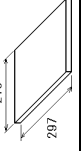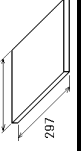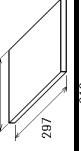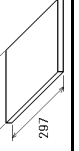NAME	OUTLINE	DESCRIPTION/CODE No.	Q'TY
機器引渡し前の注意 BEFORE DELIVERING TO OWNER		C52-00201-* 7/14	1
		000-809-353-1*	
取扱説明書 OPERATOR'S MANUAL		0M*-56350-*	1
		000-809-348-1*	**
取扱説明書(和) OPERATOR'S MANUAL (JP)		0MJ-56351-*	1
		000-150-358-1*	**
装備要領書 INSTALLATION MANUAL		1M*-56350-*	1
		000-809-350-1*	**
遭難通信要領 DISTRESS COMMUNICATION		TTC-56350-* 7/14	1
		000-809-352-1*	


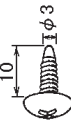



型式/コード番号が2段の場合、下段より上段に代わる過渡期品であり、どちらが入っています。なお、品質は変わりません。  
TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT. QUALITY IS THE SAME.



PACKING LIST

IC-305

16AK-X-9855 -3 1/1  
A-2

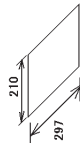N A M E	U N I T	O U T L I N E	D E S C R I P T I O N / C O D E	Q T Y
ユニット				
通報警報器 DISTRESS ALERT UNIT			IC-305	1
			000-043-427-00	**
			CP16-02201	
工事材料		INSTALLATION MATERIALS		
+15x3x16C'ネジ' 1ヶ			3X10 SUS304	4
SELF-TAPPING SCREW			000-162-604-10	
圧着端子			FV1.25-3(LF)	4
CRIMP-ON LUG			000-166-756-10	
圧着端子			FV2-3	1
CRIMP-ON LUG			000-157-246-10	
図書		DOCUMENT		
IC-305/307引き渡し前の注意 BEFORE DELIVERING TO OWNER			C52-00202-*	1
			000-809-354-1*	(*)

1.(\*)の\*\*\*は、有り無しの仕様が有ります。  
AVAILABLE WITH OR WITHOUT \*\*\*\*\* UNIT.

型式/コード番号が2段の場合、下段より上段に代わる過渡期品であり、どちらが入っています。なお、品質は変わりません。  
TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT.QUALITY IS THE SAME.


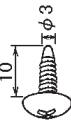


（略図の寸法は、参考値です。DIMENSIONS IN DRAWING FOR REFERENCE ONLY.）

C5635-Z04-C

PACKING LIST

IC-306

16AK-X-9856 -3 1/1  
A-3

NAME UNIT		OUTLINE	DESCRIPTION/CODE	Q'TY
ユニット				
着信指示器 ALARW UNIT			1C-306	1
			000-043-429-00	
			CP16-02201	
工事材料				
+157mm(1'6'') 4ヶ SELF-TAPPING SCREW			3X10 SUS304	4
			000-162-604-10	
圧着端子 CRIMP-ON LUG			FV1.25-3(LF)	4
			000-166-756-10	
圧着端子 CRIMP-ON LUG			FV2-3	1
			000-157-246-10	

型式/コード番号が2段の場合、下段より上段に代わる過渡期品であり、どちらが入っています。なお、品質は変わりません。  
TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT.QUALITY IS THE SAME.

（略図の寸法は、参考値です。DIMENSIONS IN DRAWING FOR REFERENCE ONLY.）

C5635-Z05-C



FURUNO

16AK-X-9404 -4

1/1





CODE NO.

TYPE

工事材料表





INSTALLATION MATERIALS

10-115

番号 NO.	名 称 NAME	略 図 OUTLINE	型名／規格 DESCRIPTIONS	数量 Q'TY	用途／備考 REMARKS
1	ケーブル組品 CABLE ASSY.	 L=100M	12D-SFA-CV *100M* CODE NO. 000-138-866-00	1	選択 TO BE SELECTED
2	アンテナケーブル組品 CABLE ASSY.	 L=50M	8D-FB-CV *50M* CODE NO. 000-168-241-10	1	選択 TO BE SELECTED
3	ケーブル組品 CABLE ASSY.	 L=30M	TP5FBAN-5DFB 30M CODE NO. 000-169-523-11	1	選択 TO BE SELECTED
4	同軸ケーブル ARMoured COAXIAL CABLE	 L=30M	5D-FB-CV-HP *30M* CODE NO. 000-173-676-10	1	選択 TO BE SELECTED

型式/コード番号が2段の場合、下段より上段に代わる選定部品であり、どちらかが入っています。なお、品質は変わりません。  
TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT.  
QUALITY IS THE SAME.  
(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

FURUNO

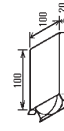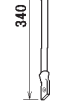CODE NO.		004-439-060-00		16AK-X-9401 -11	
TYPE		CP16-02101		1/1	
工事材料表					
INSTALLATION MATERIALS					
番号 NO.	名 称 NAME	略 図 OUTLINE	型名／規格 DESCRIPTIONS	数量 Q'TY	用途／備考 REMARKS
1	ケーブル保護材 CABLE PROTECTION MATERIAL		16-018-1251-1 R0HS CODE NO. 100-238-111-10	1	
2	ケーブルタイ CABLE TIE		CY-4508 CODE NO. 000-173-169-10	5	
3	フチ合ヒートン SELF-BONDING TAPE		NO. 15 CODE NO. 000-174-646-10	1	
4	ケーブル組品 CABLE ASSY.		RW-4747 RW-4747-1 CODE NO. 000-566-000-12 000-566-000-01	1	








型式/コード番号が2段の場合、下段より上段に代わる選定部品であり、どちらかが入っています。なお、品質は変わりません。  
TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT.  
QUALITY IS THE SAME.  
(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)














CODE NO.	001-101-960-00	16AK-X-9423 -3
TYPE	CP16-05001	1/1

工事材料表		10-115/116	
番号 NO.	名 称 NAME	略 図 OUTLINE	数量 Q T Y
1	ケーブル保護材 CABLE PROTECTION MATERIAL		1
2	ケーブルタイ CABLE TIE		5
3	ケーブル束バンド SELF-BONDING TAPE		1
4	コネクタ (N) CONNECTOR		1
5	ケーブル組品 CABLE ASSY.		1
6	コネクタ (TNC-N) COAXIAL CONNECTOR ADAPTOR		1
7	ケーブル組品 CABLE ASSEMBLY		1



型式/コード番号が2段の場合、下段より上段に代わる標準部品であり、どちらが入っています。なお、品質は変わりません。  
TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT. QUALITY IS THE SAME.  
(縮図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

CODE NO.	004-441-780-00	16AC-X-9420 -7
TYPE	CP16-01200	1/1

工事材料表			
番号 NO.	名 称 NAME	略 図 OUTLINE	数量 Q T Y
1	パリアー (INMAR) LABEL (INMAR)		1
2	パリアー STICKER		1
3	ケーブル組品 POWER CABLE ASSY.		1
4	ケーブル組品 CABLE ASSEMBLY		1
5	セルフタッピングネジ 1ヶ SELF-TAPPING SCREW		4
6	プリンタ取付板 (1) 組品 PRINTER FIXTURE		1
7	プリンタ取付板 (2) 組品 PRINTER FIXTURE		1

型式/コード番号が2段の場合、下段より上段に代わる標準部品であり、どちらが入っています。なお、品質は変わりません。  
TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT. QUALITY IS THE SAME.  
(縮図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

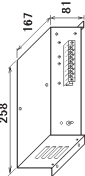



N A M E		O U T L I N E	DESCRIPTION/CODE No.		Q ' T Y
ユニット					
AC-DC電源					1
POWER SUPPLY UNIT			PR-240		
			000-013-636-00		
工事材料			INSTALLATION MATERIALS		
工事材料					1
INSTALLATION MATERIALS			CP24-00151		
			005-931-190-00		

コード番号末尾の[\*\*]は、選択品の代表コードを表します。  
CODE NUMBER ENDING WITH "\*\*" INDICATES THE CODE NUMBER OF REPRESENTATIVE MATERIAL

型式/コード番号が2段の場合、下段より上段に代わる過渡期品であり、どちらが入っています。なお、品質は変わりません。  
TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT. QUALITY IS THE SAME.

(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

FURUNO





CODE NO.		004-438-930-00		16AK-X-9407 -3	
TYPE		CP16-02501		1/1	
工事材料表					
INSTALLATION MATERIALS					
番号 NO.	名称 NAME	略 図 OUTLINE	型名／規格 DESCRIPTIONS	数量 Q'TY	用途／備考 REMARKS
1	ケーブル用伸え (1-3) CABLE CLAMP		16-018-6008-1 ROHS	1	
			CODE NO. 100-301-101-10 100-301-101-00		
2	+553タッピングネジ 1/2x SELF-TAPPING SCREW		4X16 SUS304	4	
			CODE NO. 000-162-605-10		

型式/コード番号が2段の場合、下段より上段に代わる過渡期品であり、どちらが入っています。なお、品質は変わりません。  
TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT. QUALITY IS THE SAME.






(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

FURUNO ELECTRIC CO., LTD.



改造キット MODIFICATION KIT.			CODE NO.	004-439-840-00	16AK-X-9412 -3	1/1
			TYPE	OP16-26		
番号 NO.	名 称 NAME	略 図 OUTLINE	型名／規格 DESCRIPTIONS	数量 Q'TY	用途／備考 REMARKS	
1	中国ROHSマフ CHINA ROHS SEAL		05-898-0362-1	1		
			CODE NO. 100-339-211-10			
2	パナマフ (ALC) LABEL		16-013-1062-0	4		
			CODE NO. 100-281-730-10			
3	型式銘板 (ALC) NAME PLATE (ALC)		16-018-3821-2	1		
			CODE NO. 100-308-482-10			
4	FD-ROM FLOPPY DISK ROM		16-5-0179	1		
			CODE NO. 004-439-850-00			

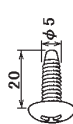型式/コード 番号が2段の場合、下段より上段に代わる通達部品であり、どちらが入っています。 なお、品質は変わりません。  
TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT. QUALITY IS THE SAME.  
(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)  
FURUNO ELECTRIC CO.,LTD.

工事材料表					IC-215		CODE NO.	004-439-380-00	16AK-X-9414 -4	1/1
INSTALLATION MATERIALS							TYPE	CP16-02301		
番号 No.	名 称 NAME	略 図 OUTLINE	型名／規格 DESCRIPTIONS	数量 Q'TY	用途／備考 REMARKS					
1	ヒューズ /フューズ FUSE LABEL		03-153-1312-0 ROHS	1						
			CODE NO. 100-292-140-10							
2	7-芯銅 COPPER STRAP		05-003-0031-0 ROHS	1						
			CODE NO. 590-300-310-10							
3	+57591C /ネジ SELF-TAPPING SCREW		5X20 SUS304	4						
			CODE NO. 000-162-608-10							
4	ヒューズ FUSE GLASS TUBE TYPE		F680 125V 7A PBF	1						
			CODE NO. 000-155-831-10							
5	ケーブル 組品/MJ CABLE ASSY.		MJ-A3SPF0018-050ZC	1						
			CODE NO. 000-154-025-10							

型式/コード 番号が2段の場合、下段より上段に代わる通達部品であり、どちらが入っています。 なお、品質は変わりません。  
TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT. QUALITY IS THE SAME.  
(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)  
FURUNO ELECTRIC CO.,LTD.







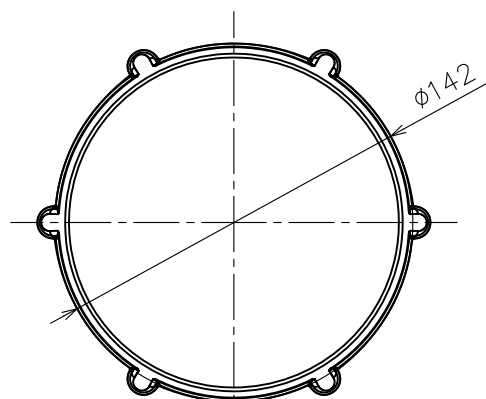




表2 工事材料

## TABLE 2 INSTALLATION MATERIAL

品番 ITEM	品名 NAME	図番 DWG. No.	摘要 REMARK
1	アンテナ取付パイプ ANTENNA MOUNTING PIPE	16-018-1301	0.3 kg APPROX.
2	ロックナット LOCK NUT	16-023-2518	
3	ナットシート NUT SHEET	16-023-2519	

表 1 TABLE 1

寸法区分 (mm) DIMENSION	公差 (mm) TOLERANCE
$L \leq 50$	$\pm 1.5$
$50 < L \leq 100$	$\pm 2.5$
$100 < L \leq 500$	$\pm 3$

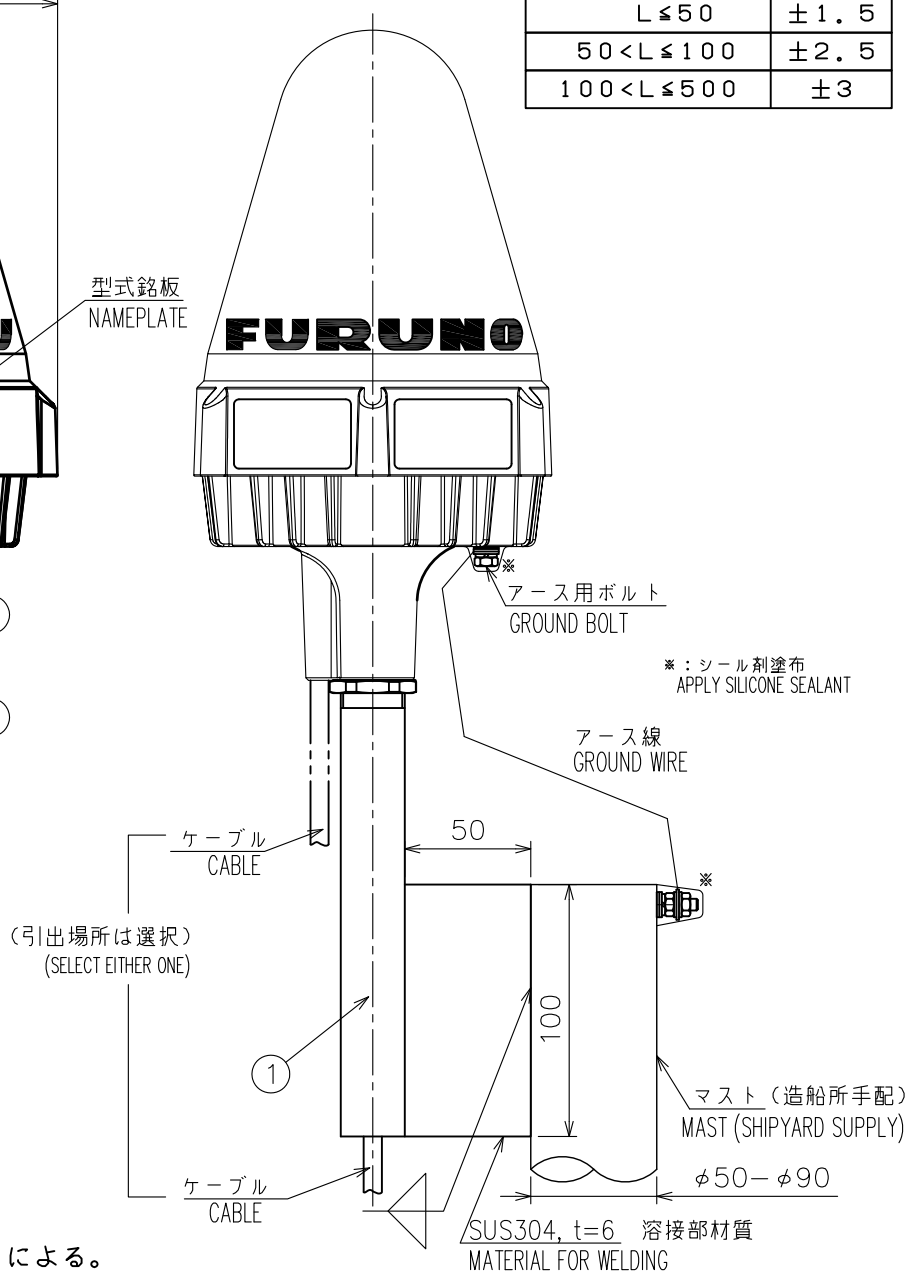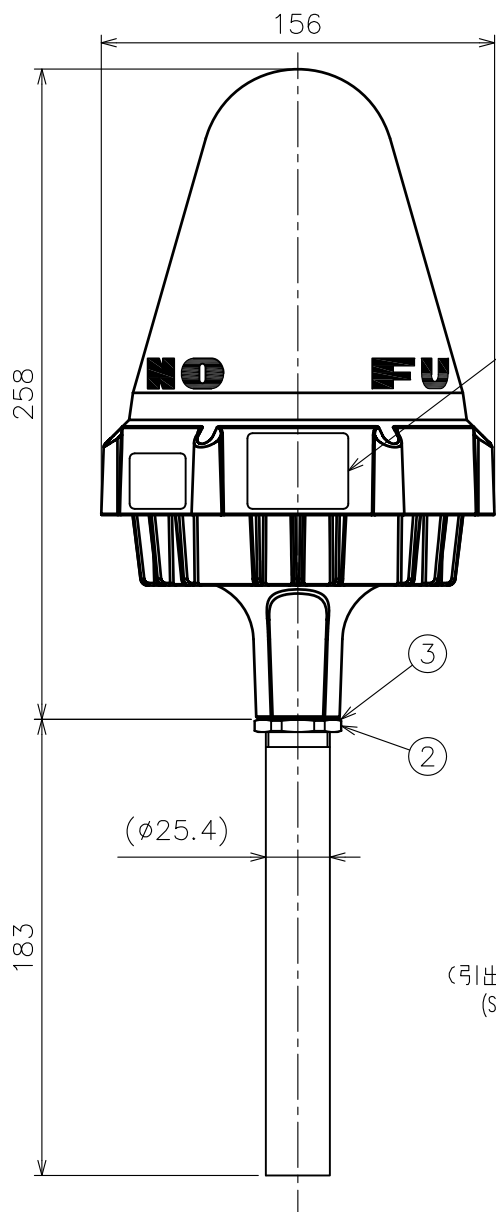

注 記 1) 指定外の寸法公差は表 1 による。





D NOTE 1. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.

DRAWN	17/May/2012 T.YAMASAKI		TITLE	IC-115/116/118/119
CHECKED	17/May/2012 H.MAKI		名称	アンテナユニット
APPROVED	17/May/2012 Y.NISHIYAMA	FELCOM 15/16/18/19		外寸図
SCALE	1/3	MASS ±10% 1.4 kg	質量はパイプ工材を含まず。 MASS W/O MOUNTING PIPE.	NAME ANTENNA UNIT
DWG. No.	C5635-G01-H	REF. No.	16-023-250G-1	OUTLINE DRAWING



表 1 TABLE 1

寸法区分 (mm) DIMENSION	公差 (mm) TOLERANCE
L ≤ 50	± 1.5
50 < L ≤ 100	± 2.5
100 < L ≤ 500	± 3

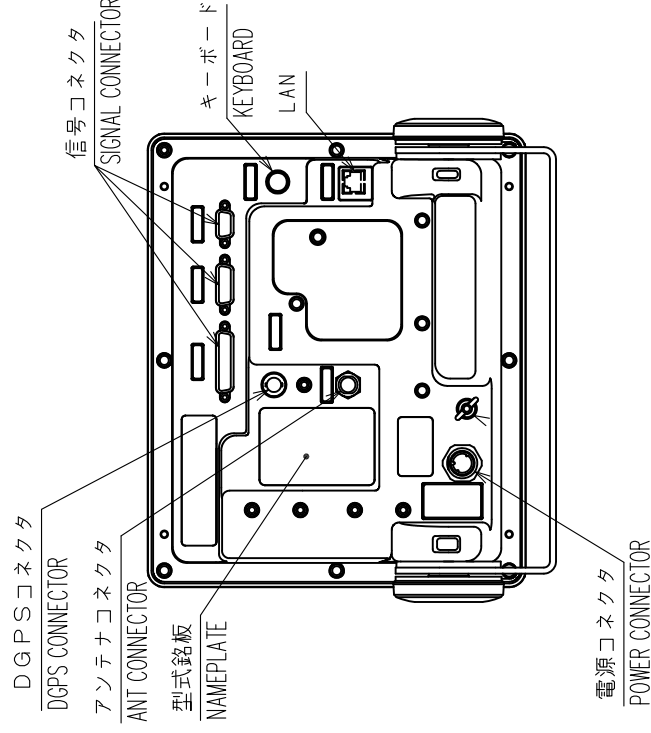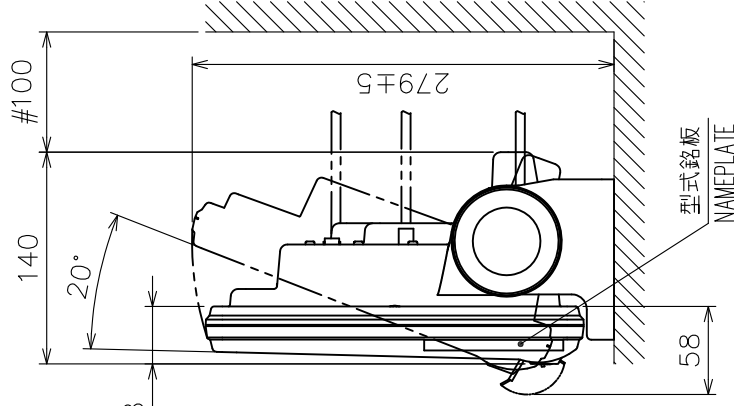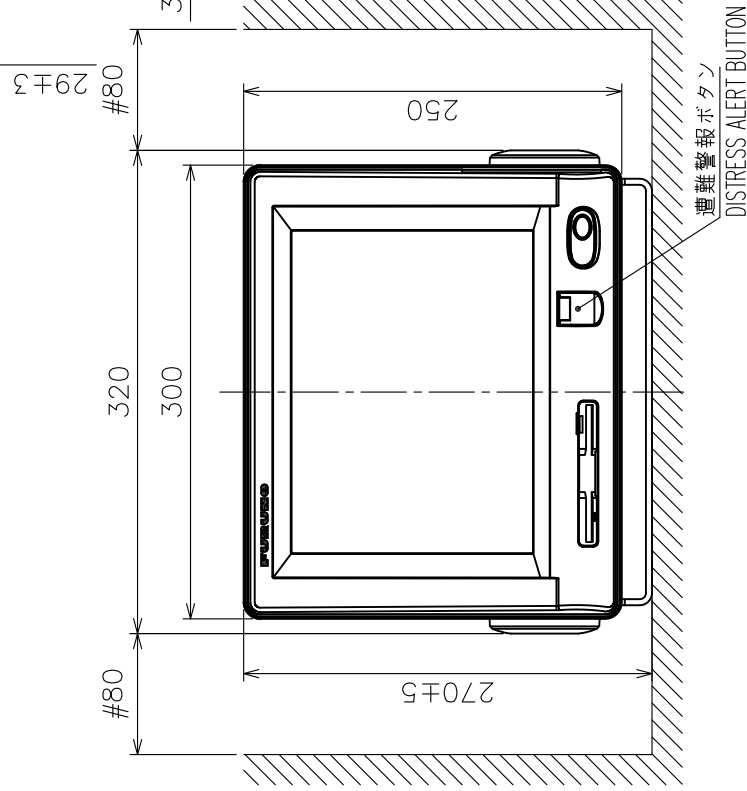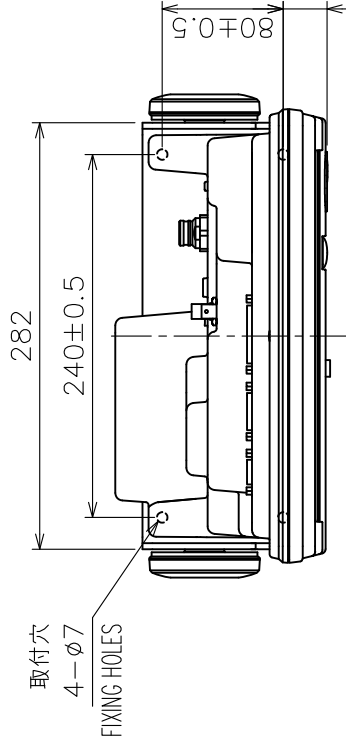


- 注 記 1) 指定外の寸法公差は表 1 による。  
 2) # 印寸法は最小サービス空間寸法とする。  
 3) 取付用ネジはトラスアップピンネジ呼び径 5 × 20 を使用のこと。
- NOTE 1. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.  
 2. #: MINIMUM SERVICE CLEARANCE.  
 3. USE TAPPING SCREWS φ5x20 FOR FIXING THE UNIT.

DRAWN	8/Jun/09	T.YAMASAKI	TITLE	IC-215
CHECKED	8/Jun/09	T.TAKENO	名称	ターミナルユニット (卓上装備)
APPROVED	18/Jun/09	R.Esumi	外図	
SCALE	1/5	MSS 4.9 ±10%	NAME	TERMINAL UNIT (TABLETOP MOUNT)
DWG. No.	C5635-G02-F	REF. No.	16-018-300G-7	OUTLINE DRAWING




表 1 TABLE 1

寸法区分 (mm) DIMENSION	公差 (mm) TOLERANCE
L ≤ 50	± 1.5
50 < L ≤ 100	± 2.5
100 < L ≤ 500	± 3

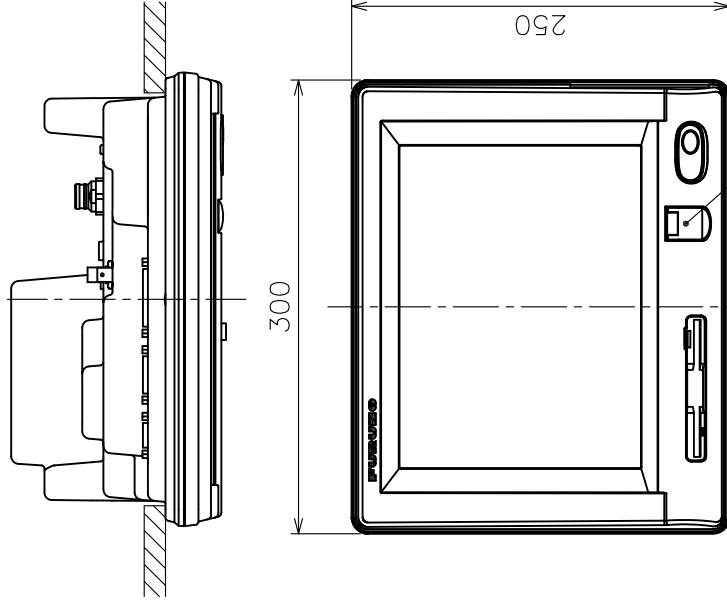


- 注 記
- 1) 指定外の寸法公差は表 1 による。
  - 2) # 印寸法は最小サージス空間寸法とする。DISTRESS ALERT BUTTON
  - 3) 取付には、セムスネジ B M4×20 を使用のこと。  
壁の厚さ (A) は  $11 \leq A \leq 14$  とする。それ以外の壁に  
装備する場合、使用するネジ長さは  $(A + 7.8) \pm 2$  とする。  
筐体にはネジ部 (B) を 8 mm 以上入れないこと。 ( $B \leq 8$ )

- NOTE
1. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.
  2. # MINIMUM SERVICE CLEARANCE.
  3. USE SEMS SCREWS M4×20 FOR FIXING THE UNIT.  
THICKNESS A:  $11 \leq A \leq 14$  OR SCREW LENGTH:  $(A + 7.8) \pm 2$ .  
DO NOT FASTEN SCREWS INTO UNIT MORE THAN 8 mm ( $B \leq 8$ ).

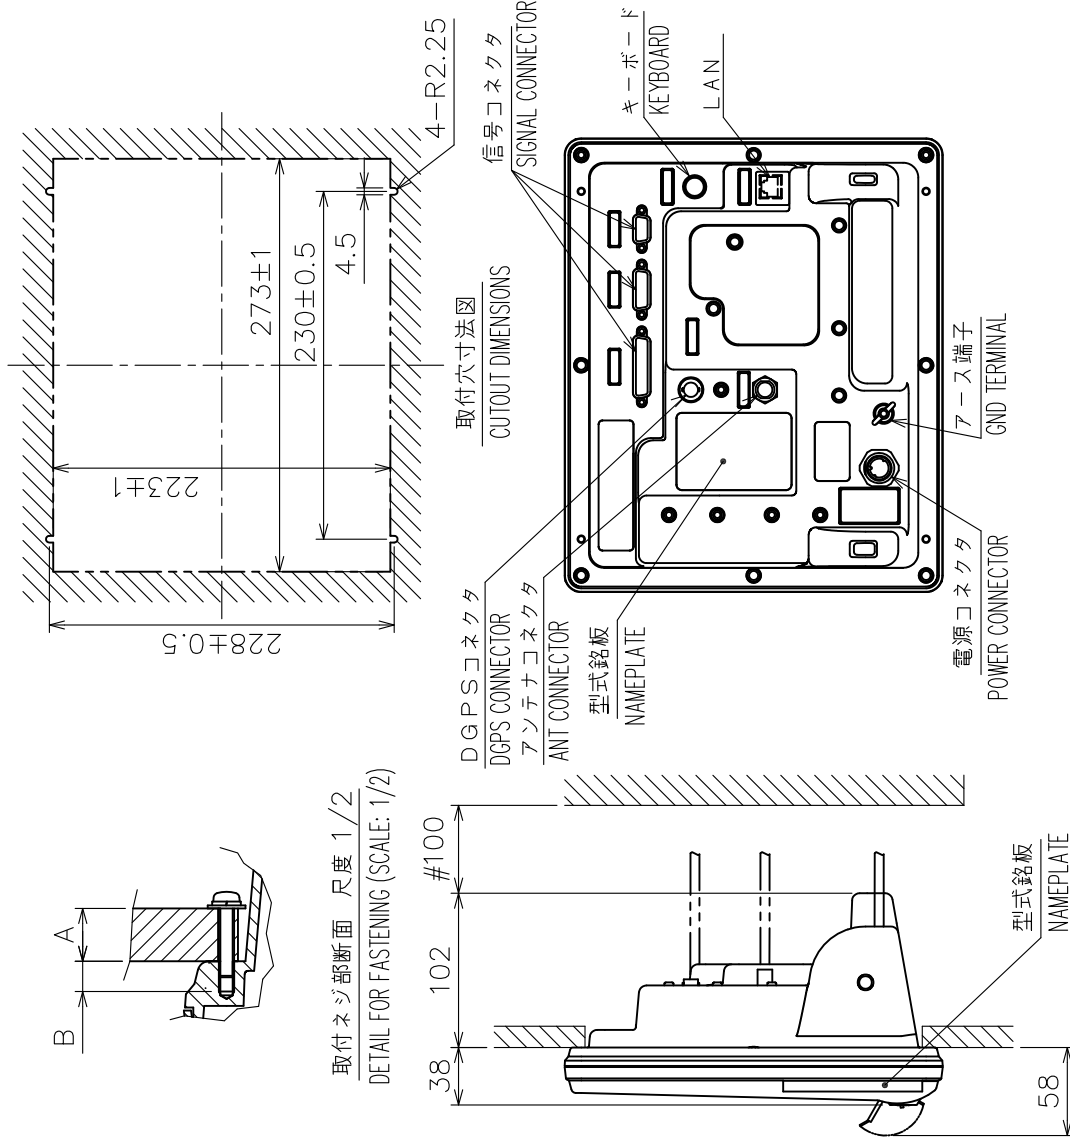

取付ネジ部断面 尺度 1/2  
DETAIL FOR FASTENING (SCALE: 1/2)

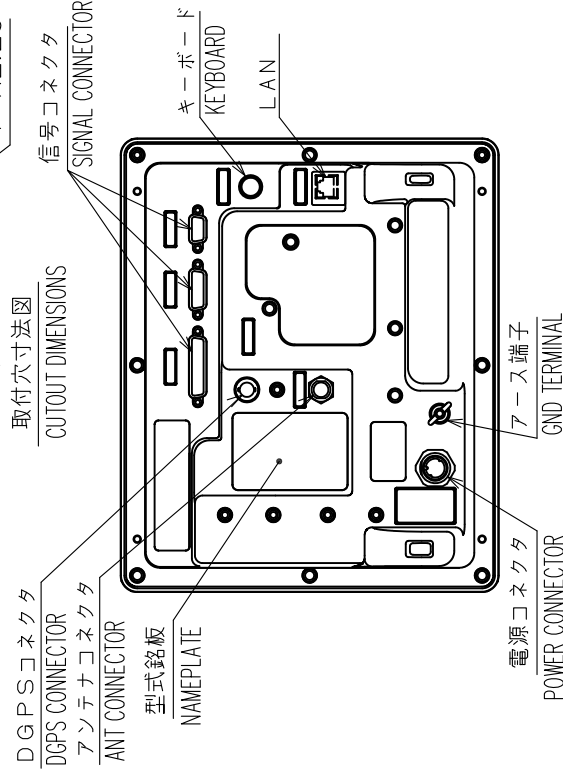

DRAWN	8/Jun/09	I. YAMASAKI	TITLE	IC-215
CHECKED	8/Jun/09	I. TAKENO	名称	ターミナルユニット (埋込装備)
APPROVED	18/Jun/09	R. Esumi	外寸図	
SCALE	1/5	MSS 4.3 ±10%	NAME	TERMINAL UNIT (FLUSH MOUNT)
DWG. No.	C5635-003-F	REF. No.	16-018-310C-7	OUTLINE DRAWING



表1 TABLE 1


寸法区分 (mm) DIMENSION	公差 (mm) TOLERANCE
L ≤ 50	±1.5
50 < L ≤ 100	±2.5
100 < L ≤ 500	±3





282

(1620)

132

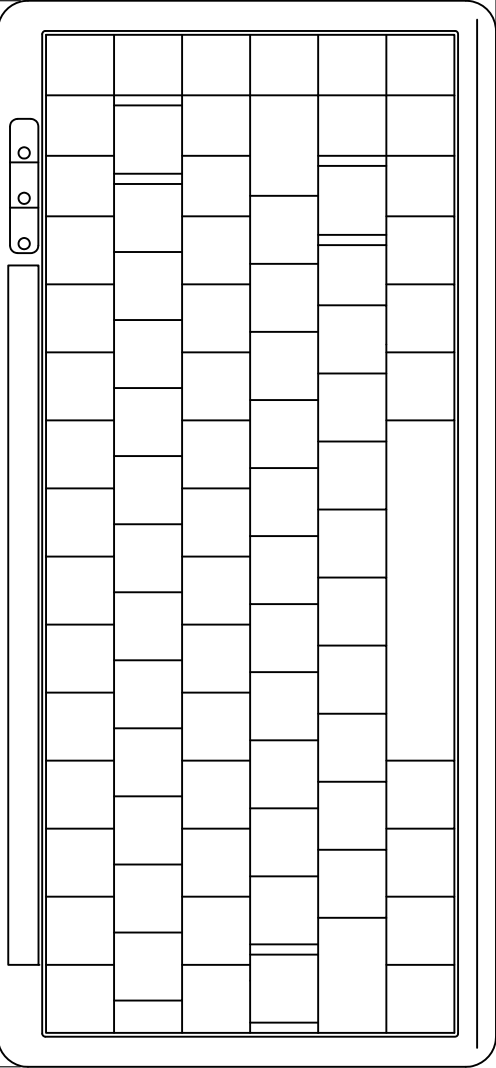

矢視 A  
VIEW A

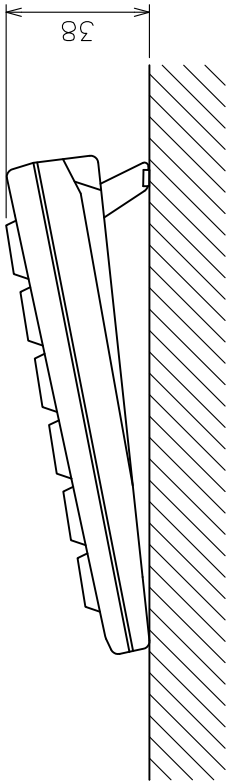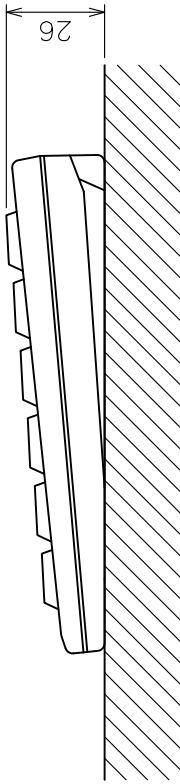

注 記 1) 指定外の寸法公差は表 1 による。

NOTE 1. TABLE1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.



DRAWN	25/Jun/09 I.YAMASAKI		TITLE	G84-4100PPAUS
CHECKED	25/Jun/09 I.TAKENO		名称	キーボード
APPROVED	8/Jul/09 R.Esumi		外寸図	
SCALE	1/2 MASS 0.4 kg		NAME	KEYBOARD
DWG.No.	C5635-C21-A	REF.No.	16-018-910G-0	OUTLINE DRAWING



表 1 TABLE 1


寸法区分 (mm) DIMENSION	公差 (mm) TOLERANCE
$L \leq 50$	$\pm 1.5$
$50 < L \leq 100$	$\pm 2.5$
$100 < L \leq 500$	$\pm 3$

(FOR REAR ENTRY)  
33 (背面時)

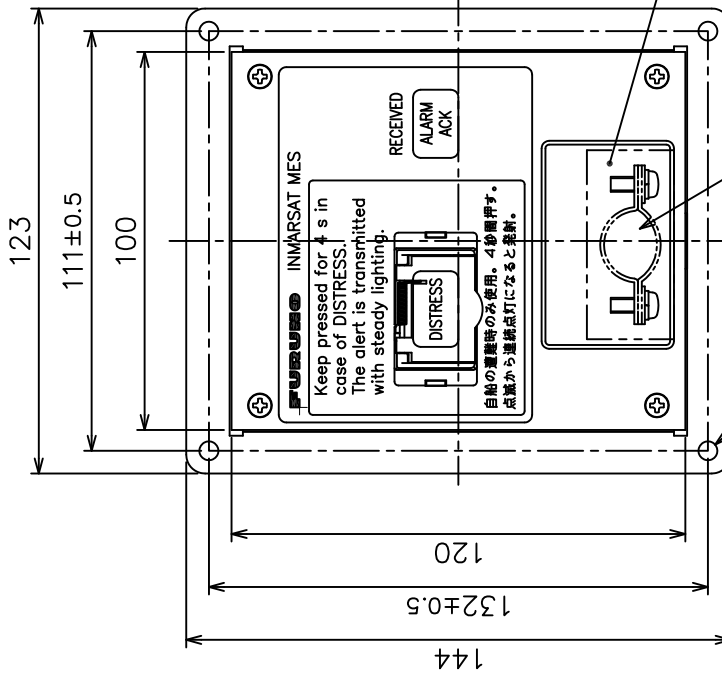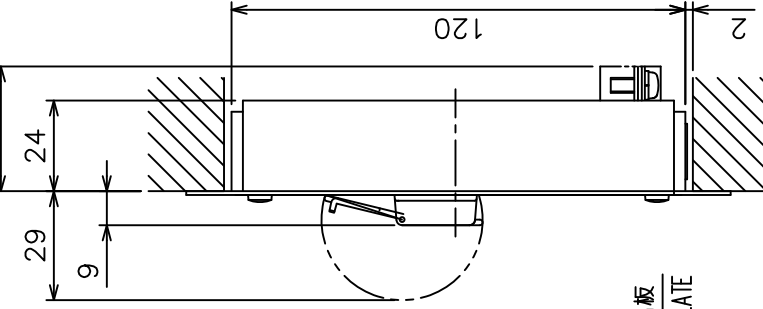

取付穴  
4-φ5  
FIXING HOLES

ケーブル導入口 (背面時)  
CABLE ENTRY (REAR ENTRY)

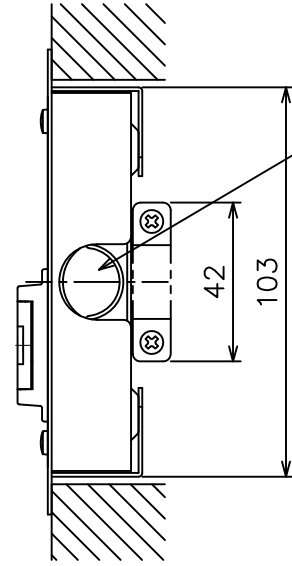

ケーブル導入口 (底面時)  
CABLE ENTRY (BOTTOM ENTRY)

取付穴寸法図  
CUTOUT DIMENSIONS

4-取付穴位置  
PILOT HOLES

注 記 1) 指定外の寸法公差は表 1 による。

2) 取付用ネジは+トラスタップピンネジ呼び径4×16を使用のこと。

NOTE 1. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.

2. USE TAPPING SCREWS  $\phi 4 \times 16$  FOR FIXING THE UNIT.

DRAWN	17/May/2012	T.YAMASAKI	TITLE	IC-305
CHECKED	17/May/2012	H.MAKI	名称	避難警報器 (埋込装備)
APPROVED	17/May/2012	Y.NISHIYAMA	外寸図	
SCALE	1/2	MSS 0.45	NAME	DISTRESS ALERT/RECEIVED CALL UNIT (FLUSH MOUNT)
DWG.No.	C5635-G12-C	REF.No.	16-018-410G-3	OUTLINE DRAWING






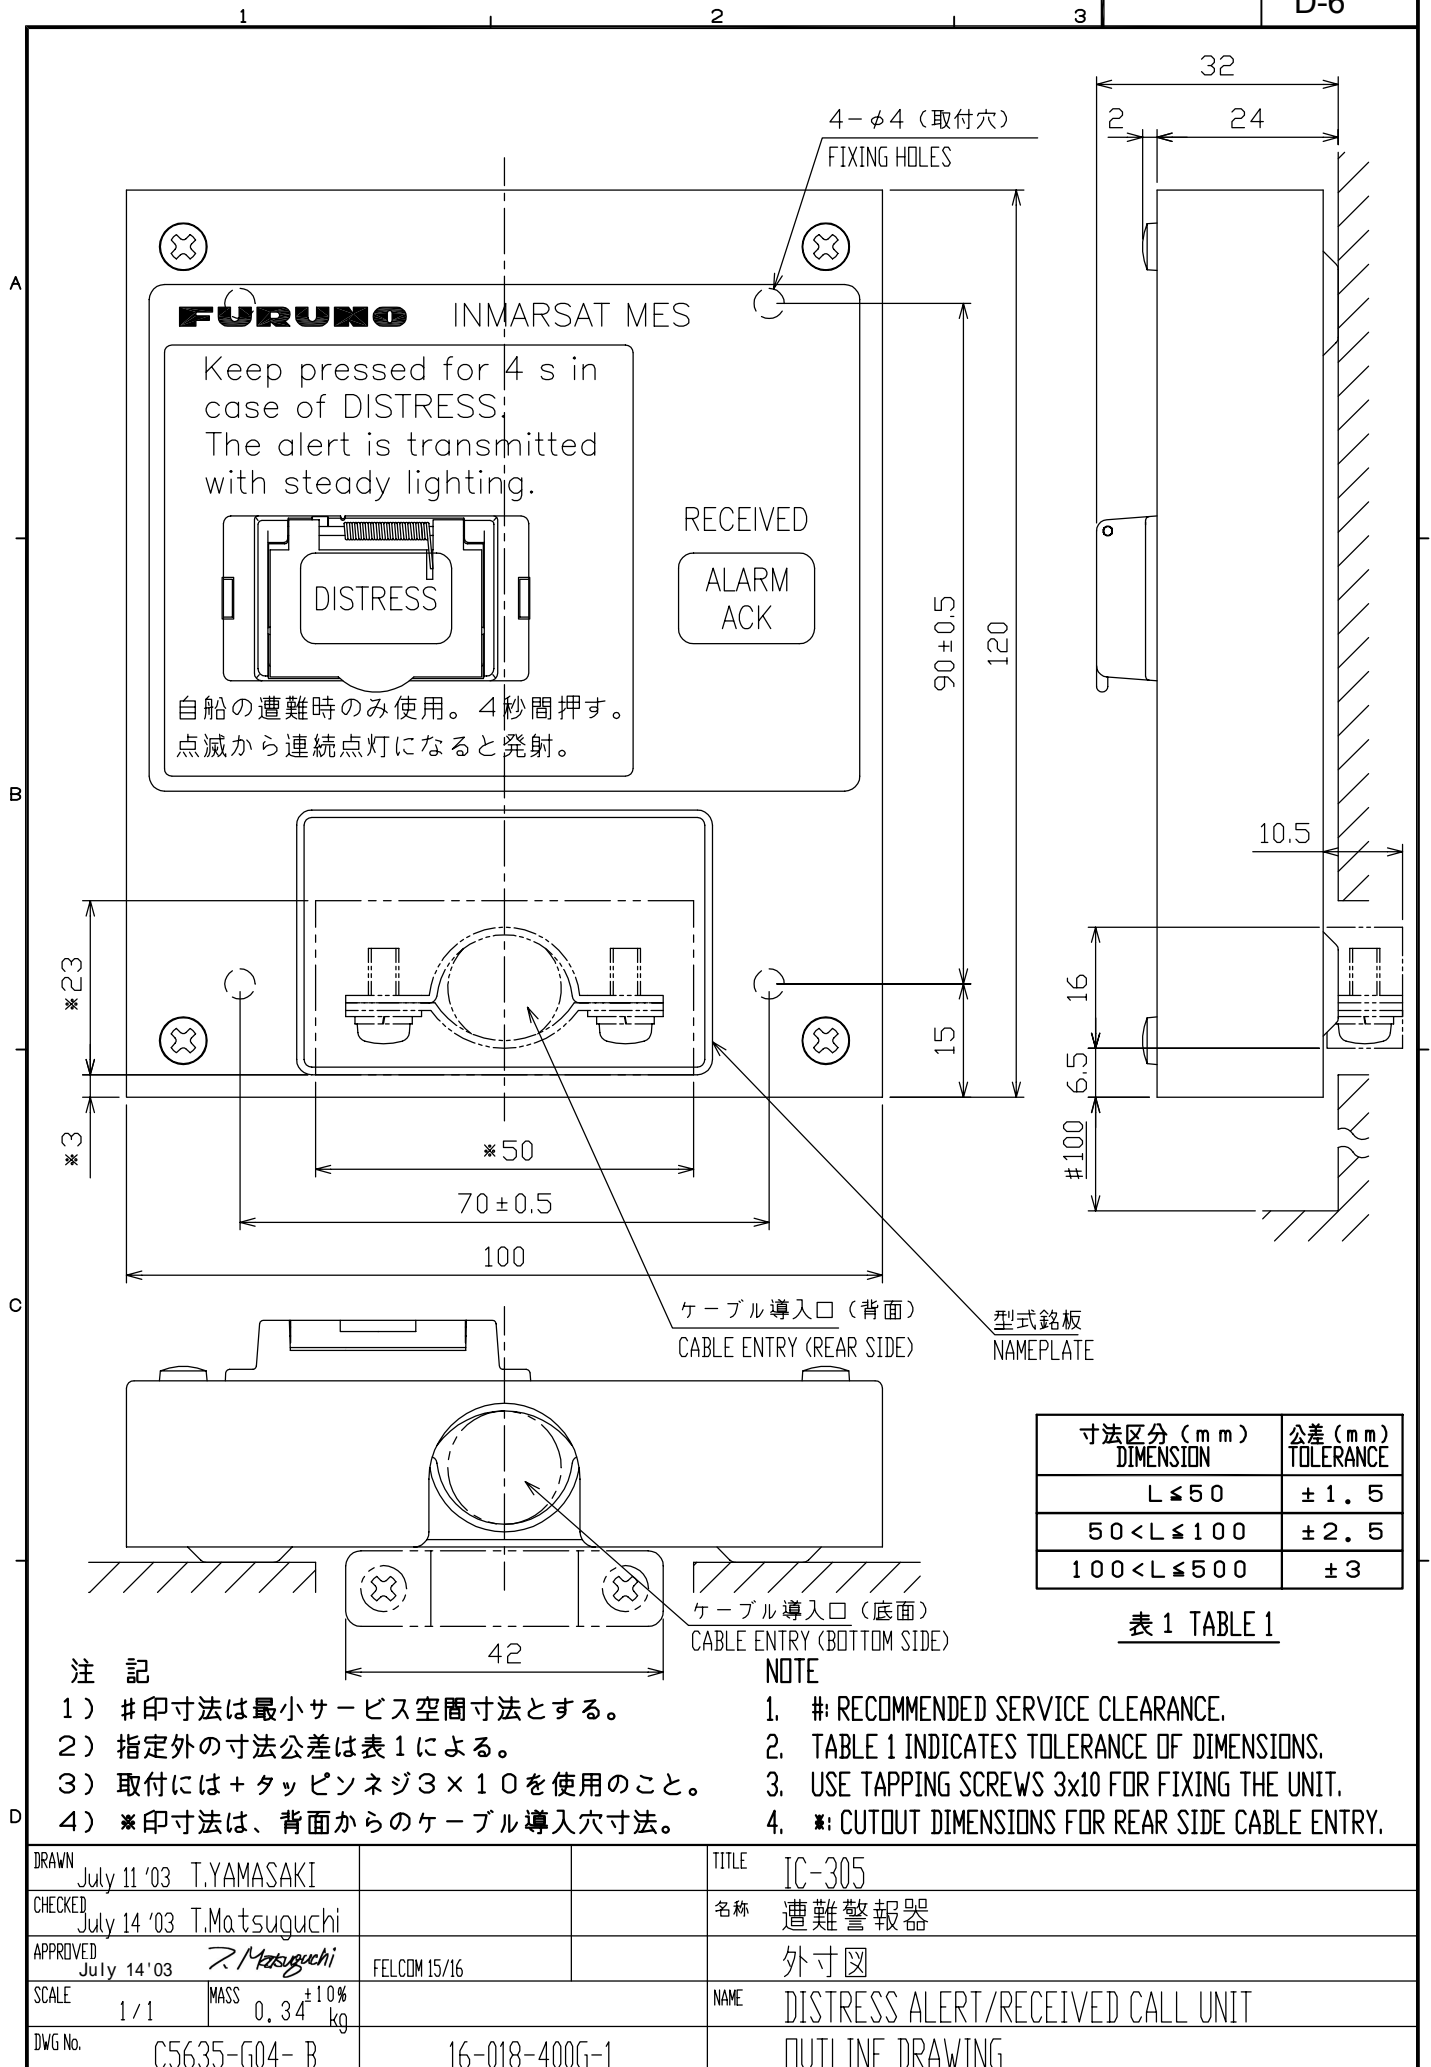




表 1 TABLE 1


寸法区分 (mm) DIMENSION	公差 (mm) TOLERANCE
L ≤ 50	±1.5
50 < L ≤ 100	±2.5
100 < L ≤ 500	±3

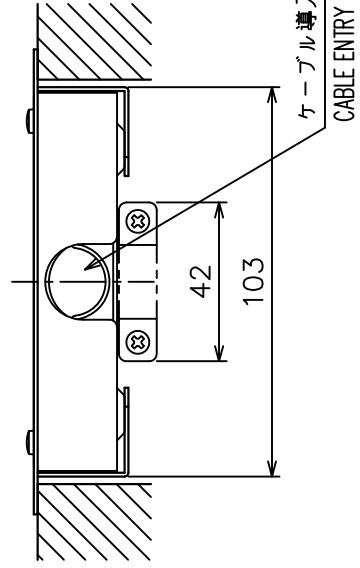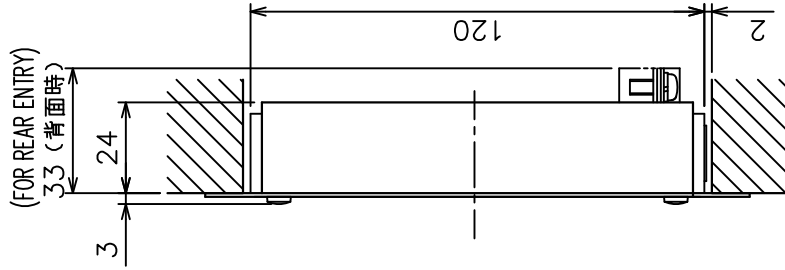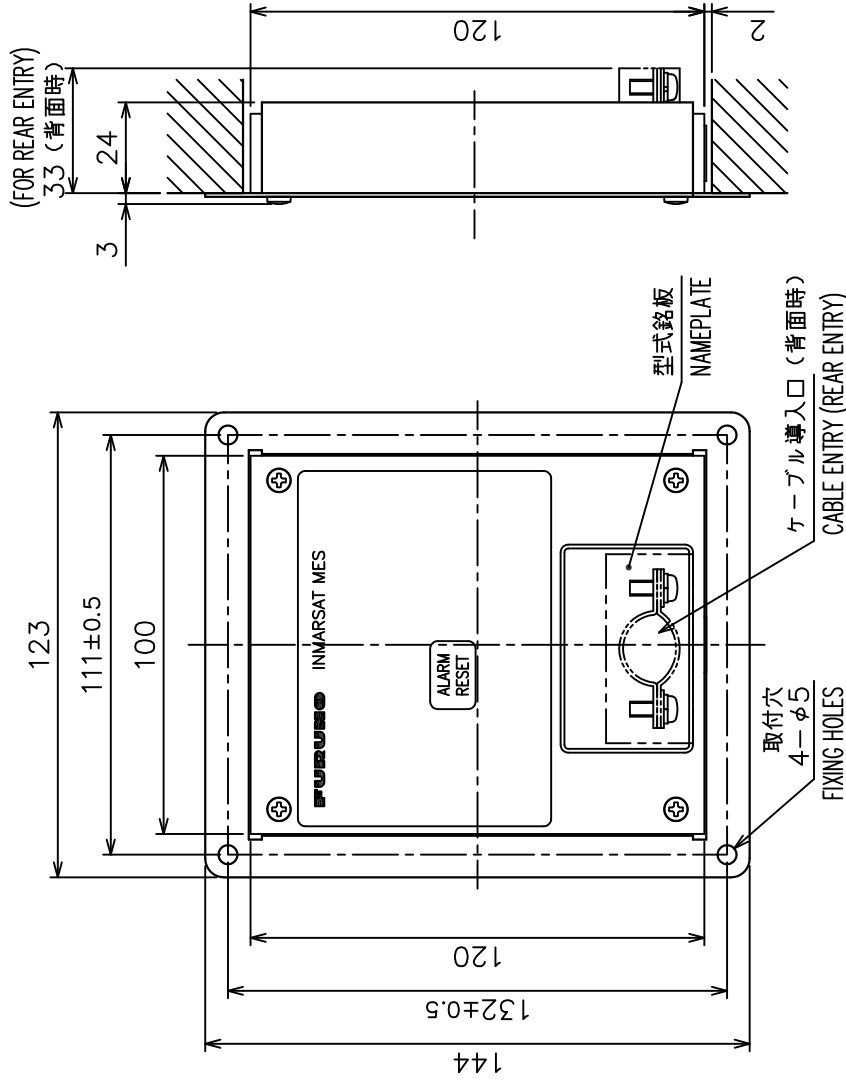

- 注 記 1) 指定外の寸法公差は表 1 による。  
 2) 取付用ネジは+トラスタップピンネジ呼び径 4×16 を使用のこと。
- NOTE 1. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.  
 2. USE TAPPING SCREWS 4x16 FOR FIXING THE UNIT.

DRAWN	17/May/2012	T.YAMASAKI	TITLE	IC-306
CHECKED	17/May/2012	H.MAKI	名 称	アラームユニット (埋込装備)
APPROVED	17/May/2012	Y.NISHIYAMA	外寸図	
SCALE	1/2	WSS 0.44	NAME	ALARM UNIT (FLUSH MOUNT)
DWG.No.	C5635-G09-C	REF.No.	16-018-510G-2	OUTLINE DRAWING



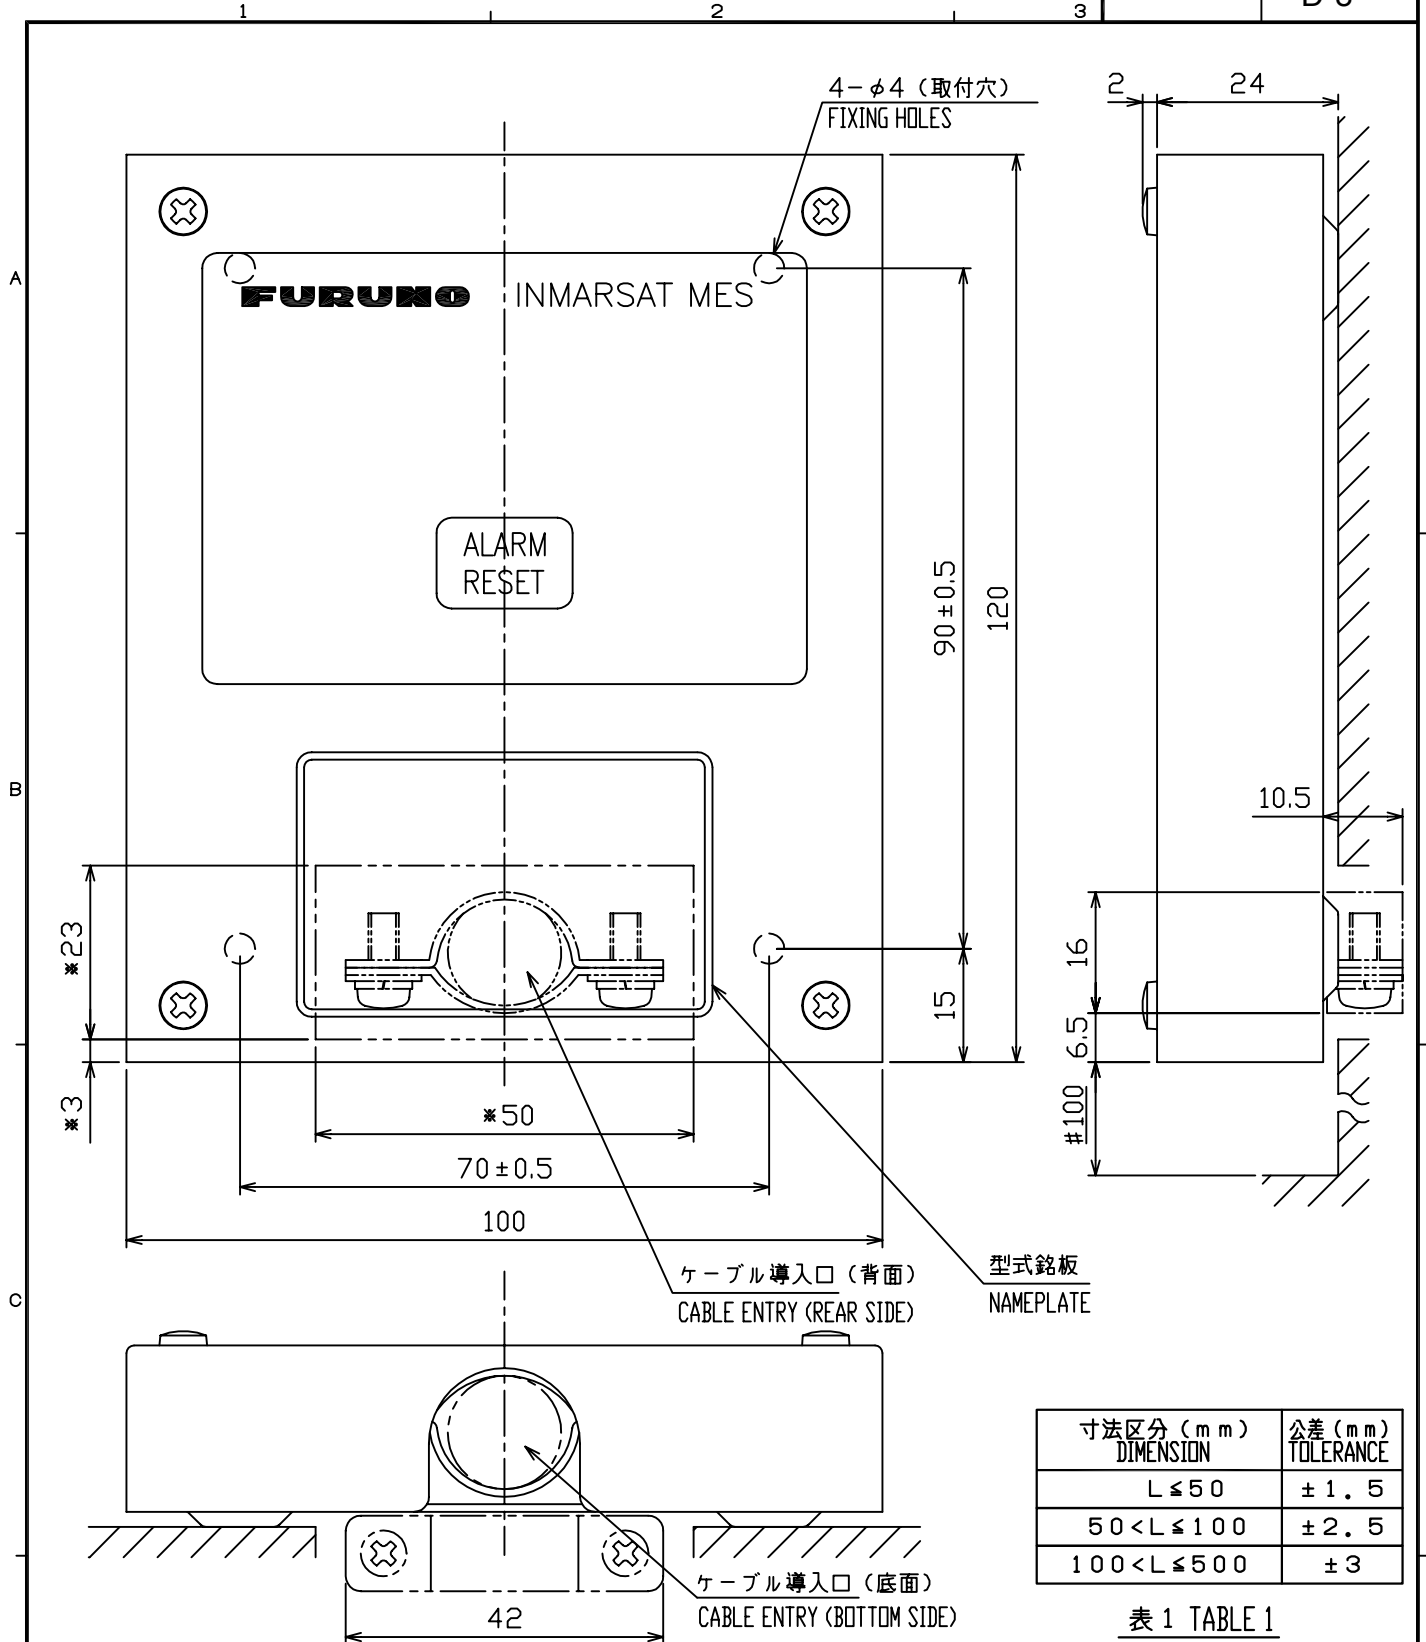

寸法区分 (mm) DIMENSION	公差 (mm) TOLERANCE
L ≤ 50	± 1.5
50 < L ≤ 100	± 2.5
100 < L ≤ 500	± 3

表 1 TABLE 1

## 注 記

- 1) #印寸法は最小サービス空間寸法とする。
- 2) 指定外の寸法公差は表 1 による。
- 3) 取付には+タッピンネジ 3×10 を使用のこと。
- 4) \*印寸法は、背面からのケーブル導入穴寸法。

## NOTE



1. #: RECOMMENDED SERVICE CLEARANCE.
2. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS.
3. USE TAPPING SCREWS 3x10 FOR FIXING THE UNIT.
4. \*: CUTOUT DIMENSIONS FOR REAR SIDE CABLE ENTRY.

DRAWN	Dec. 19 '02 T.YAMASAKI	TITLE	IC-306
CHECKED	Dec. 19 '02 Y.KIMURA	名称	アラームユニット
APPROVED	Dec. 20, '02 Y. Kimura	外寸図	
SCALE	1/1	NAME	ALARM UNIT
DWG No.	C5635-G05- B		OUTLINE DRAWING



表 1 TABLE 1

寸法区分 (mm) DIMENSIONS	公差 (mm) TOLERANCE
$L \leq 50$	$\pm 1.5$
$50 < L \leq 100$	$\pm 2.5$
$100 < L \leq 500$	$\pm 3$

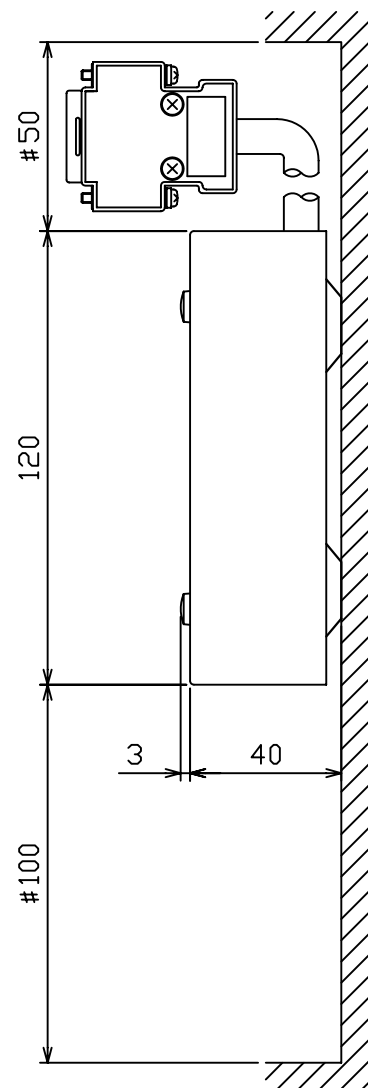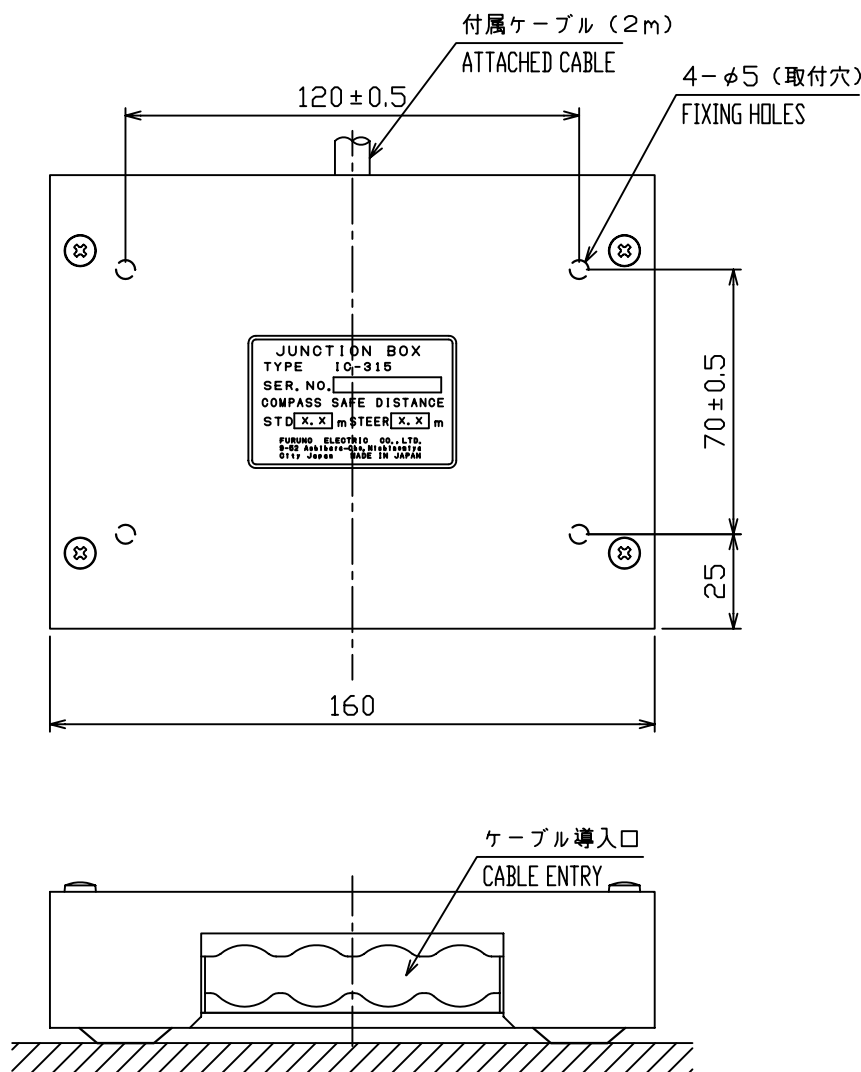

- 注 記 1) #印寸法は最小サービス空間寸法とする。  
2) 指定外の寸法公差は表 1 による。  
3) 取付用ネジは+タッピンネジ呼び径 4×16 を使用のこと。




- NOTE 1. # MINIMUM SERVICE CLEARANCE.  
2. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.  
3. USE SELF-TAPPING SCREWS 4×16 FOR FIXING THE UNIT.

DRAWN	Mar. 1 '05	T.YAMASAKI			TITLE	IC-315
CHECKED	Mar. 1 '05	T.MATSUGUCHI			名称	接続箱
APPROVED	Mar. 03 '05	T.Matsuguchi	FELCOM 15/16			外寸図
SCALE	1 / 2	MASS ±10% 0.96 kg	質量はケーブルを含む。 MASS W/ CABLE.		NAME	JUNCTION BOX
DWG No.	C5635-G06- D		16-018-600G-2			OUTLINE DRAWING



表 1 TABLE 1

寸法区分 (mm) DIMENSION	公差 (mm) TOLERANCE
L ≤ 50	± 1.5
50 < L ≤ 100	± 2.5
100 < L ≤ 500	± 3

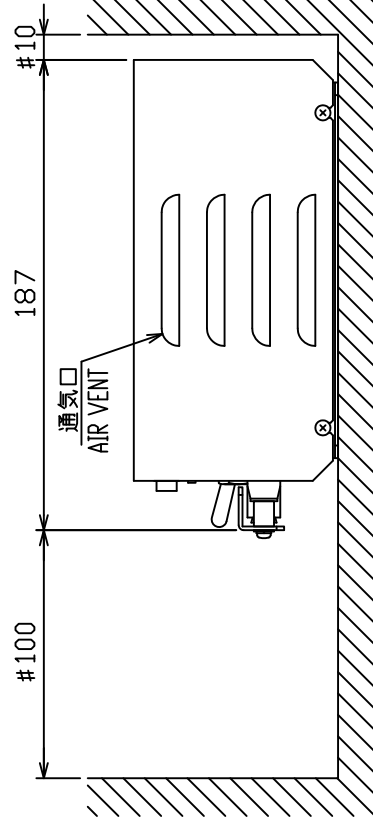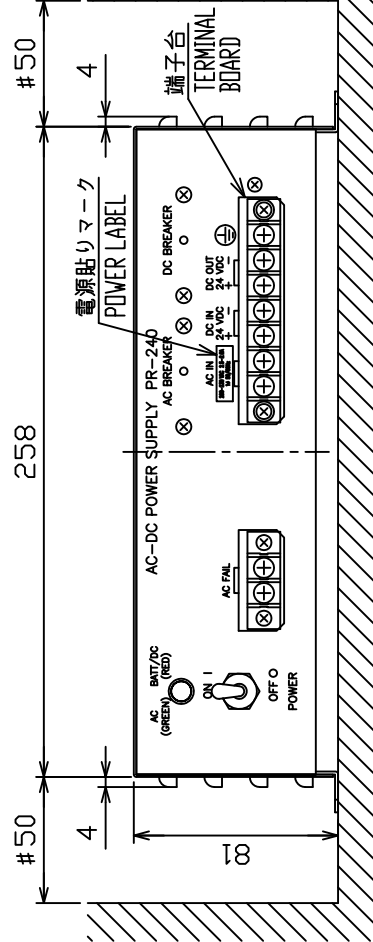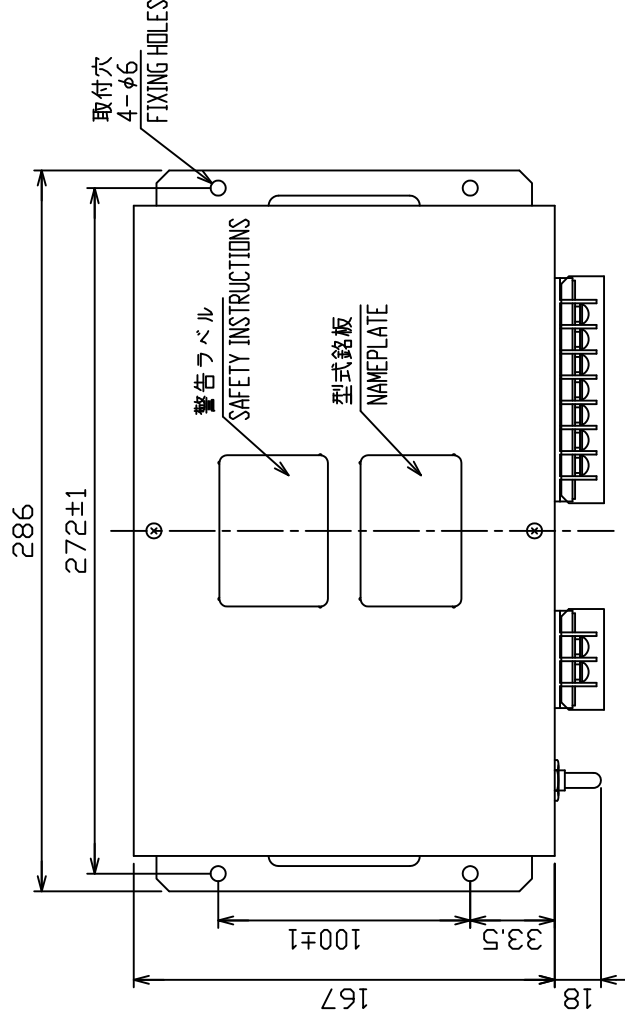




- 注 記 1) 指定なき寸法公差は表 1 による。  
 2) #印寸法は最小サービス空間寸法とする。  
 3) 取付用ネジは+トラスタッピンネジ 呼び径 4 × 1.6 を使用のこと。
- NOTE 1. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.  
 2. # MINIMUM SERVICE CLEARANCE.  
 3. USE TAPPING SCREWS Ø4x1.6 FOR FIXING THE UNIT.

DRAWN	25/Sep/09 T.YAMASAKI	TITLE	PR-240
CHECKED	25/Sep/09 T.TAKENO	名*	AC/DC 電源ユニット
APPROVED	26/Oct/09 R.Esumi	外寸図	
SCALE	1/3	NAME	AC/DC POWER SUPPLY UNIT
FIG.No.	C5003-603-J	REF.No.	24-003-500G-4
			OUTLINE DRAWING



表 1 TABLE 1

寸法区分 (mm) DIMENSIONS	公差 (mm) TOLERANCE
0 < L ≤ 50	± 1. 5
50 < L ≤ 100	± 2. 5
100 < L ≤ 500	± 3

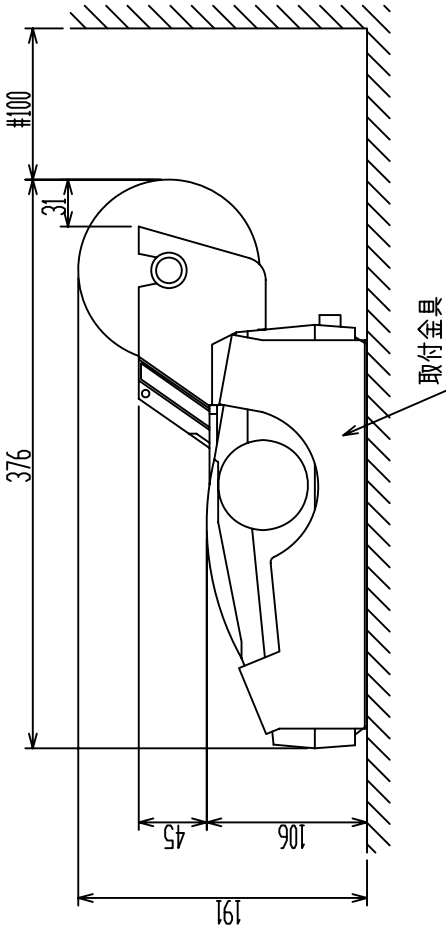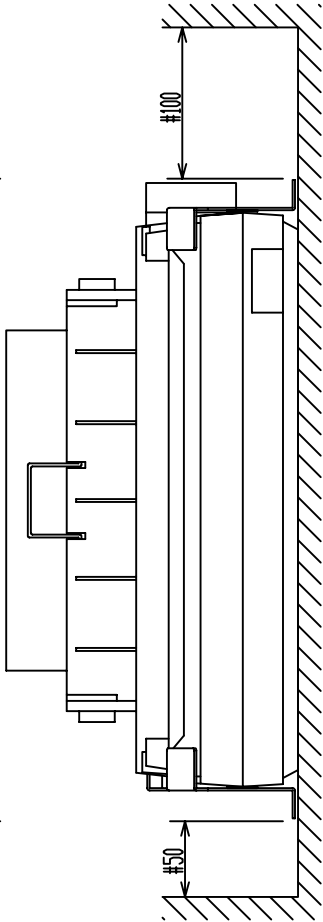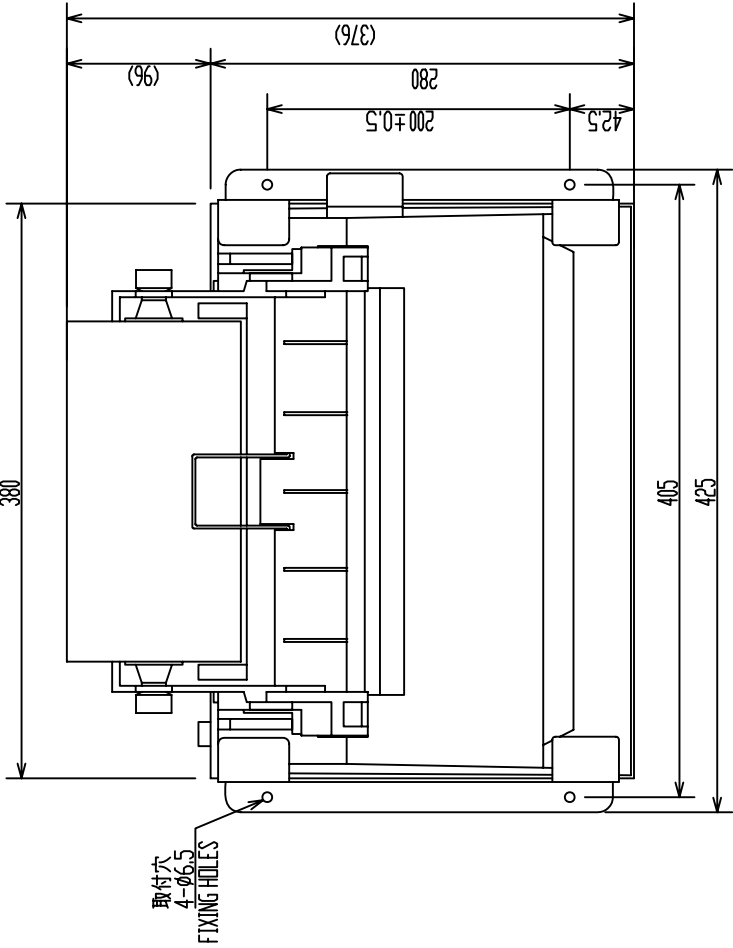

注 記 1) #印寸法は最小サービス空間寸法とする。

2) 指定外の寸法公差は表 1 による。

3) 取付用ネジは M6 ボルトまたはコーチボルト呼び径φを使用のこと。

NOTE 1. # MINIMUM SERVICE CLEARANCE.

2. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.



3. USE M6 BOLTS OR COACH SCREWS φ6 FOR FIXING THE UNIT.

DRAWN Nov. 27, '96 E. MIYOSHI	TITLE PP-510
CHECKED TAKAHASHI, I.	名称 プリンタ
APPROVED Y. Hatai	外寸図
SCALE 1/5 MASS 3.8 kg	NAME PRINTER
DWG.No. C5589-G08-K	REF.No. 16-007-660G-2
OUTLINE DRAWING	



表 1 TABLE 1

寸法区分 (mm) DIMENSION	公差 (mm) TOLERANCE
L ≤ 50	±1.5
50 < L ≤ 100	±2.5
100 < L ≤ 500	±3

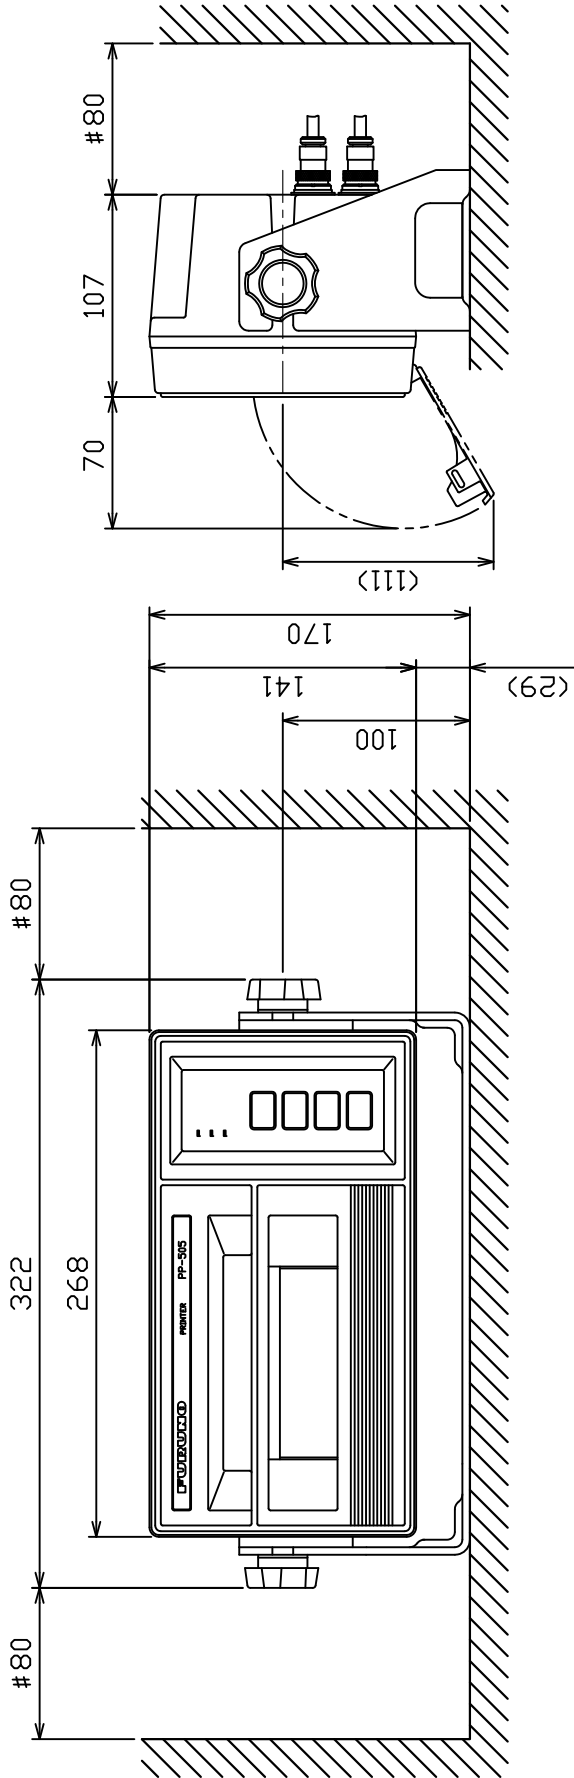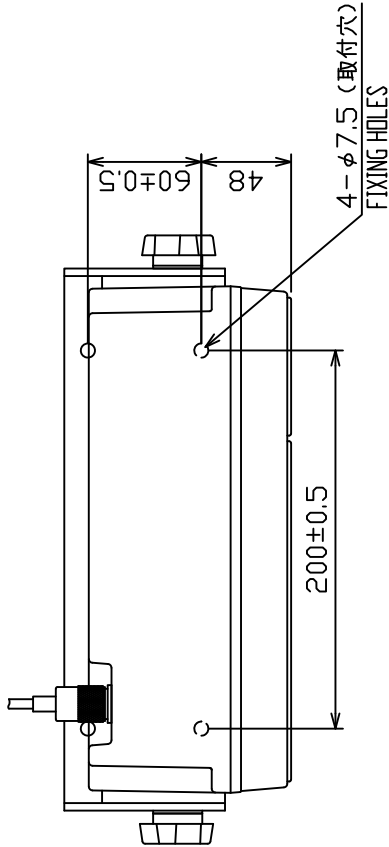

注 記

- 1) 指定外の寸法公差は表 1 による。
  - 2) # 印寸法は最小サービス空間寸法とする。
- NOTE
1. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.
  2. #: MINIMUM SERVICE CLEARANCE.

DRAWN	Oct. 12 '07 T. YAMASAKI	TITLE	PP-505/505FE/505FP
CHECKED	Oct. 12 '07 T. TAKENO	名称	EGC プリンタ / プリンタ (卓上装備)
APPROVED	Oct. 15 '07 R. Esumi	外寸図	
SCALE	1/4 MASS 2.9 kg	NAME	EGC PRINTER / PRINTER (TABLETOP MOUNT)
DWG. No.	C5540-G03-D	16-010-005G-0	OUTLINE DRAWING





表 1 TABLE 1

寸法区分 (mm) DIMENSION	公差 (mm) TOLERANCE
$L \leq 50$	$\pm 1.5$
$50 < L \leq 100$	$\pm 2.5$
$100 < L \leq 500$	$\pm 3$

表 2 工事材料

TABLE 2 INSTALLATION MATERIAL

品番 ITEM	品名 NAME	図番 DWG. No.
1	ロックナット LOCK NUT	16-023-2518
2	ナットシート NUT SHEET	16-023-2519

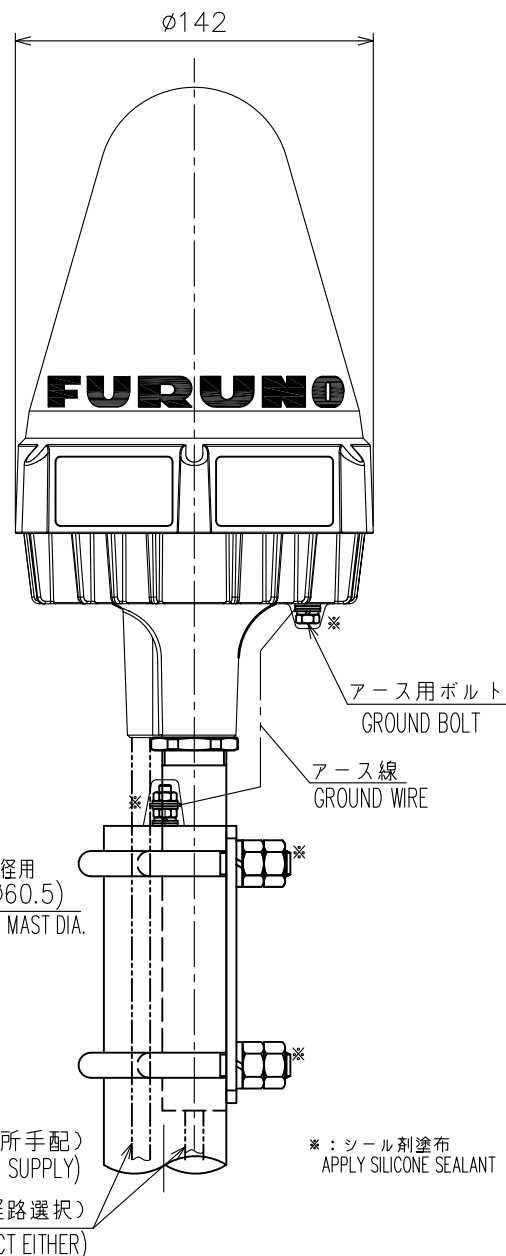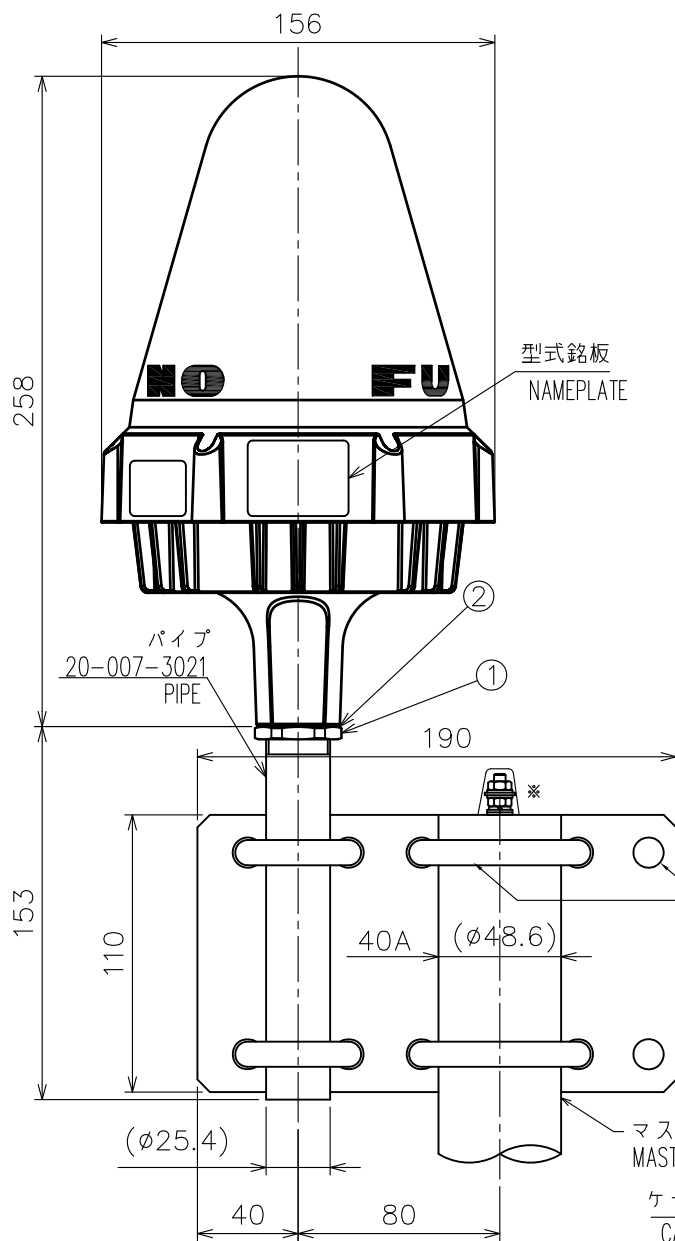

※: シール剤塗布  
APPLY SILICONE SEALANT

注 記 1) 指定外の寸法公差は表 1 による。

NOTE 1. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.

DRAWN	25/Apr/2012 T.YAMASAKI	TITLE	IC-115/116/118/119
CHECKED	25/Apr/2012 H.MAKI	名称	アンテナユニット (取付板)
APPROVED	30/Apr/2012 Y.NISHIYAMA	外寸図	
SCALE	1/3	MASS	2.3 ±10% kg
DWG. No.	C5635-G19-D	REF. No.	16-023-252G-1
			質量は工材を含む。 MASS INCLUDES INSTALLATION MATERIALS.
			ANTENNA UNIT (W/ FIXTURE PLATE)
			OUTLINE DRAWING



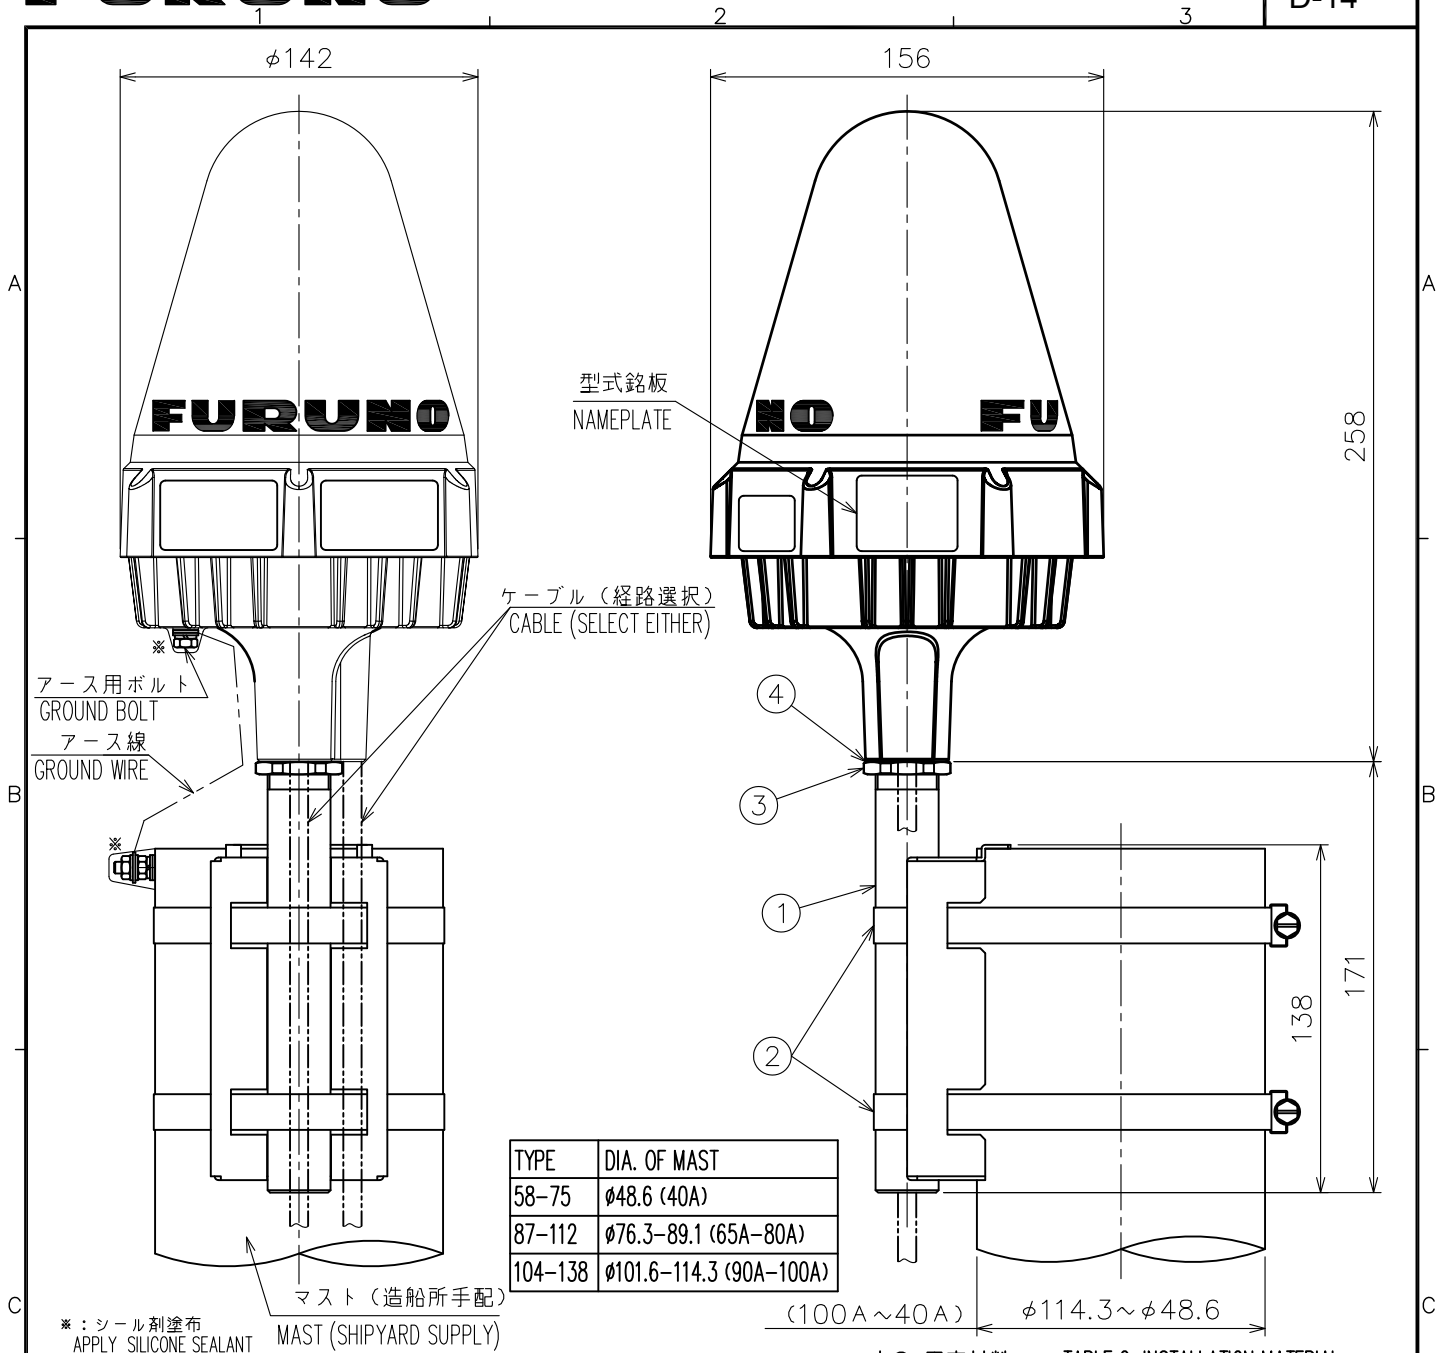


表2 工事材料

TABLE 2 INSTALLATION MATERIAL

品番 ITEM	品名 NAME	図番 DWG. No.	摘要 REMARK
1	アンテナ固定金具 ANTENNA PIPE	16-018-1311	SUS
2	ホースクランプ HOSE CLAMP	ABA SUS316 12mm	
3	ロックナット LOCK NUT	16-023-2518	
4	ナットシート NUT SHEET	16-023-2519	

表1 TABLE 1


寸法区分 (mm) DIMENSION	公差 (mm) TOLERANCE
$L \leq 50$	$\pm 1.5$
$50 < L \leq 100$	$\pm 2.5$
$100 < L \leq 500$	$\pm 3$

- 注 記 1) 指定外の寸法公差は表1による。  
2) アンテナケーブル経路はパイプ内または外のいずれかを選択。  
3) 対応マスト径は40A ( $\phi 48.6$ ) ~ 100A ( $\phi 114.3$ )

- NOTE 1. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.  
2. PATH THE ANTENNA CABLE OUTSIDE OR INSIDE THE PIPE.  
3. MAST DIAMETER: 40A ( $\phi 48.6$ ) TO 100A ( $\phi 114.3$ )

DRAWN	25/Apr/2012 I.YAMASAKI	TITLE	IC-115/116/118/119
CHECKED	25/Apr/2012 H.MAKI	名称	アンテナユニット
APPROVED	30/Apr/2012 Y.NISHIYAMA	外寸図	
SCALE	1/3	質量は工材を含む MASS INCLUDES INSTALLATION MATERIALS	NAME
DWG.No.	C5635-G20-F	REF.No.	16-023-251G-1
			OUTLINE DRAWING



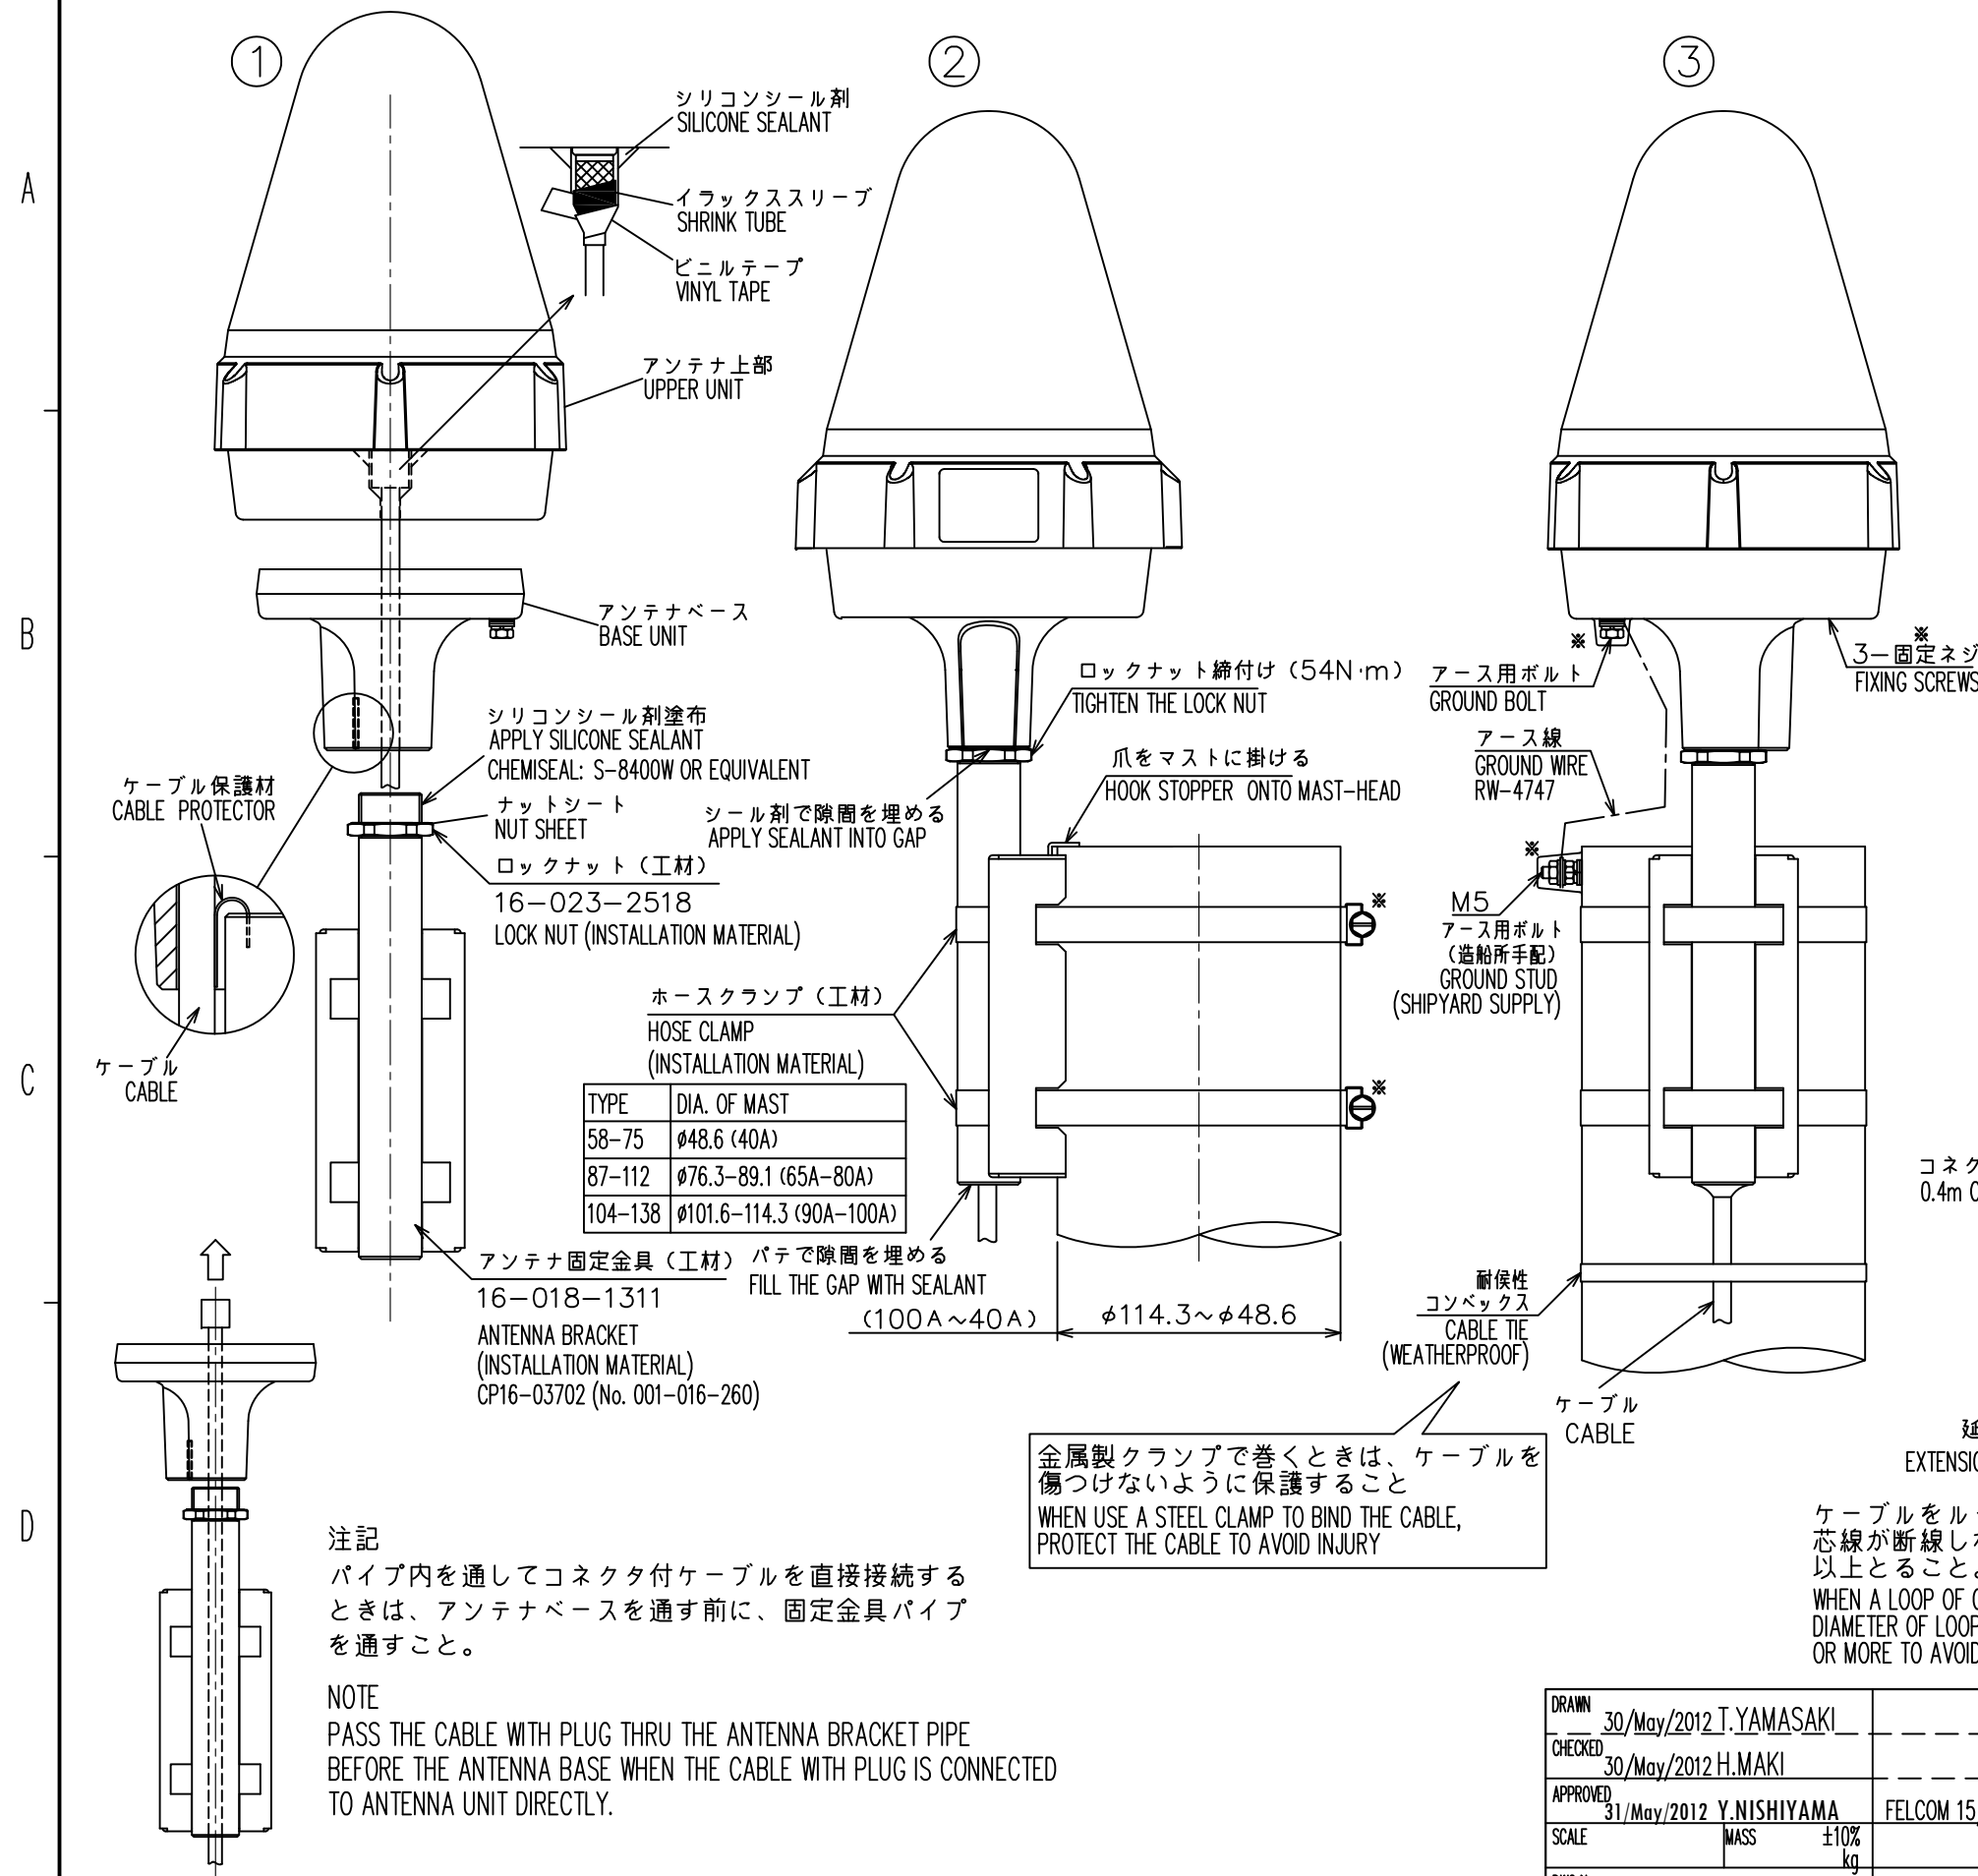


## 手順

- 1) アンテナ固定金具をホースクランプでマストに仮固定する。  
対応マスト径: 40A (φ48.6) ~100A (φ114.3)  
58-75: 40A (φ48.6)  
87-112: 65A (φ76.3) ~80A (φ89.1)  
104-138: 90A (φ101.6) ~100A (φ114.3)
- 2) ロックナットをアンテナ固定金具のパイプネジ部にねじ込む。
- 3) アンテナ固定金具のネジ部にシーラントを塗布する。
- 4) アンテナベースをねじ込み、ロックナットで固定する。
- 5) アンテナ固定金具、アンテナベースに下からケーブルを通す。
- 6) イラックススリーブをケーブルに通して、コネクタプラグをアンテナ上部のコネクタに接続する。
- 7) イラックススリーブを熱で固着し、ビニルテープで固定する。
- 8) アンテナベースをアンテナ上部にネジ3本で固定する。
- 9) アンテナ全体をマストに本固定する。
- 10) ケーブルをマストに固定し、アース線 (工材) を布設する。  
ケーブル、アース線は耐候性コンベックスで固定する。
- 11) \*部分をシーラントで完全に覆う。

## PROCEDURE

1. FIX THE ANTENNA BRACKET TO MAST TEMPORALLY.  
MAST DIAMETER: 40A (φ48.6) ~100A (φ114.3)  
58-75: 40A (φ48.6)  
87-112: 65A (φ76.3) ~80A (φ89.1)  
104-138: 90A (φ101.6) ~100A (φ114.3)
2. SCREW A LOCK NUT TO THE PIPE OF ANTENNA BRACKET.
3. APPLY SILICONE SEALANT TO SCREW OF THE BRACKET.
4. SCREW THE ANTENNA BASE AND FIX IT WITH THE LOCK NUT.
5. PASS THE CABLE THRU THE PIPE AND ANTENNA BASE FROM BOTTOM.
6. CONNECT THE CABLE PLUG TO THE CONNECTOR ON UPPER UNIT THRU SHRINK TUBE.
7. FIX THE SHRINK TUBE WITH HEAT AND BIND WITH VINYL TAPE.
8. FIX THE BASE UNIT TO UPPER ANTENNA WITH 3 SCREWS.
9. FIX THE ANTENNA UNIT TO MAST SECURELY.
10. FIX THE ANTENNA CABLE AND GROUND WIRE TO MAST.
11. SECURE THEM WITH WEATHERPROOF CABLE TIE.  
COVER SCREW HEADS MARKED '\*' WITH SILICONE SEALANT.

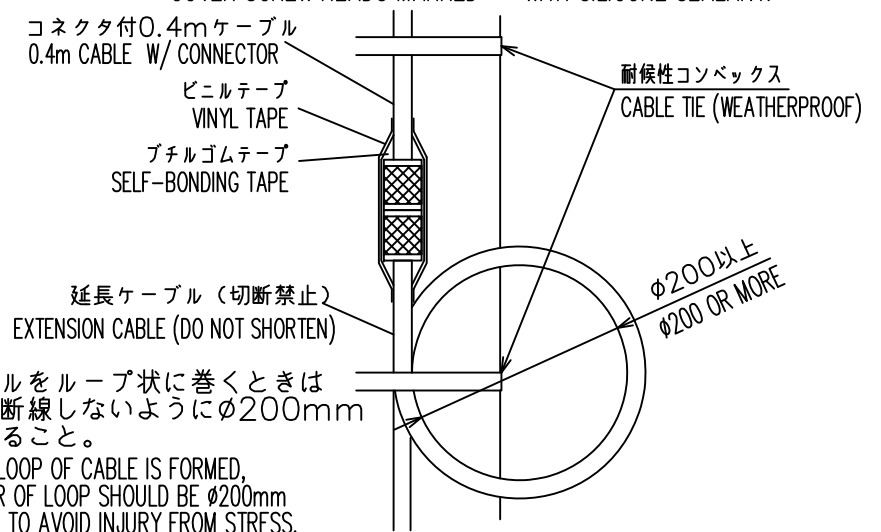

DRAWN	30/May/2012 T.YAMASAKI	TITLE	IC-115/116/118/119
CHECKED	30/May/2012 H.MAKI	名称	アンテナユニット (ホースクランプ取付)
APPROVED	31/May/2012 Y.NISHIYAMA	装備要領	
SCALE	MASS ±10% kg	NAME	ANTENNA UNIT (HOSE CLAMP FIXING)
DWG No.	C5635-Y01-J	INSTALLATION PROCEDURE	




A

B

C

D

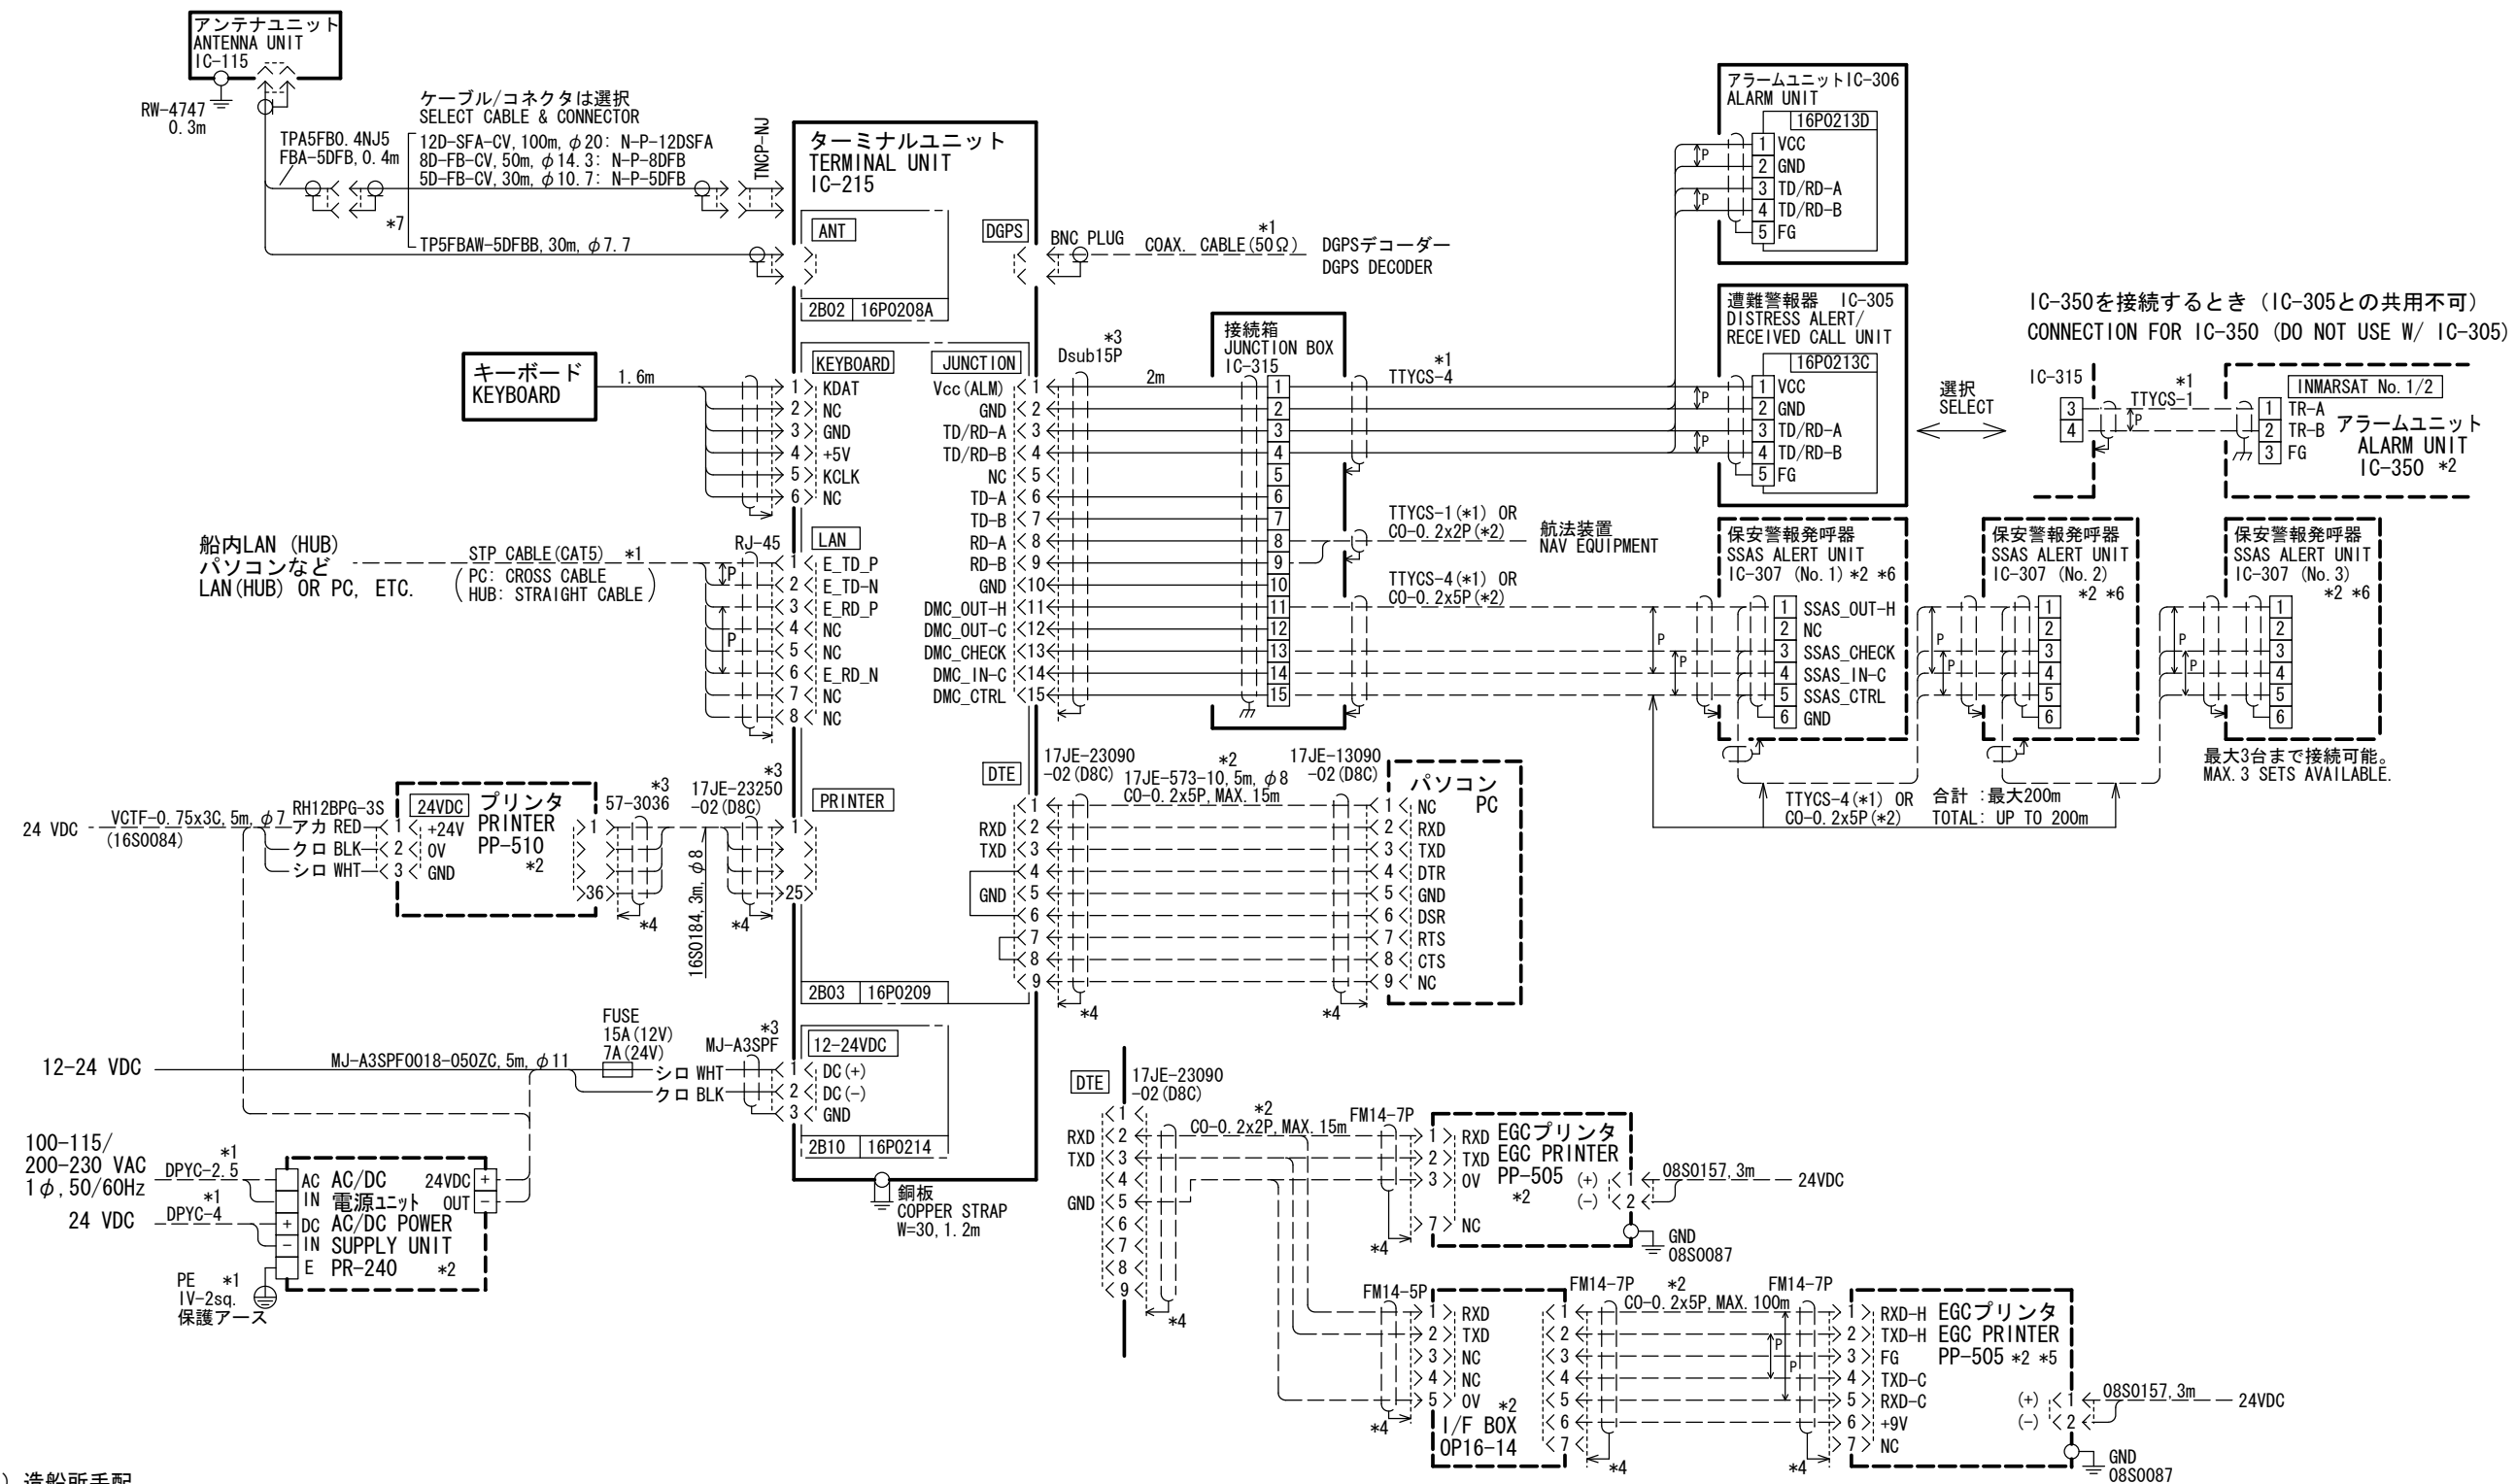

## 注記

- \* 1) 造船所手配。
- \* 2) オプション。
- \* 3) 工場にて取付済み。
- \* 4) コネクタクランプでアースに落とす。
- \* 5) TB基板 (16P0116) が必要。
- \* 6) 終端のIC-307はジャンパー設定を変更する。
- \* 7) アンテナケーブルは切断して使用しないこと。

## NOTE

- \*1. SHIPYARD SUPPLY.
- \*2. OPTION.
- \*3. FITTED AT FACTORY.
- \*4. GROUND THRU CONNECTOR CLAMP.
- \*5. TB BOARD (16P0116) REQUIRED.
- \*6. CHANGE SETTING OF JUMPER IN IC-307 TO TERMINATE.
- \*7. DO NOT SHORTEN ANTENNA CABLE.

CO-0.2x2P: CO-SPEVV-SB-C 0.2x2P, φ10.5  
CO-0.2x5P: CO-SPEVV-SB-C 0.2x5P, φ13.5

DRAWN	20/Nov/2012 T. YAMASAKI	TITLE	FELCOM 15
CHECKED	20/Nov/2012 T. TAKAHASHI	名称	インマルサットC船舶地球局
APPROVED	20/Nov/2012 Y. NISHIYAMA		相互結線図
SCALE	MASS kg	NAME	INMARSAT-C MES
DWG No.	C5635-C01- T		INTERCONNECTION DIAGRAM