

FURUNO

Installation Manual
MULTI-COLOR LCD RADAR
Model FR-8045/FR-8065/FR-8125/FR-8255

Product Name: MARINE RADAR

| | |
|---|-------------|
| SAFETY INSTRUCTIONS | i |
| SYSTEM CONFIGURATION | ii |
| EQUIPMENT LISTS..... | iii |
| | |
| 1. HOW TO INSTALL THE SYSTEM | 1 |
| 1.1 Display Unit..... | 1 |
| 1.2 Antenna Unit Installation | 5 |
| 1.3 Power Supply Unit | 19 |
| | |
| 2. CABLE CONNECTION | |
| AND WIRING | 20 |
| 2.1 Standard Connection | 20 |
| 2.2 Wiring the Power Supply Unit (FR-8255 only) | 21 |
| 2.3 Data Signals..... | 23 |
| 2.4 Input/Output Ports..... | 23 |
| | |
| 3. EQUIPMENT SETTINGS..... | 25 |
| 3.1 Setting the Language..... | 25 |
| 3.2 How to Set the Purpose | 26 |
| 3.3 How to Enter Initial Settings..... | 27 |
| | |
| 4. OPTIONAL EQUIPMENT | 31 |
| 4.1 ARP Kit ARP-11 | 31 |
| 4.2 Connection of Buzzer and/or Remote Display | 33 |
| | |
| APPX. 1 MJ CONNECTOR | |
| CORROSION PROTECTION | AP-1 |
| | |
| PACKING LIST(S) | A-1 |
| OUTLINE DRAWING(S) | D-1 |
| INTERCONNECTION DIAGRAM(S) | S-1 |



FURUNO ELECTRIC CO., LTD.



www.furuno.com

All brand and product names are trademarks, registered trademarks or service marks of their respective holders.



SAFETY INSTRUCTIONS

Read these safety instructions before you operate the equipment.

| | |
|--|---|
|  WARNING | Indicates a condition that can cause death or serious injury if not avoided. |
|  CAUTION | Indicates a condition that can cause minor or moderate injury if not avoided. |

| | | |
|--|--|--|
|  Warning, Caution |  Prohibitive Action |  Mandatory Action |
|--|--|--|

WARNING


 **Do not open the equipment unless totally familiar with electrical circuits and service manual.**
Only qualified personnel should work inside the equipment.

 **Wear a safety belt and hard hat when working on the antenna unit.**
Serious injury or death can result if someone falls from the radar mast.


Construct a suitable service platform from which to install the antenna unit.
Serious injury or death can result if someone falls from the radar mast.

Turn off the power at the mains switchboard before beginning the installation.
Fire, electrical shock or serious injury can result if the power is left on or is applied while the equipment is being installed.

CAUTION

 Ground the equipment to prevent electrical shock and mutual interference.

WARNING

 **Radio Frequency Radiation Hazard**

The radar antenna emits electromagnetic radio frequency (RF) energy which can be harmful, particularly to your eyes. Never look directly into the antenna aperture from a close distance while the radar is in operation or expose yourself to the transmitting antenna at a close distance.

Distances at which RF radiation levels of 100 W/m² and 10 W/m² exist are given in the table below.

Note: If the antenna unit is installed at a close distance in front of the wheel house, your administration may require halt of transmission within a certain sector of antenna revolution. This is possible - Ask your FURUNO representative or dealer to provide this feature.


| Model | 100W/m ² | 10W/m ² | |
|---------|---------------------|--------------------|------|
| FR-8045 | XN12A | N/A | 1.1m |
| | XN13A | N/A | 1.0m |
| FR-8065 | XN12A | N/A | 1.9m |
| | XN13A | N/A | 1.7m |
| FR-8125 | XN12A | N/A | 2.1m |
| | XN13A | N/A | 1.9m |
| FR-8255 | XN12A | 0.6m | 4.6m |
| | XN13A | 0.4m | 3.1m |

CAUTION

Observe the following compass safe distances to prevent deviation of a magnetic compass.

| Model | Standard | Steering | |
|----------------------|----------|----------|-------|
| Display Unit RDP-154 | 1.00m | 0.65m | |
| FR-8045 Antenna | 0.95m | 0.60m | |
| FR-8065 Antenna | RSB-0070 | 1.95m | 1.25m |
| | RSB-0073 | 1.90m | 1.20m |
| FR-8125 Antenna | RSB-0070 | 1.00m | 0.60m |
| | RSB-0073 | 1.10m | 0.70m |
| FR-8255 Antenna | RSB-0070 | 1.85m | 1.25m |
| | RSB-0073 | 1.80m | 1.15m |
| PSU-008 | 0.80m | 0.50m | |

SYSTEM CONFIGURATION

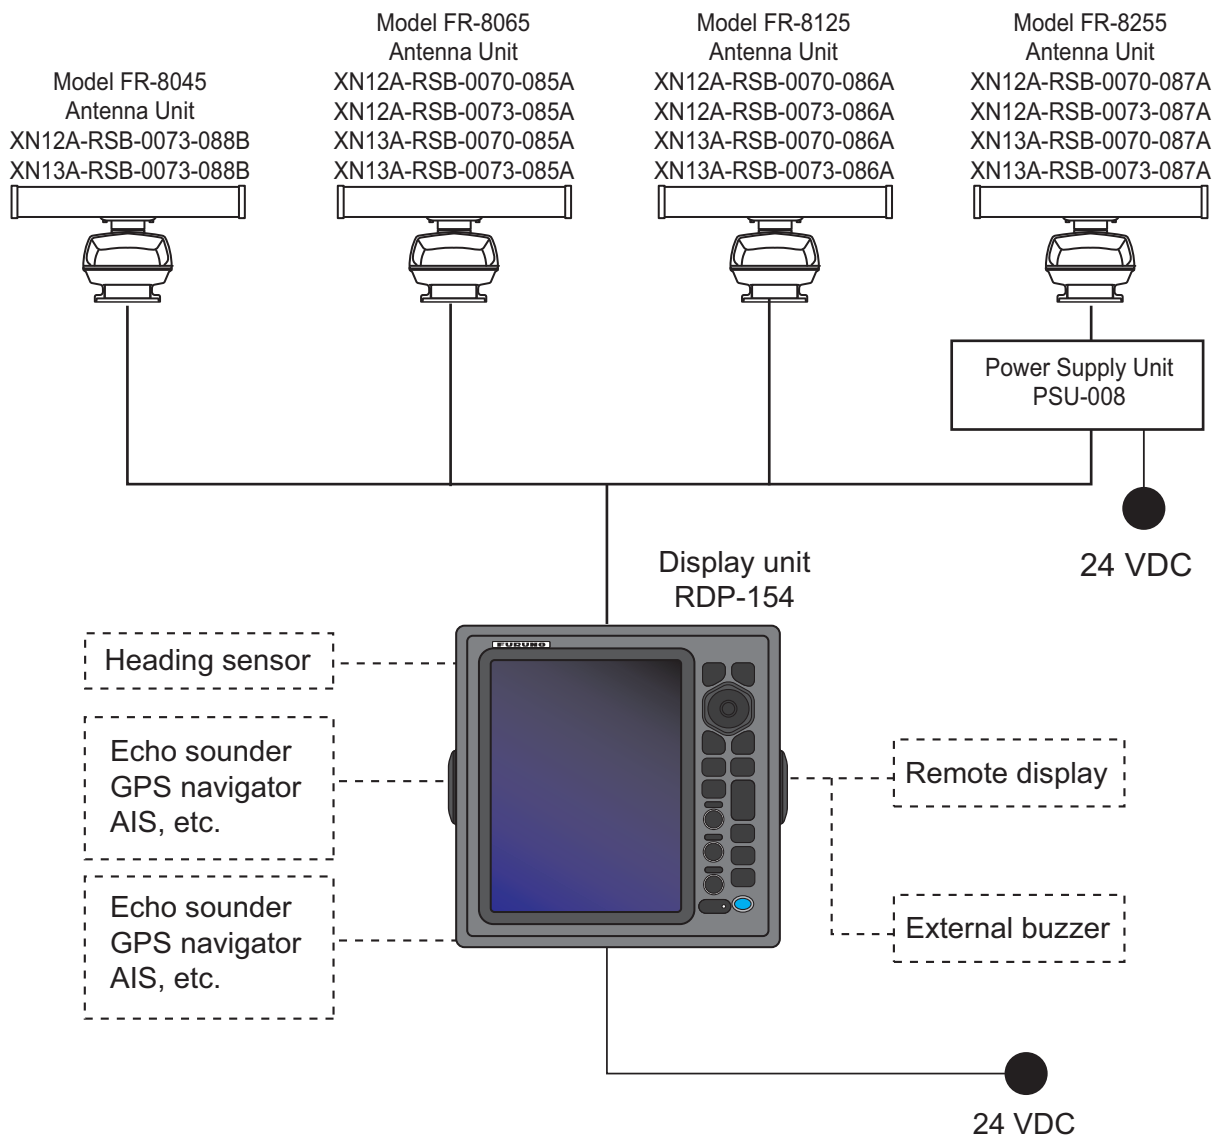

————— : Basic configuration

----- : Optional

Note 1: 12 VDC cannot be used with this equipment.

Note 2: When replacing the antenna, make sure the correct SPU board is used, referring to the table below.

| Model | SPU Board |
|-------------------------|-----------|
| FR-8045 | 03P9586B |
| FR-8065/FR-8125/FR-8255 | 03P9586A |

EQUIPMENT LISTS

Standard Supply

| Name | Type | Code No. | Qty | Comments | |
|------------------------|--------------------|-------------|-------------|--|----------------------------|
| Display Unit | RDP-154 | — | 1 | | |
| Antenna Unit | RSB-0070/0073-085A | — | 1 | Radiator: XN12A or XN13A | |
| | RSB-0070/0073-086A | — | | | |
| | RSB-0070/0073-087A | — | | | |
| | RSB-0073-088B | — | | | |
| Power Unit | PSU-008 | — | 1 | 5m Cable | For FR-8255 |
| Installation Materials | CP03-30700 | 000-090-471 | 1 | 10m Cable | For FR-8065/ or FR-8125 |
| | CP03-30710 | 000-090-472 | | 15m Cable | |
| | CP03-30720 | 000-090-473 | | 20m Cable | |
| | CP03-30730 | 000-090-474 | | 30m Cable | |
| | CP03-30500 | 000-083-620 | 1 | 10m Cable | For FR-8255 |
| | CP03-30510 | 000-083-621 | | 15m Cable | |
| | CP03-30520 | 000-083-622 | | 20m Cable | |
| | CP03-30530 | 000-083-623 | | 30m Cable | |
| | CP03-35600 | 001-304-760 | 1 | For Display Unit (Screws, Code: 000-162-608-10, 5×20 SUS304) | |
| | CP03-33000 | 000-014-604 | 1 | 5m Cable | For FR-8045 |
| | CP03-33010 | 000-014-605 | | 10m Cable | |
| | CP03-33020 | 000-014-606 | | 15m Cable | |
| | CP03-33030 | 000-014-607 | | 20m Cable | |
| | CP03-33040 | 000-014-608 | | 30m Cable | |
| | CP03-33801 | 001-141-670 | 1 | For Antenna Unit: FR-8065/FR-8125/FR-8255 | |
| | CP03-18401 | 008-503-360 | 1 | For Antenna Unit: FR-8045 | |
| | CP03-22901 | 008-219-760 | 1 | For Radiator | |
| CP03-30600 | 000-084-769 | 1 | For PSU-008 | | |
| Spare Parts | SP03-17701 | 001-304-750 | 1 | For Display Unit: Fuse (Code: 000-155-826-10, FGBO 125V 10A PBF) | |
| | SP03-14501 | 008-444-420 | 1 | For PSU-008 | |
| Accessories | FP03-12301 | 001-304-780 | 1 | LCD Cleaning Cloth (Code: 100-360-673-10, 19-028-3125-3) | |

Optional supply

| Name | Type | Code No. | Qty | Comments |
|-----------------------|---------------------|-----------------|------------|---|
| Auto Plotter | ARP-11 | 008-523-050 | 1 | |
| External Alarm Buzzer | OP03-21 | 000-030-097 | 1 | |
| Signal Cable Assembly | MJ-B24LPF0010-100+R | 000-147-880-13 | 1 | For Remote Display Unit |
| | MJ-B24LPF0010-200+R | 000-147-881-13 | | |
| | MJ-B24LPF0010-300+R | 000-147-882-13 | | |
| | MJ-A7SPF0007-050C | 000-154-028-10 | 1 | For NMEA1/2 |
| | MJ-A6SPF0007-100C | 000-159-695-10 | 1 | For Heading Sensor |
| | MJ-A10SPFW0001+R | 001-074-600-10 | 1 | For Remote Display Unit/ External Display splitter cable |
| Flush Mount Kit | OP03-228 | 001-258-030 | 1 | |

1. HOW TO INSTALL THE SYSTEM

NOTICE

Do not apply paint, anti-corrosive sealant or contact spray to plastic parts or equipment coating.

These items contain products that can damage plastic parts and equipment coating.

1.1 Display Unit

Select a location for the display unit by following the information shown below.


- The unit is waterproof, but FURUNO recommends that you install the display unit in a cabinet.
- Keep the unit away from direct sunlight.
- The temperature and humidity must meet the requirements shown in the equipment specifications.
- Set the unit away from the exhaust pipes and vents.
- The installation location must have enough cool air.
- Install the unit where shock and vibration meet the requirements shown in the equipment specifications. If there is heavy vibration, vertically install the display unit on the hanger.
- Keep the unit away from equipment that creates an electromagnetic field, for example, motors and generators.
- For maintenance and checking, leave enough space at the sides and rear of the unit, referring to the outline drawing and provide some additional length in cables.
- Follow the recommended compass safe distances shown on page i to prevent the interference to a magnetic compass.

1.1.1 How to install the display unit


How to install the display unit on a desktop or overhead

Follow the procedure shown below to install the display unit on a desktop or overhead.

1. Unfasten the knob bolts and remove the display unit from the hanger.

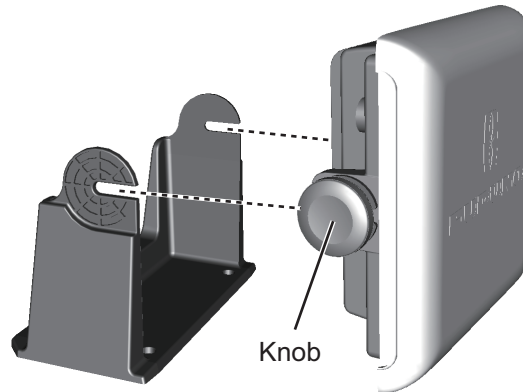

2. Fasten the hanger with four self-tapping screws.

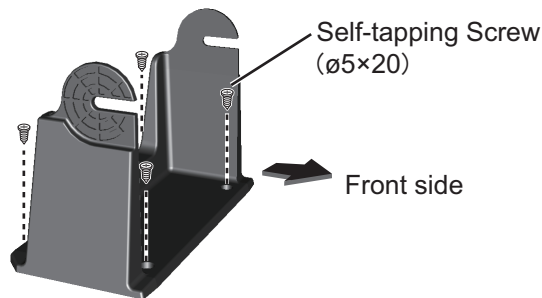

3. Connect all necessary cabling.
4. Set the display unit in the hanger, then fasten the knob bolts.

Note: For overhead installation, make sure the location is strong enough to hold the unit. If necessary, fasten the hanger with the bolts, nuts and washers (local supply).

How to install the display unit in a console

Note 1: Requires Flush Mount Kit OP03-228 (Option).


Note 2: The unit must be installed in a flat area of the console. Ensure there is ample room behind the unit once installed to allow access for maintenance.

Follow the procedure shown below to install the display unit in a console.


1. Prepare a hole in the installation location referring to the outline drawing at the back of this manual.

1. HOW TO INSTALL THE SYSTEM

2. Unfasten the knob bolts and remove the display unit from the hanger.

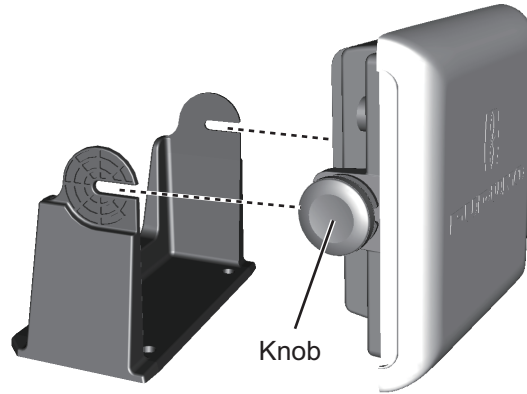

3. Fit the backing sponges, referring to the diagram below.

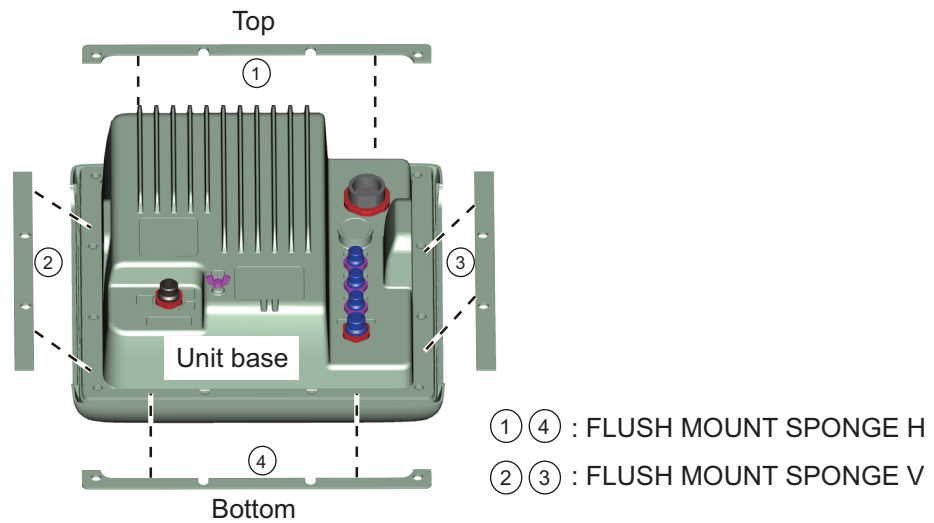


Note 1: Ensure the backing sponges are used correctly. 1 - Horizontal, 2 - Vertical.

Note 2: Take care to place the backing sponges around screw holes and ensure there are no gaps between the sponges at their joining points.


4. Connect all necessary cables to the unit, making sure to leave enough slack for maintenance and service.
5. Insert the unit into the console, making sure that all cabling attached to the unit is not damaged. Ensure the unit is secure before proceeding to the next step.

6. Adjust the flush-mounting fixture by loosening the wingnuts and wingscrews to allow the bolt free movement. Use the figure below for reference.

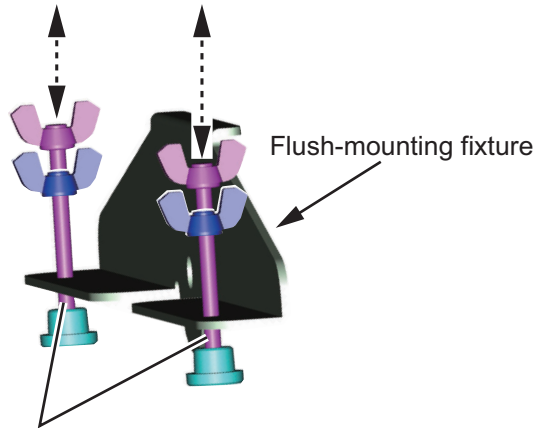


Minimal distance between protector and clamp.

7. Attach the flush-mounting fixture to the unit referring to the diagram below.

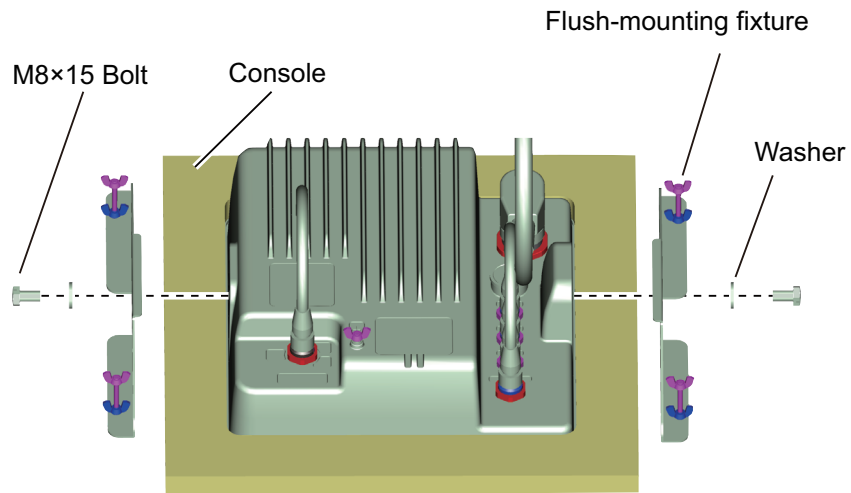

8. Fasten the four wingscrews until the footing is flush against the mounting area. See No. 2 in the figure below for reference.

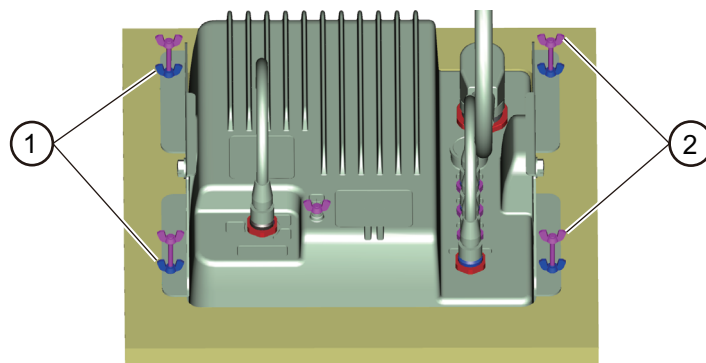


9. Tighten the four wingnuts until the unit is firmly secured. See No. 1 in the figure above for reference.


1.2 Antenna Unit Installation

How to select the location for the antenna unit


- The antenna unit is installed either on top of the wheelhouse or a platform on the radar mast. Install the antenna unit where there is a good complete view. Any obstruction causes blind sectors. For example, a mast with a diameter smaller than the horizontal beamwidth of the radiator causes only a small blind sector. A horizontal spreader or crosstrees in the same horizontal plane creates a large obstruction. Install the antenna unit above, or below a horizontal spreader or crosstrees.
- You cannot put the antenna unit where there is a completely clear view in all directions. Make sure you check for blind sectors on the radar screen after you have installed the radar.
- To reduce the electrical interference, do not run the signal cable near other electrical equipment. Also do not run the cable in parallel to power cables.
- A magnetic compass gives error if the antenna unit is installed near the magnetic compass. See SAFETY INSTRUCTIONS for the compass safe distances to prevent the interference to a magnetic compass.
- Do not apply paint to the radiator aperture. The radar wave cannot be transmitted if there is paint on the radiator.
- If this radar is installed on a large vessel, follow the points shown below:
 - The length of the signal cable between the antenna unit and the display unit is max. 30 m.
 - The output from a funnel or exhaust vent decreases aerial performance and hot gases can damage the radiator. The antenna unit must not be installed where the temperature is more than 55°C.
- The antenna unit can be installed on the bridge, a common mast, or the radar mast.

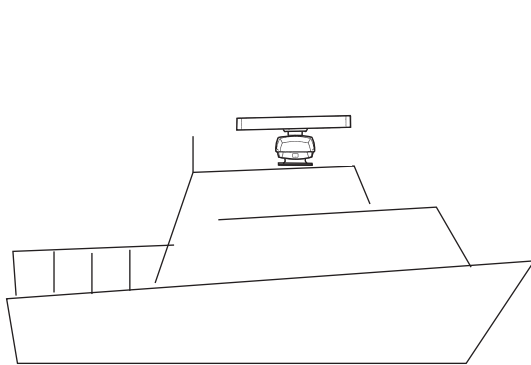

(a) On bridge

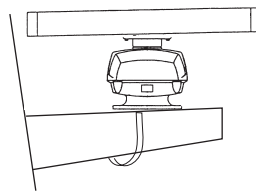

(b) Common mast

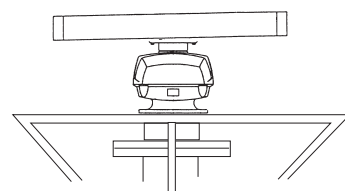

(c) Radar mast


1.2.1 Installation procedure

Refer to the outline drawing at the back of this manual for the dimensions. Make five holes in the platform. Four holes to fasten the antenna unit and one hole for the signal cable.


How to fasten the radiator to the chassis

See the packing list at the back of this manual for the installation materials.

1. Remove the radiator cap from the radiator bracket.
2. Apply marine sealant to the surface of the antenna radiator and the radiator bracket. See the figure shown below for the location.

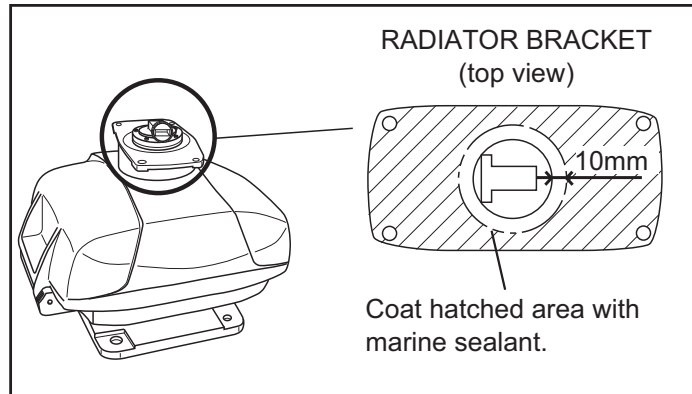

3. Apply the marine sealant to the threads in the four holes on the antenna radiator.
4. Apply the grease to the O-ring and set the O-ring to the radiator bracket.
5. Set the antenna radiator on the radiator bracket.
6. Apply the marine sealant to the radiator bolts (4 pieces). Fasten the antenna radiator to the radiator bracket with the radiator bolts, flat washers and spring washers.

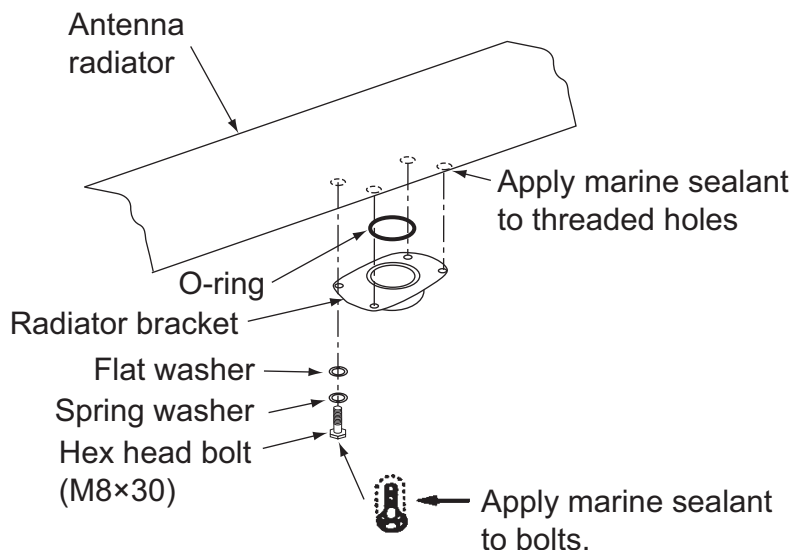

1. HOW TO INSTALL THE SYSTEM

1.2.2 How to install the antenna unit


You can install the antenna unit by one of the two methods shown below.

- Use the outside holes
- Use the inside holes

How to use outside holes of the antenna housing



Use the hex head bolts (supplied) to install the antenna unit as shown in the illustration below.

1. Put the rubber mat (supplied) on the platform.

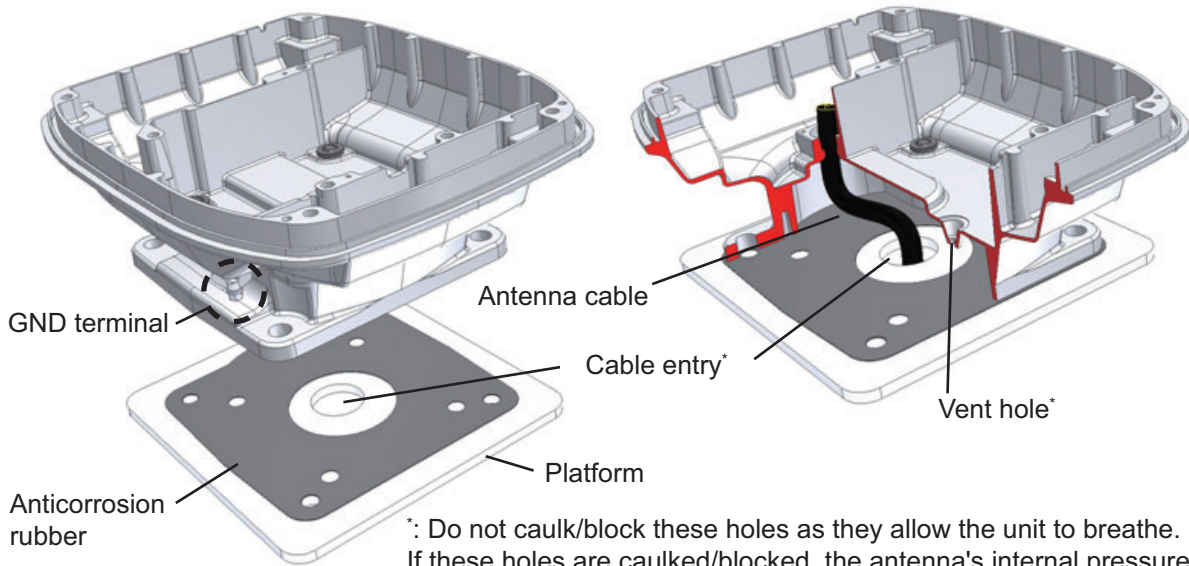


*: Do not caulk/block these holes as they allow the unit to breathe. If these holes are caulked/blocked, the antenna's internal pressure becomes negative. Negative pressure causes internal water leakage.


2. Put the antenna unit on the rubber mat. Align the position of the antenna unit as shown in the illustration below.

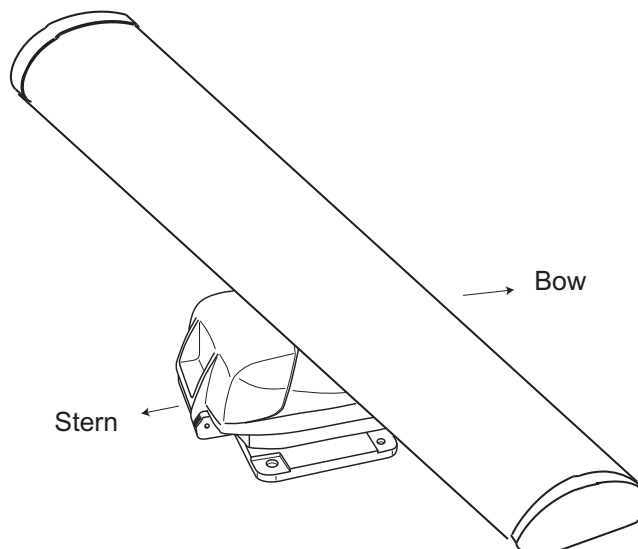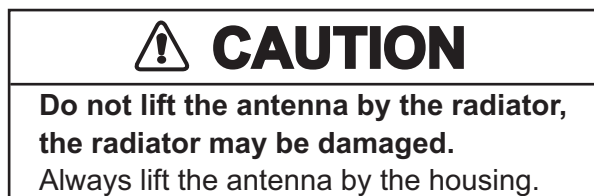


- Set four hex head bolts (M12×60, supplied) and seal washers (supplied) from the top of the antenna housing, as shown below.

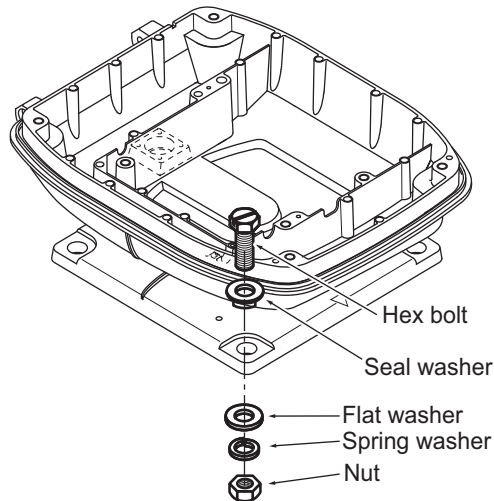

- Set the flat washers (M12, supplied), spring washers (supplied) and nuts (supplied) to the hex head bolts. Tighten by turning the nuts. Do not tighten by turning the hex head bolts, to prevent damage to the seal washers.

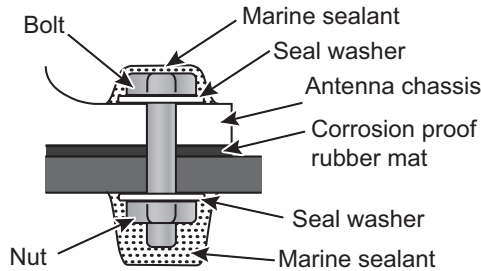


- Apply anti-corrosive sealant to the flat washers, spring washers, nuts and visible parts of bolts.
- Prepare the ground point on the platform. Use an M6×25 bolt, nut and flat washer (supplied). The ground point must be within 300 mm from the ground terminal on the antenna unit.
- Run the ground wire (RW-4747, 340 mm, supplied) between the ground terminal and the ground point.
- Apply marine sealant to the ground terminal and ground point as shown below.

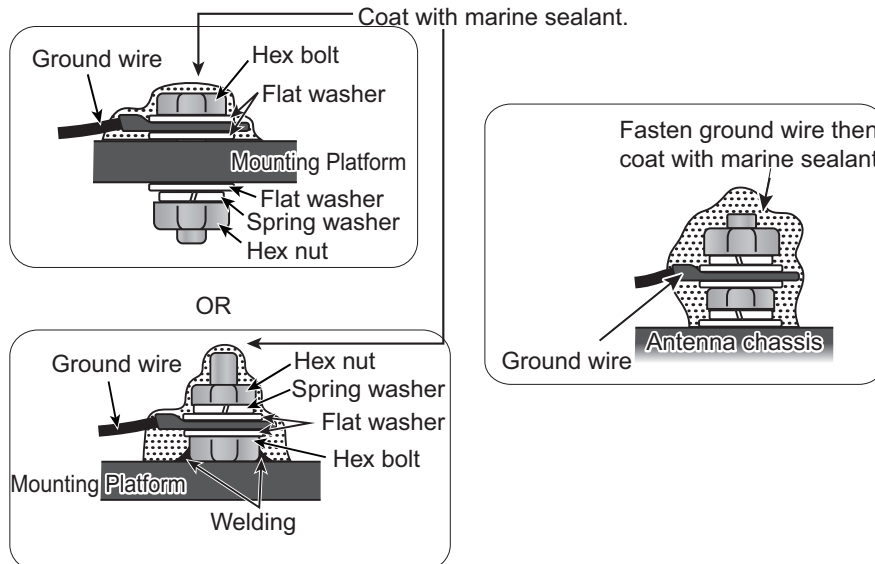

1. HOW TO INSTALL THE SYSTEM

1.2.3 How to use the inside holes of the antenna housing (FR-8045)

This method requires removal of the RF unit from the antenna unit to access the inside fixing holes. Use four hex head bolts, flat washers, spring washers and nuts (local supply) to install the antenna unit. Check the length of the bolts before you install.

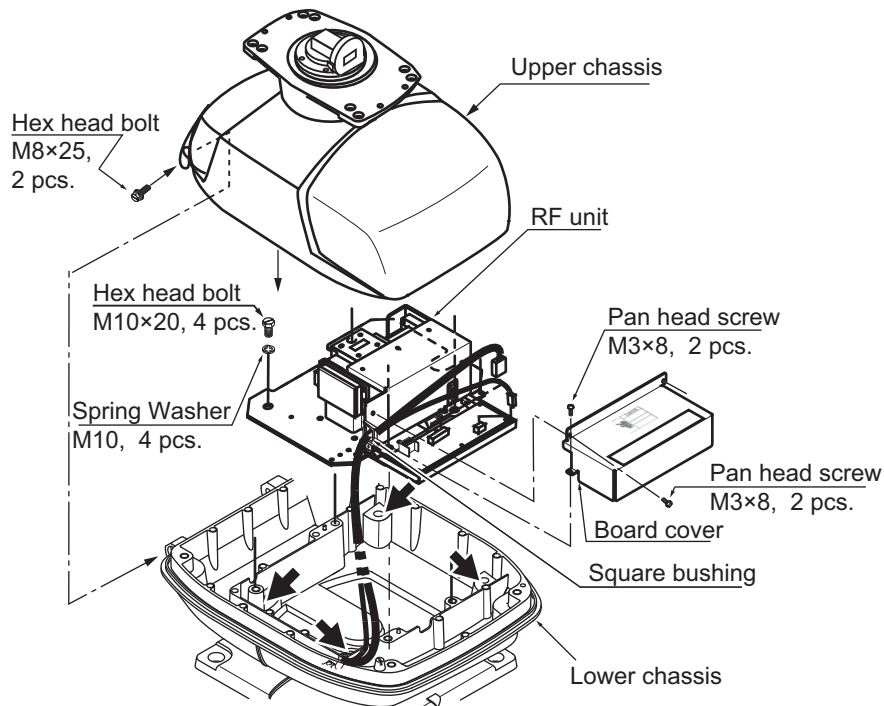


Antenna unit chassis, upper chassis separated

1. Unfasten four bolts on the cover to open the antenna unit.
2. Disconnect the connectors connected between the upper chassis and the lower chassis.
3. Remove two hex head bolts (M8×25) to separate the upper chassis from the lower chassis.
4. Loosen four pan head screws to remove the cover from the pc board.
5. Remove the connector from the RF unit.
6. Loosen four hex head bolts to remove the RF unit.
7. Set the corrosion-proof rubber mat (supplied) to the support platform.
8. Cut the rubber bushings in the fixing holes and put four bolts from the inside of the lower chassis. Fasten the lower chassis to the support platform with the spring washers, flat washers and nuts (local supply). Apply marine sealant to the flat washers, nuts and visible parts of bolts.
9. Assemble the RF unit, cover and chassis.
10. Set four caps (supplied) into the outside fixing holes.
11. Prepare the ground point on the platform. Use an M6×25 bolt, nut and flat washer (supplied). The ground point must be within 300 mm from the ground terminal on the antenna unit.
12. Run the ground wire (RW-4747, 340 mm, supplied) between the ground terminal and the ground point.
13. Apply the marine sealant to the ground terminal and ground point. See the illustration on page 8 for instructions.


1.2.4 How to connect the signal cable (FR-8045)

The signal cable runs from the display unit to the antenna unit. To reduce the electrical interference, do not run the signal cable near other electrical equipment. Also do not run the cable in parallel to power cables. Put the cable through the hole and apply sealing compound around the hole for waterproofing.

1. Loosen four bolts, open the antenna cover, and set the stay.

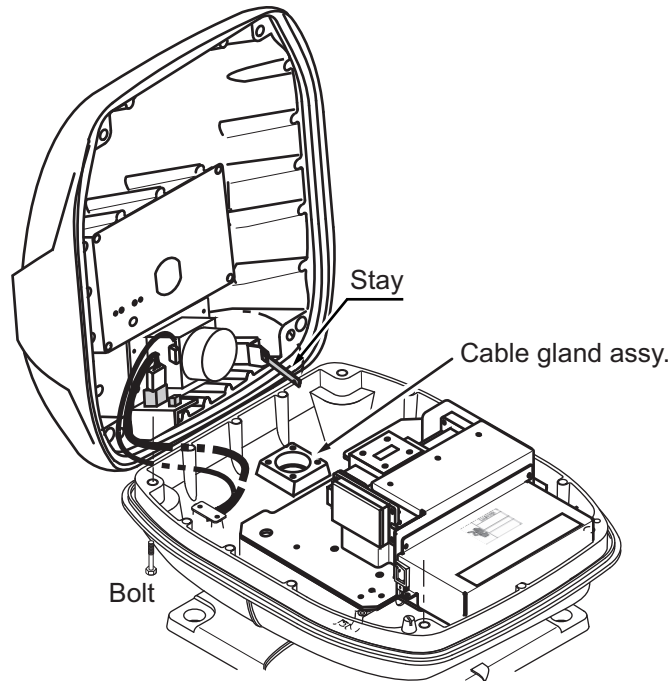


2. Loosen the cable gland assembly (clamping plate, gasket, flat washer).
3. Put the signal cable with the connector through the bottom of the antenna unit chassis. Put the cable through the gland assembly as shown below.

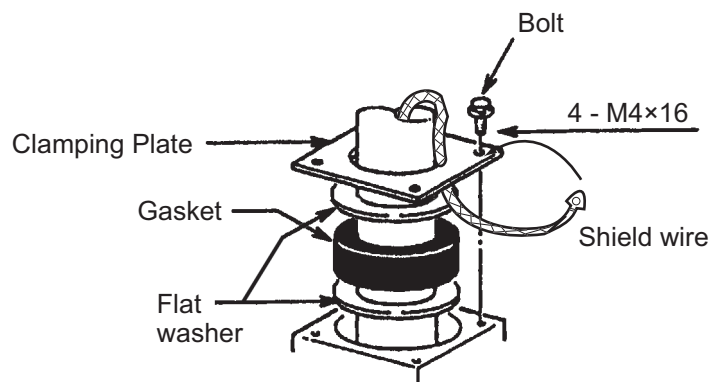


4. Fasten the crimp-on lug of the shield wire to one of the four fixing bolts of the cable gland assembly.

1. HOW TO INSTALL THE SYSTEM


- Put the signal cable so that no more than 4 cm of the sheath is visible, as shown in the figure below. Tighten the fixing bolts.

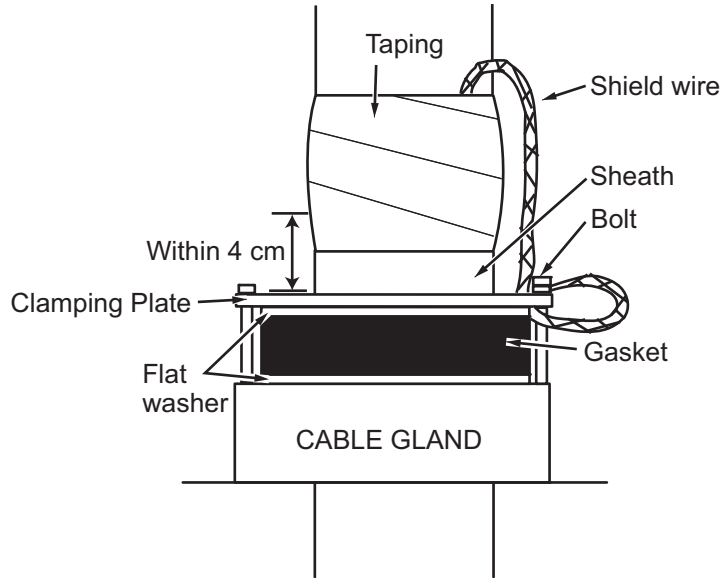

- Loosen four screws in the figure shown below and open the cover.

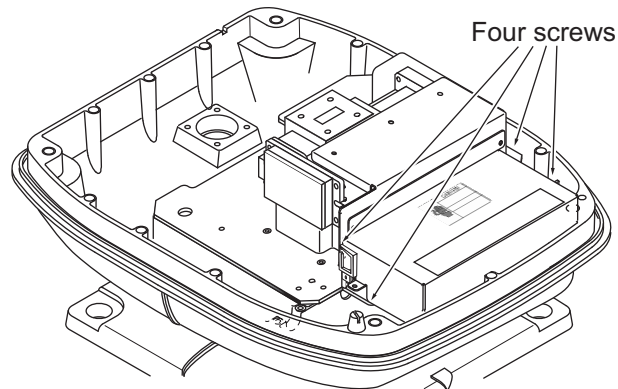


- Put the signal cable through the cable protector.

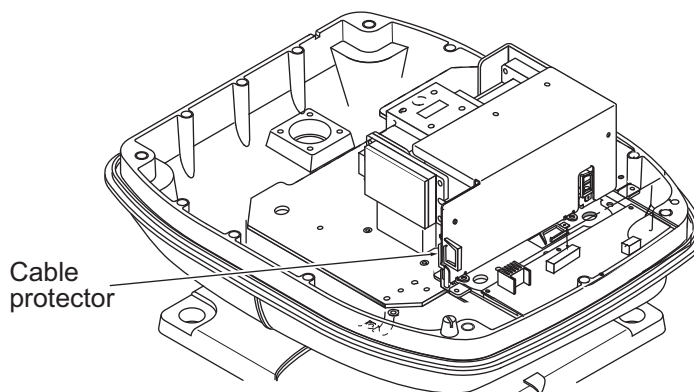


- Connect the signal cable to the RTB Board (03P9249). See the interconnection diagram and the figure shown on page 12.

9. Attach three EMI cores to the signal cable as shown below.

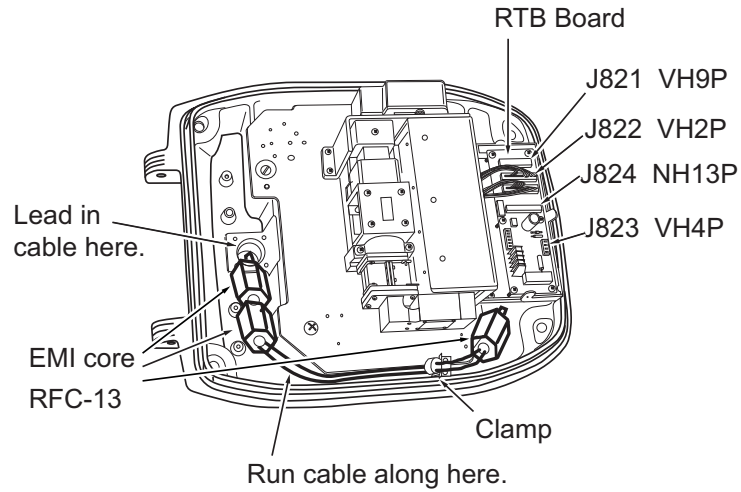

10. Fasten the signal cable with the cable clamp.
 11. Undo the stay and close the cover. Securely fasten the scanner bolts.

Note: When you close the cover, set the gaskets to the grooves in the bottom chassis, then tighten the bolts.

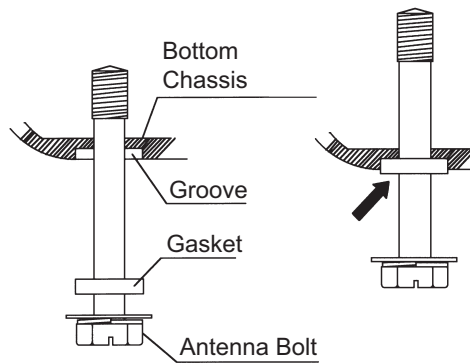


Torque : 9.8 ±0.1 Nm

1. HOW TO INSTALL THE SYSTEM

1.2.5 How to use the inside holes of the antenna housing (FR-8065/FR-8125/FR-8255)

This method requires removal of the RF unit in the antenna unit to access inside fixing holes. Use hex head bolts, flat washers, spring washers and nuts (local supply) to mount the antenna unit, confirming length of bolts.

1. Unfasten four antenna bolts on the cover to open the antenna unit.
2. Unfasten four screws on the RTB cover to remove it.
3. Unplug connector J827 and J834 on the RTB board
4. Separate upper chassis from lower chassis by removing two hex head bolts (M8x25).
5. Remove RF unit by unfastening four hex head bolts.

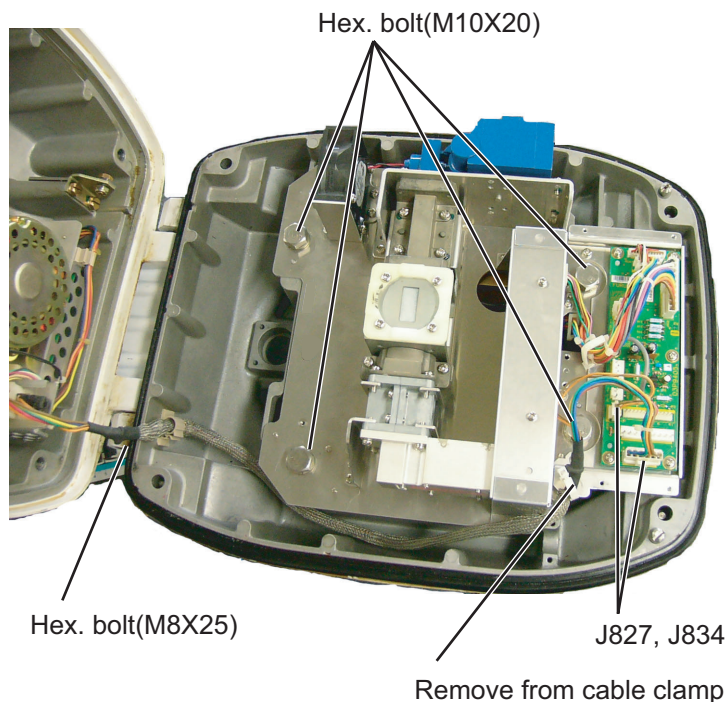

Antenna unit, opened

6. Lay the corrosion-proof rubber mat (supplied) on the mounting platform.
7. Fasten the lower chassis to the mounting platform with hex head bolts, spring washers, flat washers and nuts (local supply), and then coat flat washers, nuts and exposed parts of bolts with marine sealant. Cut a slit in the rubber bushing and insert bolt into the bushing. Do not use seal washers.
8. Reassemble RF unit, cover and chassis.
9. Set four knob caps (supplied) into outside fixing holes.
10. Do steps 6-8 in "Outside fixing holes" on page 8.


1.2.6 How to connect the signal cable (FR-8065/FR-8125/FR-8255)

Only the signal cable runs from the display unit (power supply unit in case of FR-8255) to the antenna unit. In order to minimize the chance of picking up electrical interference, avoid where possible routing the signal cable near other onboard electrical equipment. Also, avoid running the cable in parallel with power cables. Pass the cable through the hole and apply sealing compound around the hole for waterproofing.


Fabricating the signal cable

This type of signal cable is used with other models of radar. For these models, the following fabrication is required.


1. Remove shrink tubing from the signal cable.

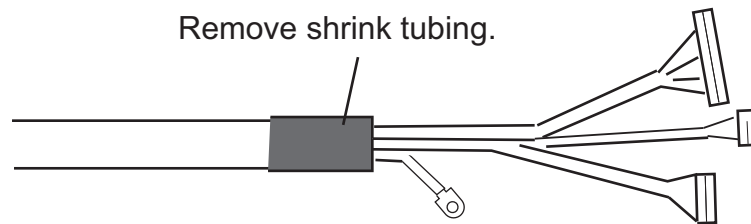

2. Remove vinyl sheath approx. 50 mm.

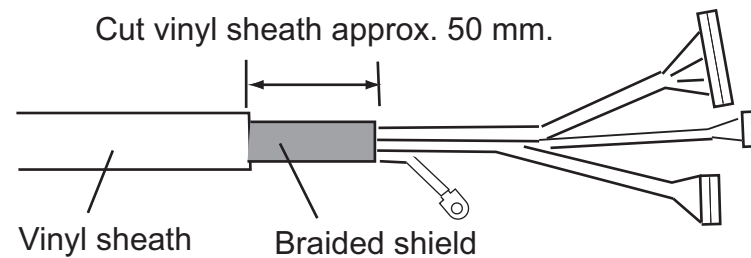


3. Wrap vinyl tape at the end of the vinyl sheath.

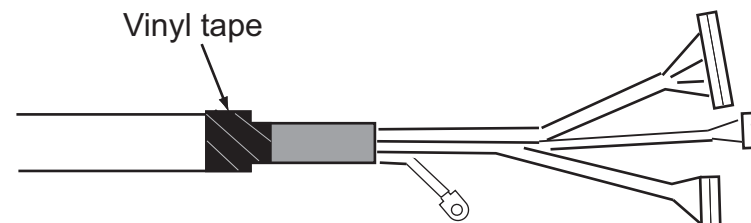

1. HOW TO INSTALL THE SYSTEM


Connecting the signal cable

1. Open the antenna cover by loosening four bolts, and then fix the stay.

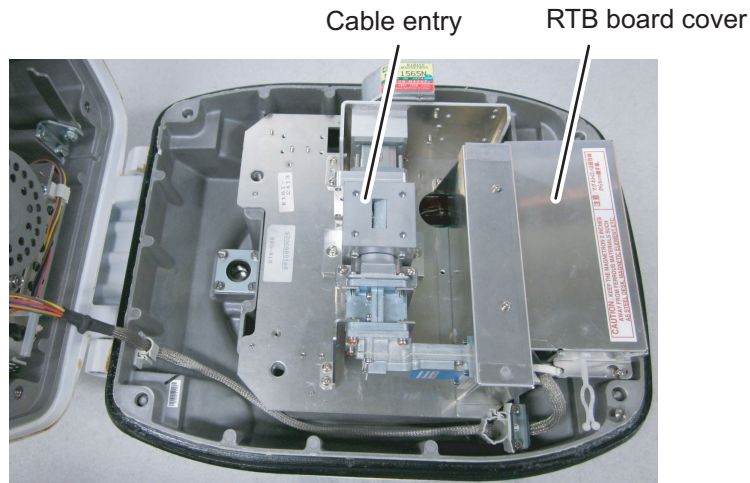

Antenna unit chassis, cover opened


2. Unfasten the cable gland assembly (clamping plate, gasket, flat washer). The clamping plate may be discarded.
3. Pass the signal cable with connector through the bottom of the antenna unit chassis. Pass the cable through the gland assembly as shown below.

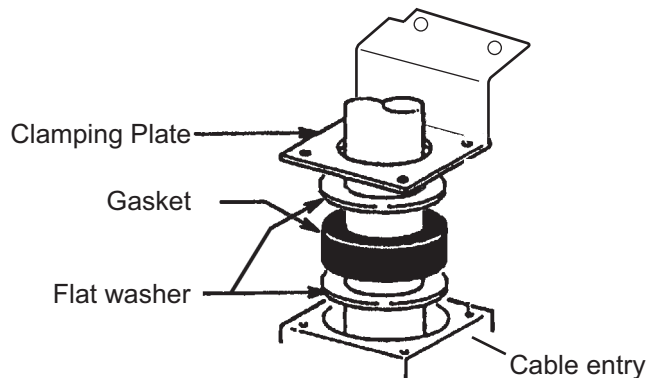

Passing the signal cable through the cable gland assembly


4. Fasten the clamping plate with four bolts. Using one of the four bolts, fasten the crimp-on lug to the shield wire.

5. Fasten the shielded part of the signal cable with shield clamp (installation material) as shown below.

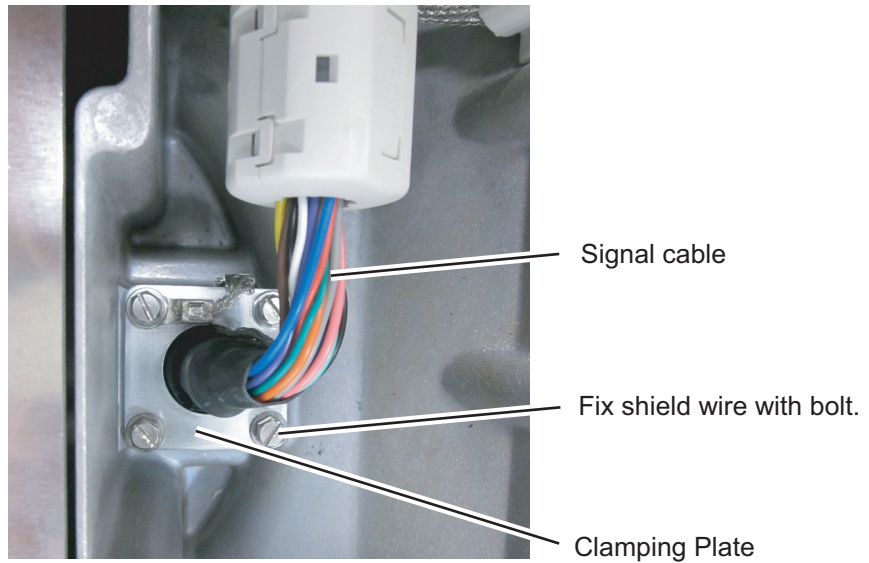

How to fix signal cable in cable gland

6. Unfasten four screws to remove the RTB board cover.
7. Connect the plugs of the signal cable to the RTB board.
FR-8065, FR8125 : J821, J823, J824, J822
FR-8255 : J821, J823, J824, J820

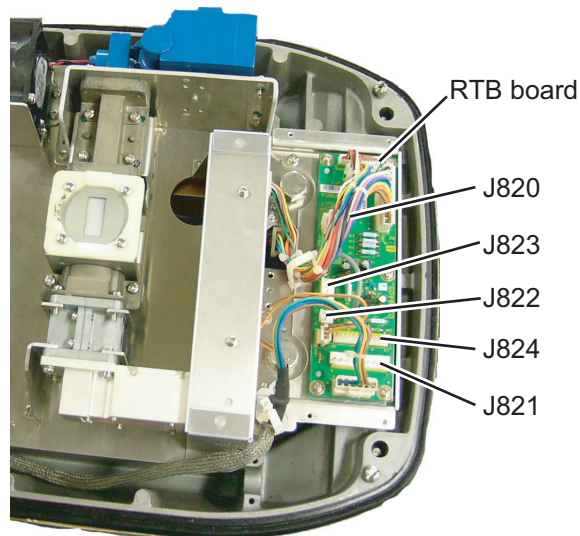


Connecting to the RTB board

8. Reattach the RTB board cover.

1. HOW TO INSTALL THE SYSTEM

9. Attach three EMI cores to the signal cable as shown below.

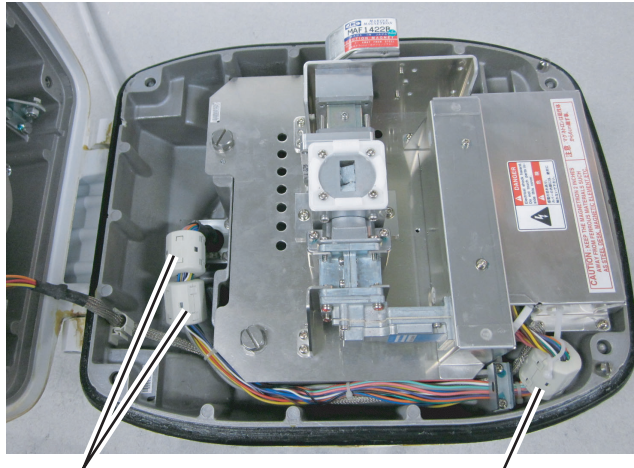


EMI Core RFC-13 (2 pcs)


EMI Core RFC-H13 (1 pc)

Antenna unit chassis, cover opened


10. Fix the signal cable with the cable clamp as follows.
a) Dismount the cable clamp plate and remove clamp and gasket.

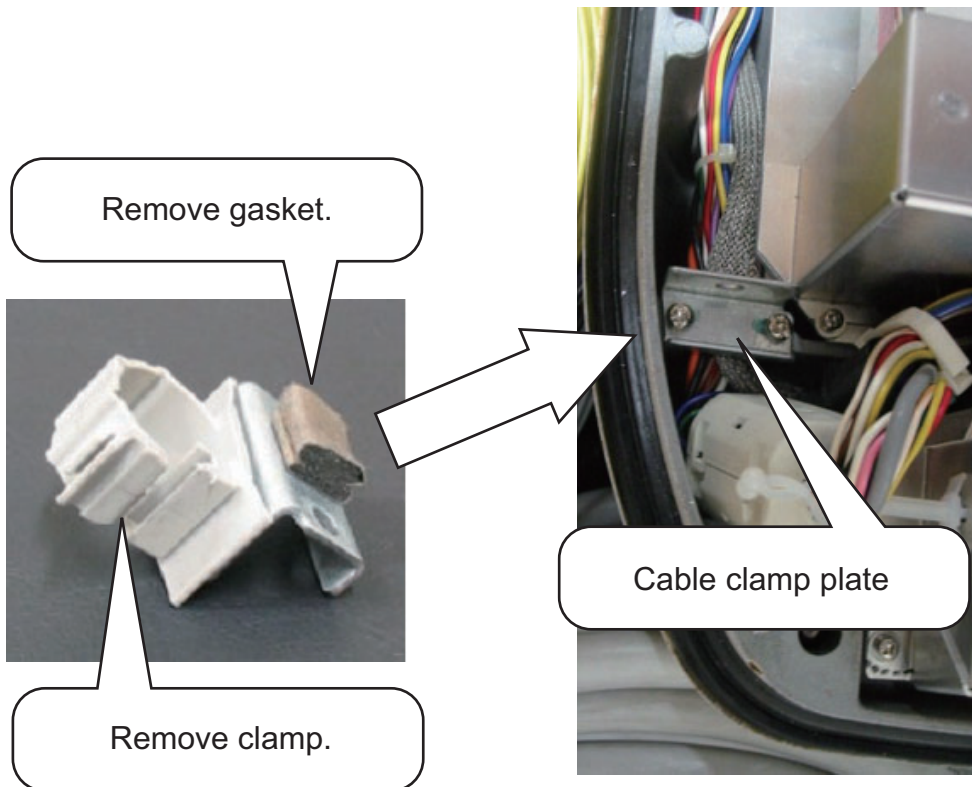

b) Run the signal cable as shown below.

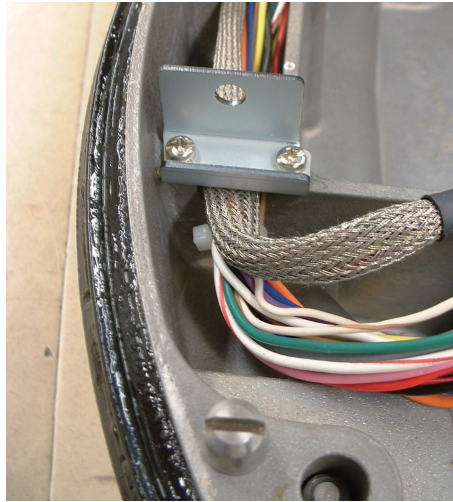


c) Fix the signal cable with cable clamp as shown below.

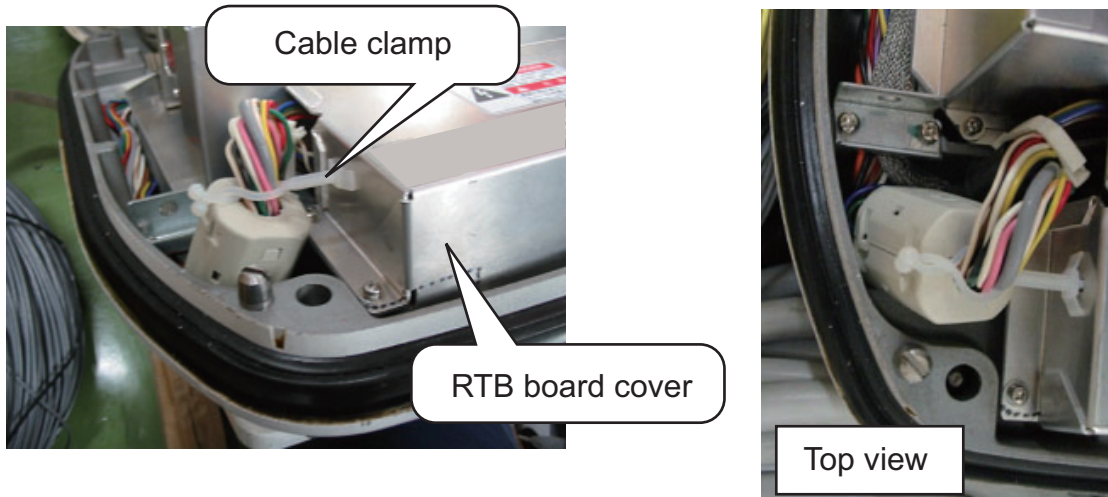

11. Release the stay and close the cover. Loosely fasten the antenna bolts; you will have to make some adjustments inside after completion of wiring.

Note: When you close the cover, set the gaskets to the grooves in the bottom chassis, then tighten the bolts.

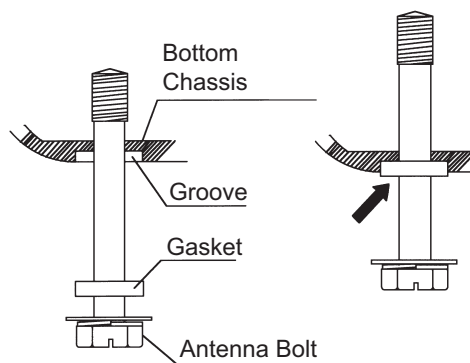

Torque : 9.8 ± 0.1 Nm


1. HOW TO INSTALL THE SYSTEM

1.3 Power Supply Unit

A power supply unit is shipped with the FR-8255, because of its high power consumption.

The power supply unit can be installed almost anywhere provided the location is dry, well-ventilated, sufficient maintenance space is provided and is installed within 5 m (cable length) from the display unit. To fix the unit, use four self-tapping screws (5x20).

Note: Do not install the power supply unit on the overhead; install it on the deck or bulkhead.

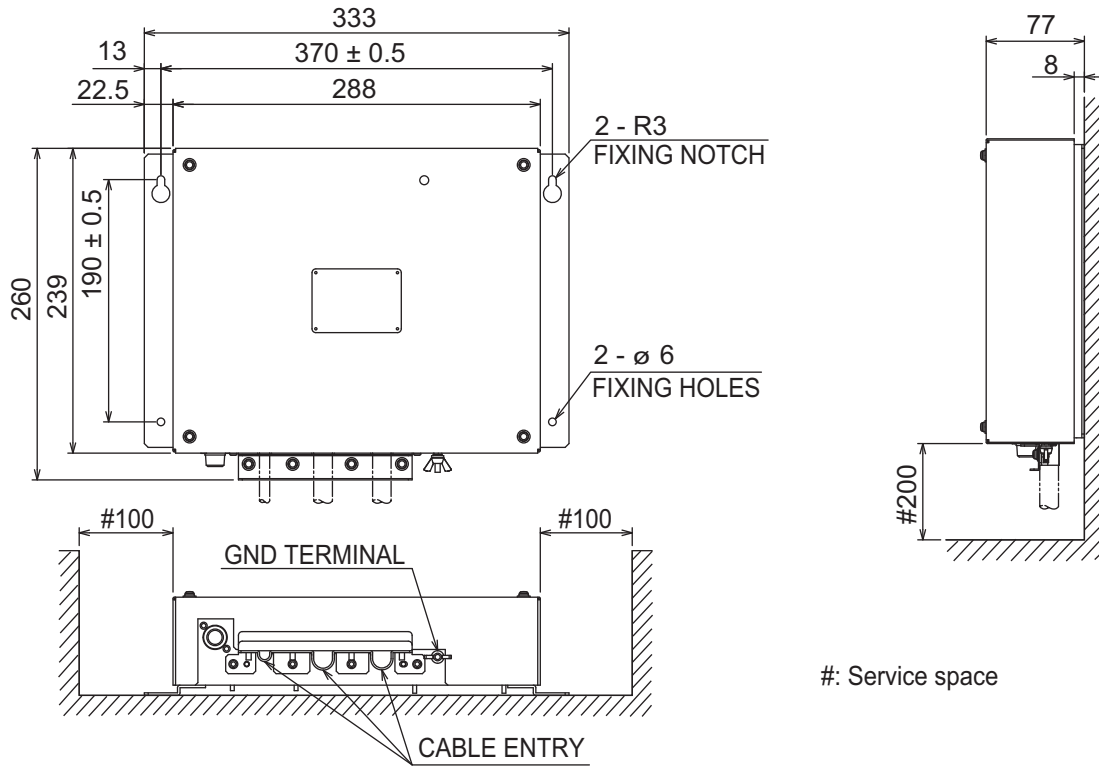


Power supply unit

#: Service space

2. CABLE CONNECTION AND WIRING

2.1 Standard Connection

Connect all necessary cables, using the figure and table below for reference.

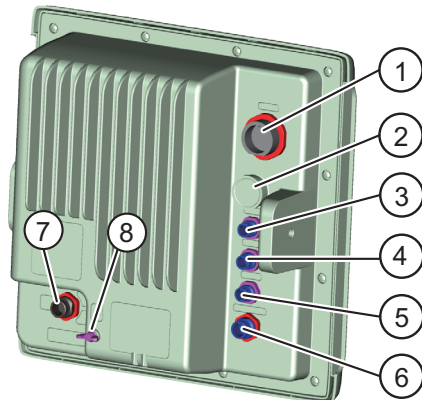


| No. | Description | Cable Required |
|-----|--|--|
| 1 | Antenna cable to antenna unit (FR-8045) | MJ-B24LPF0005-*+R *: 50/100/150/200/300 |
| | Antenna cable to antenna unit. (FR-8065/8125) | MJ-B24LPF0012-*+R *: 100/150/200/300 |
| | Antenna cable to antenna unit. (FR-8255) | <ul style="list-style-type: none"> • MJ-B24LPF0011-050+R • RW-9771 (10m, 15m, 20m, 30m) • VL3P-VV-S2X2C-AA050 |
| 2 | USB (Used by service man only). | |
| 3 | Heading Sensor. (AD-10 format) | (MJ-A6SPF0007-100C) |
| 4 | NMEA1 input/output. (Navigational equipment) | (MJ-A7SPF0007-050C) |
| 5 | NMEA2 input/output. (Navigational equipment) | (MJ-A7SPF0007-050C) |
| 6 | Option. (External buzzer, Remote display) | (See section 4.2 for cabling.) |
| 7 | Power in. To ship's power (pos = white, neg = black) | (MJ-A3SPF0017-050ZC) |
| 8 | Grounding. Connect from here to ship's terminal. | IV-2sq. |

2.2 Wiring the Power Supply Unit (FR-8255 only)

2.2.1 Cabling


1. Unfasten four screws to remove the cable clamp.
2. Unfasten four screws to remove the cover.
3. Attach the connectors of three cables as shown in the figure below.

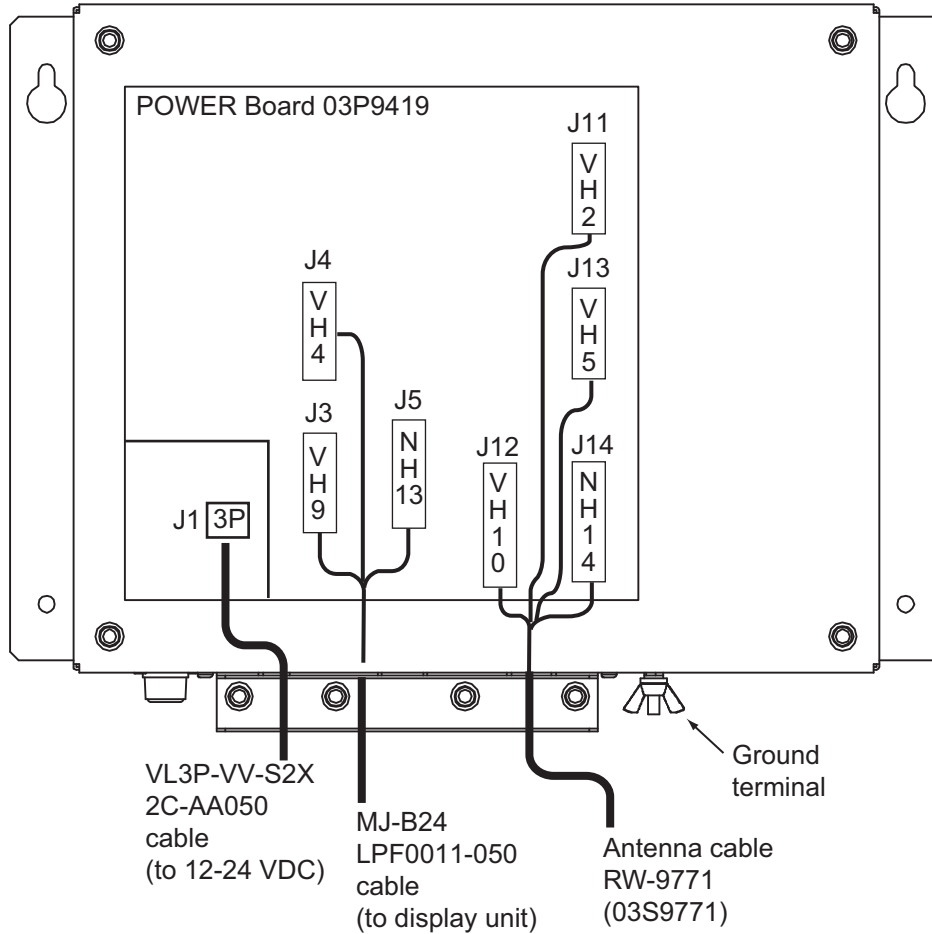

4. Lay three cables in respective slots referring to the figure above.
5. Reattach the cover and the cable clamp.
6. Connect a ground wire (local supply, IV-2sq) between the ground terminal and ship's ground.

2.2.2 Jumper block, slide switch setting

The jumper block JP1 and slide switch S112 on the PWR board (03P9419) must be set according to radar model. Open the unit, locate JP1 and S112 and set them as below.

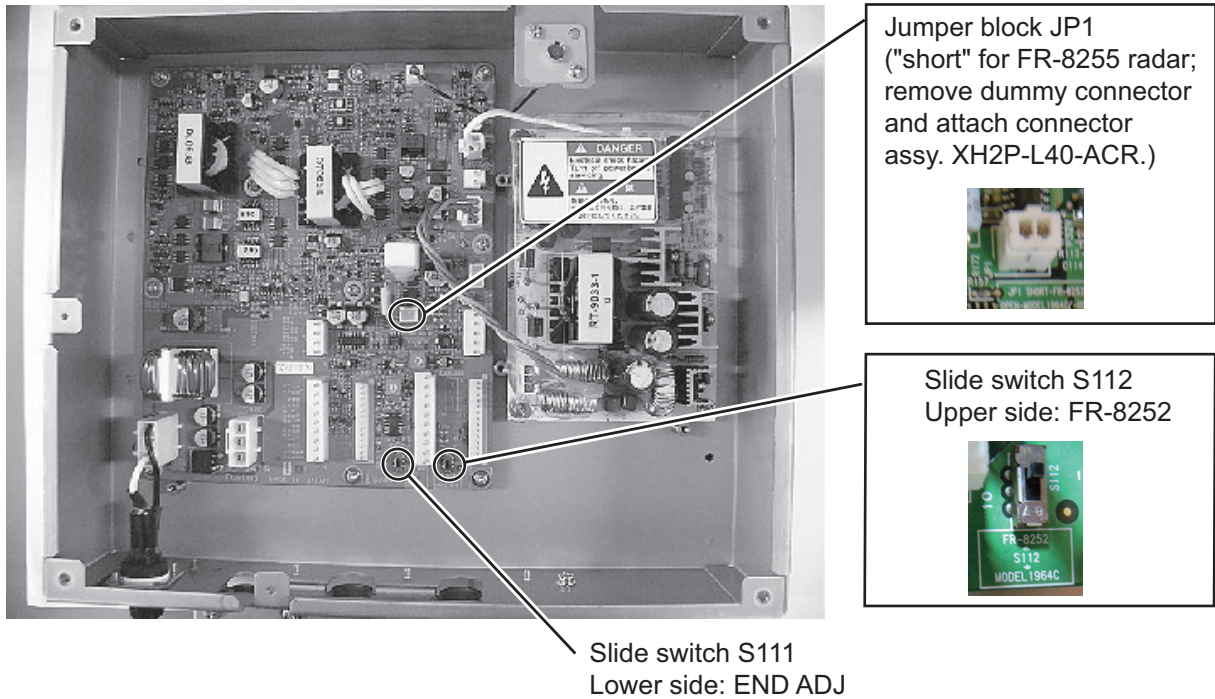

| Jumper block, slide switch | Function | Setting |
|----------------------------|--|----------------------|
| JP1 | Enables/disables motor slow start circuit. | Short (disable) |
| S111 | For "Model" series only. | Lower side (END ADJ) |
| S112 | Radar type selection. | Upper side (FR-8252) |

2.2.3 Power requirement, replacement of fuses

Power requirement

The power for the power supply unit and display unit must be drawn from the same power switch on the power terminal board.

Replacement of fuses

The power supply unit is shipped with a 15 A fuse(for connection to 12 VDC battery). Replace the fuse with a 7 A (supplied) when the ship's battery is 24 VDC.

2.3 Data Signals

| | |
|--------------------------------|---|
| Position | GNS>GGA>RMC> GLL |
| Course true | VTG>RMC |
| Course magnetic | VTG>RMC (true) |
| Speed over the ground | VTG>RMC |
| Water speed and heading | VHW |
| Distance to waypoint | BWR>BWC>RMB |
| Destination waypoint, true | BWR>BWC>RMB |
| Destination waypoint, magnetic | BWR>BWC |
| Heading (true) | THS>HDT>VHW (true)>HDG>HDM>VHW (magnetic) |
| Heading (magnetic) | HDG> HDM>VHW (magnetic)THS>HDT>VHW (true) |
| Magnetic variation | HDG>RMC |
| Cross-track error | XTE>RMB |
| Depth | DPT>DBT |
| Temperature | MTW |
| Wind (true) | MWV>VWT |
| Wind (relative) | MWV>VWR |
| Time | ZDA |

2.4 Input/Output Ports

2.4.1 HDG port

This port is for AD-10 format.

| Parameter | Rating | Remarks | Circuit Diagram |
|-----------------|--------------------------|------------------|--|
| Forward Current | 50mA | Absolute Maximum | <p>The diagram shows a circuit for the HDG port. It features a 490Ω resistor and a diode connected to a Photocoupler. The input signal is labeled GYRO_DATA_H and the output is labeled GYRO_DATA_C. The diode is oriented to allow current flow from the input to the output.</p> |
| Reverse Voltage | 6V | Absolute Maximum | |
| Forward Voltage | 1.1V (TYP) 1.4V (MAX) | $I_F=4mA$ | |
| Parameter | Rating | Remarks | Circuit Diagram |
| Forward Current | 50mA | Absolute Maximum | <p>The diagram shows a circuit for the HDG port. It features a 490Ω resistor and a diode connected to a Photocoupler. The input signal is labeled GYRO_CLK_H and the output is labeled GYRO_CLK_C. The diode is oriented to allow current flow from the input to the output.</p> |
| Reverse Voltage | 6V | Absolute Maximum | |
| Forward Voltage | 1.1V (TYP) 1.4V (MAX) | $I_F=4mA$ | |

2.4.2 NMEA1 ports

Transmitter

This port complies with “IEC 61162-1 Ed4”.

| Parameter | Rating | Remarks | Circuit Diagram |
|-----------------------------|------------------------|------------------|-----------------|
| “H” level output current | -60mA | Absolute Maximum | |
| “L” level output current | 60mA | Absolute Maximum | |
| Differential output voltage | 1.5V (MIN) 5V (MAX) | Load 54Ω | |

Receiver

This port complies with “IEC 61162-1 Ed4”. Also, this port is an optocoupler used to isolate I/F terminal on RD terminal. Isolation voltage is 3750 Vrms (absolute maximum rating).

| Parameter | Rating | Remarks | Circuit Diagram |
|-----------------|--------------------------|------------------|-----------------|
| Forward Current | 50mA | Absolute Maximum | |
| Reverse Voltage | 6V | Absolute Maximum | |
| Forward Voltage | 1.1V (TYP) 1.4V (MAX) | $I_F=4mA$ | |

2.4.3 NMEA2 ports

This port complies with “IEC 61162-1 Ed4”.

Circuit specification is the same as NMEA1 port.

3. EQUIPMENT SETTINGS

3.1 Setting the Language


After installation, on first power-up, select a language as follows:

1. Press the  /**BRILL** key to turn on the power.

"Now Initializing" appears and after a short time the window below appears.

| Language | English |
|----------|-----------|
| Langue | Français |
| Idioma | Español |
| Sprache | Deutsch |
| Lingua | Italiano |
| Idioma | Português |
| Sprog | Dansk |
| Språk | Svenska |
| Språk | Norsk |
| Kieli | Suomi |
| Γλώσσα | Ελληνικά |
| 语言 | 中文 |
| 言語 | 日本語 |
| भाषा | ภาษาไทย |
| 언어 | 한국어 |
| Язык | Русский |
| Bahasa | Indonesia |
| ភាសា | ខ្មែរ |


2. Use the **CursorPad** to select a language required and press the **ENTER** key. The window shown below appears.

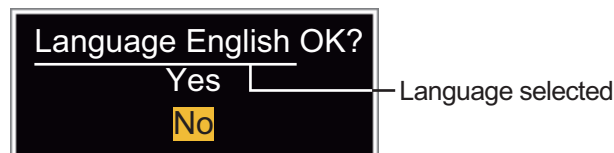

3. Select [Yes] and press the **ENTER** key.

3.2 How to Set the Purpose

1. Press the **MENU** key. The main menu will appear on the screen.
2. Press the **▲** or **▼** button to select [Factory]. The factory menu title bar will appear in gray color right side of the screen.
3. Hold down the **CANCEL/HL OFF** key and press the **MENU** key five times to activate the [Factory] menu.

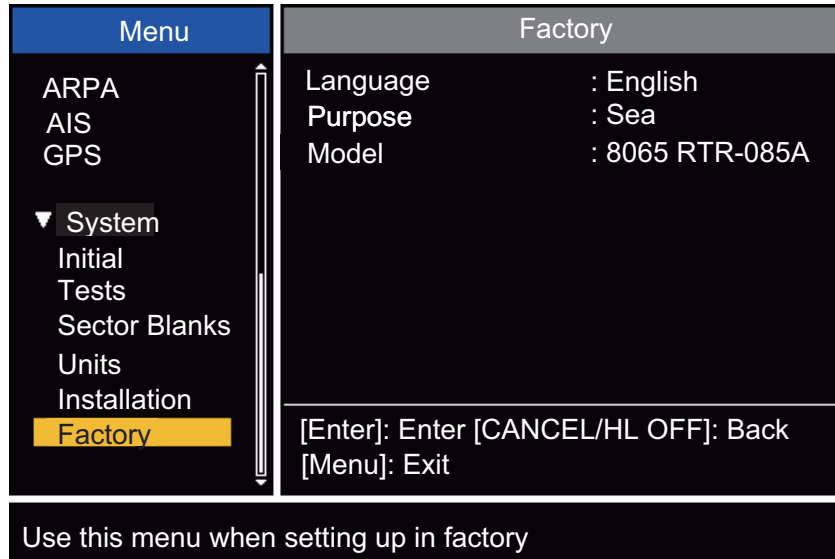

4. Press the **ENTER** key. The [Factory] menu becomes active and the cursor moves to the right-hand column.
5. Press **▲** or **▼** to select [Purpose].
6. Press the **ENTER** key to show the setting window.



7. Press **▲** or **▼** to select the purpose required.
8. Press the **ENTER** key to set the purpose.
9. Press **▼** to select [Model].
10. Press the **ENTER** key to show the setting window. The default setting is [8065 RTR-085A].
Note: For FR-8045, the default is [8045 RTR-088A]. No adjustment is necessary, go to step 13.





11. Press **▲** or **▼** to select the appropriate model.
12. Press the **ENTER** key to set the model.
13. Press the **CANCEL/HL OFF** key to return to the main menu.

3.3 How to Enter Initial Settings

After you complete setting the radar purpose, enter the Initial Settings as follows:

1. On the main menu, press ▲ or ▼ to select [Installation].

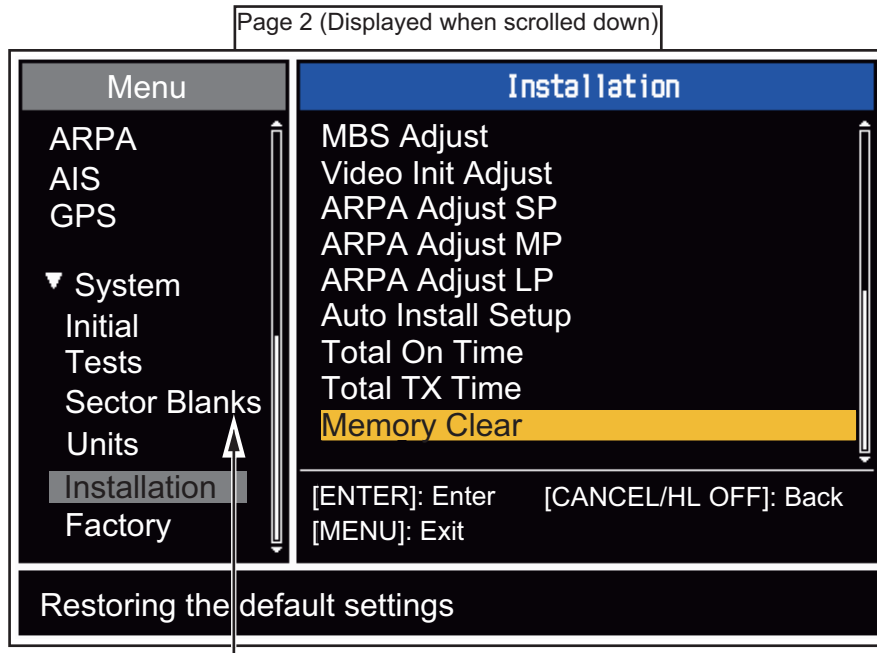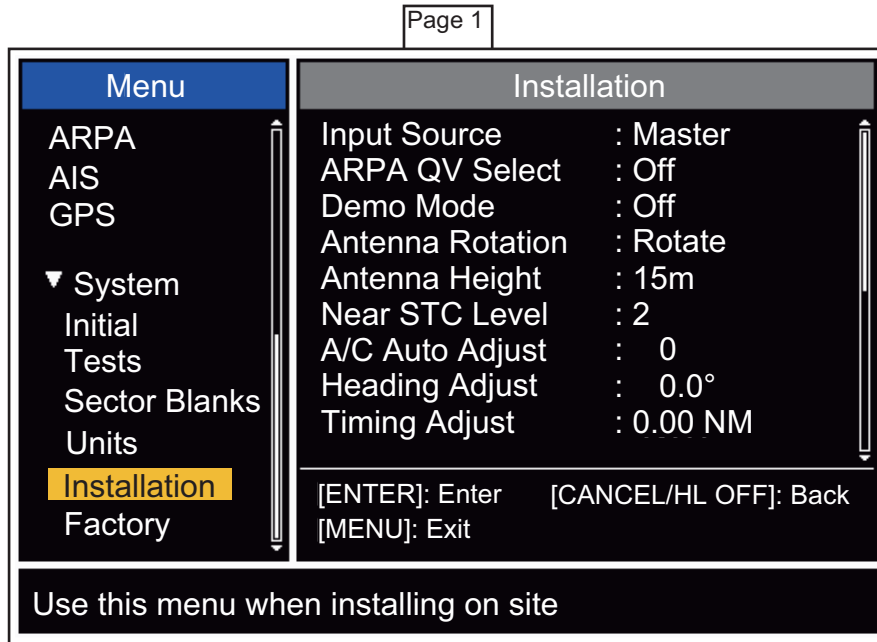

Set the [Sector Blank] to [Off] in order to execute [Auto Installation Setup] in the [Installation] menu.

2. Press the **ENTER** key. The [Installation] menu becomes active and the cursor moves to the right-hand column.
3. Press ▲ or ▼ to select an item from the [Installation] menu.
4. Press the **ENTER** key to show the settings window.
5. Press ▲ or ▼ to select an option.
6. Press the **ENTER** key to set the option.
7. Press the **MENU** key to close the main menu.

Basic settings

[Input source]: Select the input source from [Master] and [Slave]. The default setting is [Master].

Master The display unit operates as the main radar.

Slave The display unit operates as a remote display. For remote displays, adjust the [Video Init Adjust] and [Timing Adjust].
(See page 30 and page 29, respectively.)

[ARPA QV Select]: Set to [On] to display quantized video on the screen. Set to [Off] for normal use.

[Demo Mode]: Set to [On] to active demo mode. Set to [Off] for normal use.

[Antenna Rotation]: [Rotate] (default setting) transmits the radar pulses by rotating the antenna. [Stop] transmits the radar pulses without rotating the antenna.

[Antenna Height]: Set the height of the antenna above the water surface. The options are 5, 10, 15, 20, 30, 40 and 50m. The default setting is 15m.

[Near STC level]: Set the STC curve to a near distance. The options are 1, 2, 3 and 4. "4" has the strongest effect.


[A/C Auto Adjust]: Adjust the performance of the automatic A/C.

[Memory Clear]: Restore the default settings. [Purpose], [Type] and [Source] are not changed. When turning on the power after a memory clear, the language selection window appears. (See page 25.)

Heading adjustment

Ensure you have installed the antenna unit correctly, so that the unit faces towards the bow of the ship. A target at the front of the ship, aligned with the bow, must appear on the heading line (zero degrees). If the target does not appear on the heading line, follow the procedure below to adjust the heading.

1. Set the ship toward an acceptable target (for example, a ship at anchor or a buoy) at a range between 0.125 and 0.25 nautical miles.
2. Transmit the radar at a range setting of 0.25 nautical miles and measure the bearing of that target relative to the ship using an EBL.
3. Open the [Installation] menu and select [Heading Adjust].
4. Press the **ENTER** key to show the setting window for [Heading Adjust]. (See figure below)

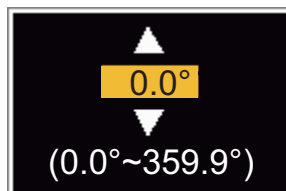

5. Press ▲ or ▼ to set the value measured in step 2. Check that the target appears on the heading line. If necessary repeat steps 1 to 5.
6. Press **ENTER** to complete the adjustment.

3. EQUIPMENT SETTINGS

How to automatically set the equipment

The equipment can automatically adjust the tuning, timing and video.

Note: Before you proceed, transmit the radar for more than 10 minutes on a long range and ensure [Sector Blank] is set to [OFF].

1. Transmit on the maximum range.
2. Select [Auto Install Setup] from the [Installation] menu and press **ENTER**.


The tuning adjustment begins automatically and the message "Tuning adjusting" appears during the tuning adjustment stage. After the tuning adjustment is complete, the timing and video are adjusted, in that order. The messages "Timing adjusting" and "Video adjusting" will appear during those stages of the [Auto Install Setup]. After all the adjustments are completed, the window disappears.

Note: If any of the results require adjustment for your conditions, use the manual adjustment procedures below to manually adjust them.

Manual timing adjustment

This adjustment gives correct radar performance on short ranges. The radar measures the time required for a transmitted echo to go to the target and return to the source. The received echo appears on the display according to the measured time. The sweep must start from the center of the display.

A trigger pulse created in the display unit goes to the antenna unit through the signal cable to activate the transmitter (magnetron). The time taken by the signal to move to the antenna unit changes, according to the length of the signal cable. During this period, the display unit must wait before the radar starts the sweep. When the display unit is not adjusted correctly, the echoes from a straight object will not appear as a straight line. The target appears "pushed" or "pulled" near the picture center. The ranges to objects are also shown at wrong distances. Below are examples of wrong and correct sweep timings.

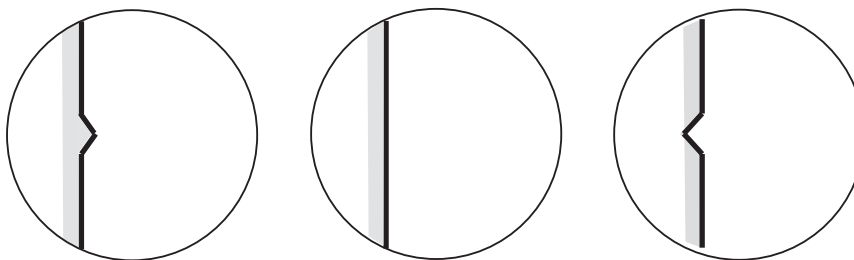

(1) Target pulled (2) Correct (3) Target pushed outward

1. Transmit on the shortest range, then adjust the gain and the A/C SEA.
2. Visibly select a target that creates a straight single line, such as harbor walls or straight piers.
3. Open the [Installation] menu and select [Timing Adjust].
4. Press **ENTER** to show the setting window.
5. Press **▲** or **▼** to until the target selected in step 2 is shown as a straight line.
6. Press **ENTER** to complete the adjustments.

Manual MBS adjustment

Reduce the main bang (black hole), which appears at the display on short ranges, as follows:

1. Transmit the radar on the shortest range.
2. Open the [Installation] menu and select [MBS Adjust].
3. Press **ENTER** to show the setting window.
4. Use the ▲ or ▼ to adjust the main bang (between 0 to 255 for FR-8065/FR-8125/FR-8255, 0 to 25 for FR-8045).
5. Press **ENTER** to finish.

Manual video adjustment

Use the following procedure to manually adjust the video settings if necessary:

1. Transmit the radar and adjust the following settings:

| | |
|-----------------------|----------|
| Gain | 85 to 90 |
| A/C Sea | zero |
| A/C Rain | zero |
| Echo Average | OFF |
| Noise Rejector | OFF |
| Interference Rejector | 2 |
2. Open the [Installation] menu and select [Video Init Adjust].
3. Press **ENTER** to show the setting window.
4. Press ▲ or ▼ to adjust the white noise on the display. The setting range is 0 to 31. A larger value increases the gain.
5. Press **ENTER** to finish.

Note: If the display is used as a remote display, set [Input Source] to [Slave]. follow the above procedure to adjust the video and take care to ensure the remote display output is similar to the master display output.

ARPA adjustment

During the sea trial, adjust the threshold level of the ARPA for short pulse, middle pulse and long pulse.

- Default setting is 2.
- If the ship echoes are difficult to acquire at setting level 2, adjust to level 1.
- If the ARPA symbol moves to a different echo at setting level 2, adjust to level 3.

4. OPTIONAL EQUIPMENT

4.1 ARP Kit ARP-11


The ARP kit provides automatic radar plotter functions to this radar.

Necessary parts


| | |
|----------|-------------|
| Name | ARP kit |
| Type | ARP-11 |
| Code No. | 008-523-050 |

For the contents of the kit, see the packing list attached to the kit.


1. Unscrew 12 screws and five connector nuts at the rear of the display unit. (See the figure below.)

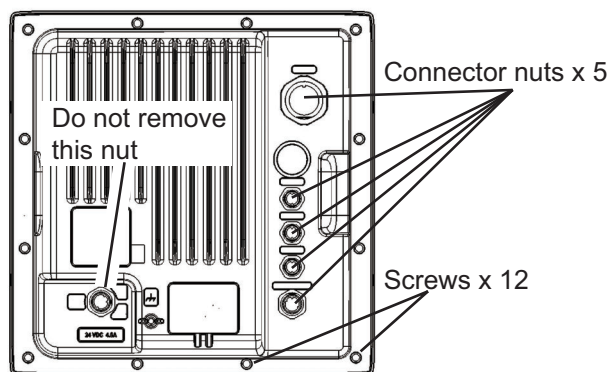

2. Lift the cover slowly and open it as shown below, taking care not to damage the SPU cables.

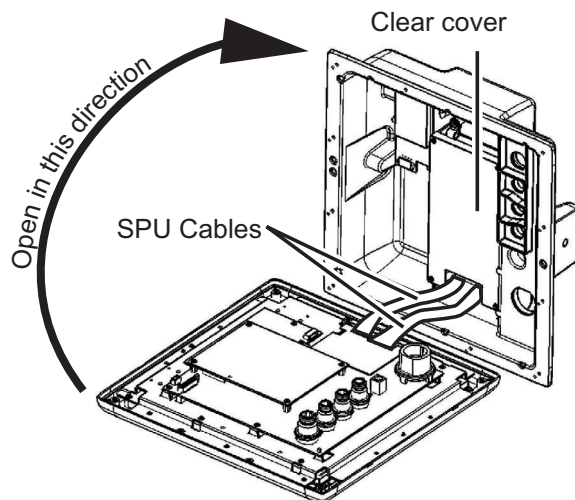


- Mate P107 on the ARP Circuit-board with J214 on the 03P9586 Board and fasten with four screws.

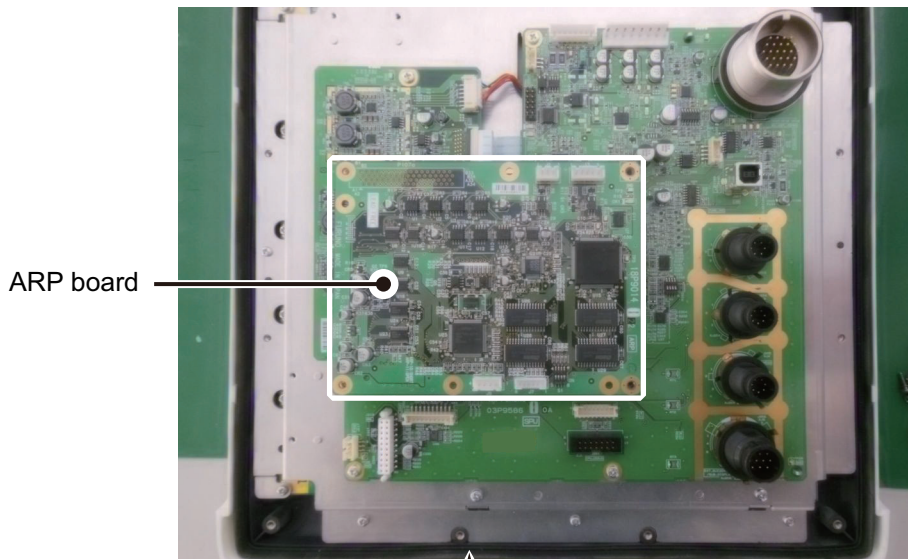

Confirm that the rubber gasket is set securely in the groove around the panel.


- Reassemble the display unit, taking care not to exceed the torque requirements for each connector nut. (See the figure below for nut torque.)

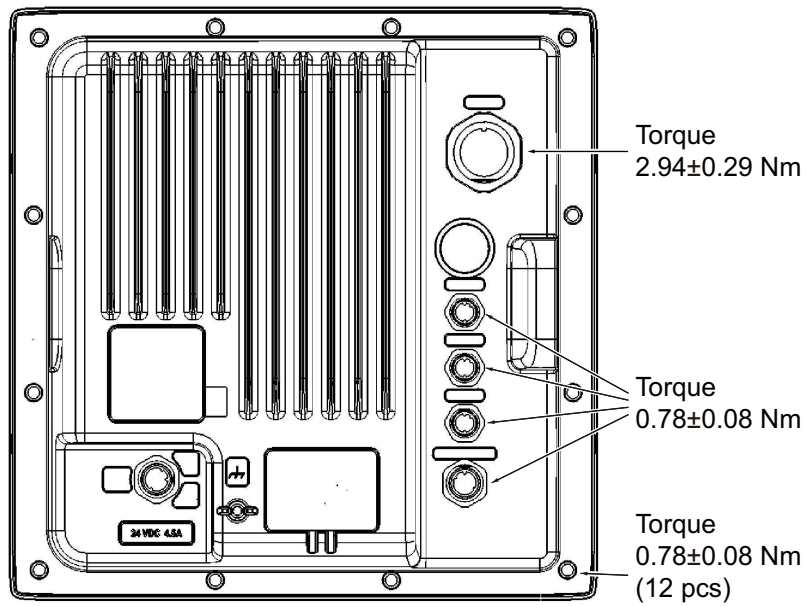

4.2 Connection of Buzzer and/or Remote Display

You will need the cables shown below to connect the optional external buzzer and remote display.

- Two-way cable MJ-A10SPFW0001 +R
- MJ-A7SPF0007-050C
- MJ-B24LPF0010-xxx+R (000: 100, 200, or 300)

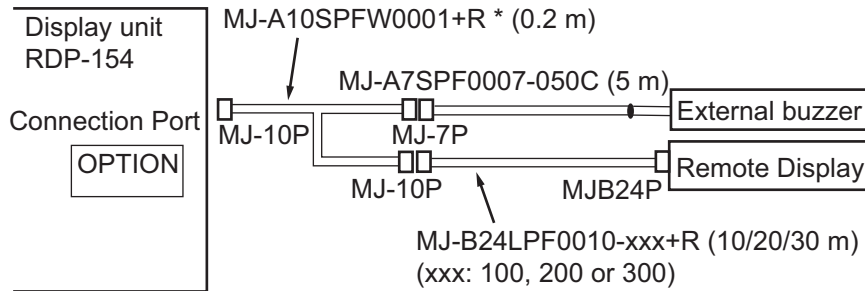

*: This cable is not required to connect the remote display only.

External buzzer


When a target enters, or exits, in the target zone, the optional external buzzer gives a loud alarm.

Type OP03-21
Code No. 000-030-097

| Name | Type | Code No. | Qty | Comment |
|-------------------|--------------|----------------|-----|---------------------------|
| Buzzer | PKB42SWH2940 | 000-153-221-10 | 1 | One NH connector attached |
| Cable tie | CV-70N | 000-162-185-10 | 4 | |
| Heat-shrink-tube | 3x0.25 BLK | 000-165-283-10 | 1 | 40 mm |
| Double-sided tape | 9760 | 000-800-851-00 | 1 | 25 mm × 25 mm |

Attach the two-way cable and MJ-A7SPF0007-050C cable to the OPTION port at the rear of the display unit. See the above figure.


1. Cut the NH connector at the end of the external buzzer cable to an acceptable length.
2. Solder the external buzzer cable to the MJ-A7SPF0007-050C cable as shown below. Before you solder the cores, cut the heat-shrink-tube in half and set the tubes to the cores of the cable. Solder the cores, then set the tubes on the soldered point.

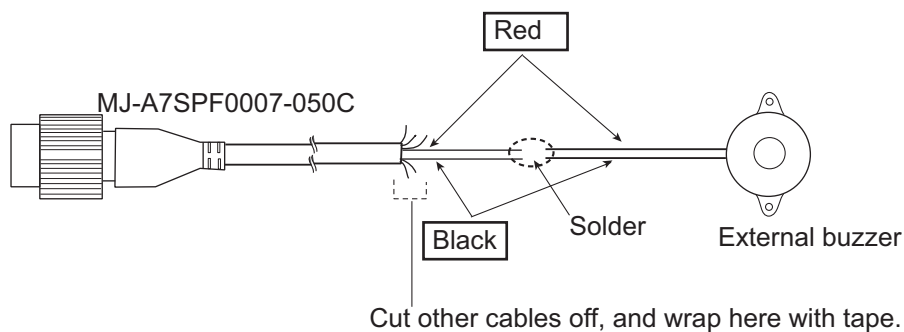


3. Fasten the buzzer with the double-sided tape or two self-tapping screws (3x15 or 3x20, local supply).

APPX. 1 MJ CONNECTOR CORROSION PROTECTION

Before connecting the antenna cable to the display unit, take the following corrosion protection measure for the MJ connector on the display unit.

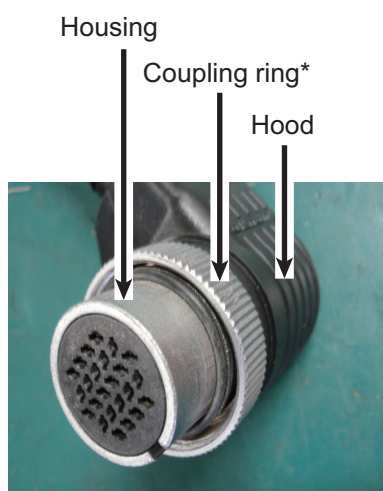

MJ connector on antenna cable

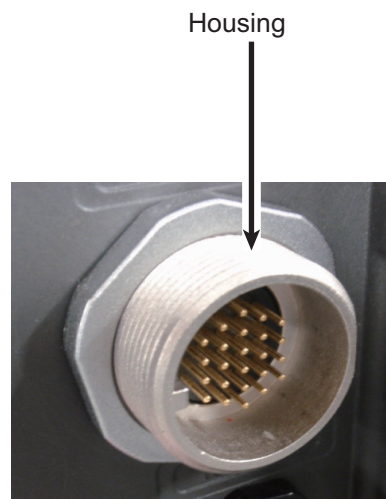

MJ connector on display unit

*: There are two types of coupling rings, round and six sided. This information shows the round ring.

1. Apply silicon grease (or oil compound) as shown below, for corrosion protection.

Silicon grease
(or oil compound)




Put a small amount of silicon grease (or oil compound) on your finger, then coat the threads of the MJ connector on the display unit with the silicon grease.

| Name | Type | Code No. |
|----------------|-------------|----------------|
| Oil Compound | KS-650N-100 | 000-166-579-10 |
| Silicon Grease | G-30M-100 | 000-169-306-10 |

Note: Make sure no grease or oil contacts the pins of the connector. Grease or oil on the pins can cause faulty connection. If grease or oil is on the pins, use a clean cloth to remove the grease or oil.


APPX. 1 MJ CONNECTOR CORROSION PROTECTION

2. Connect the MJ connector on the antenna cable to the MJ connector on the display unit.

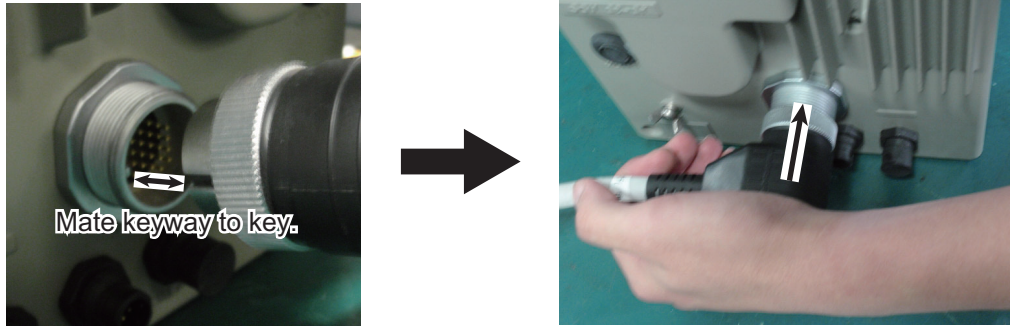


Mate the keyway in the MJ connector on the antenna cable with the key in the MJ connector on the display unit.

3. Loosely screw on the coupling ring.

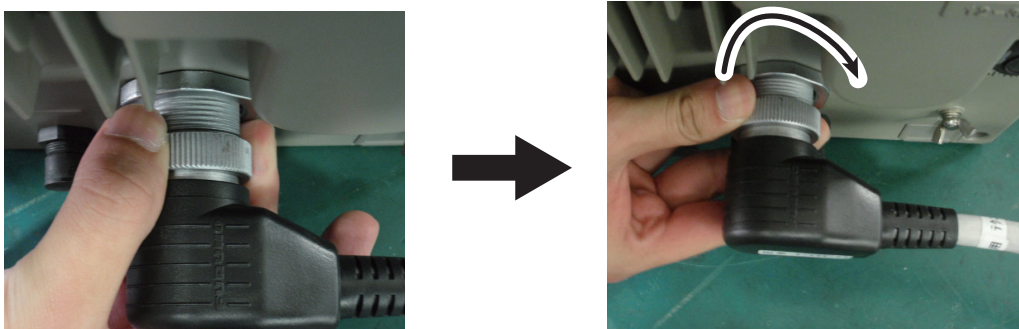


Note: Be sure the coupling ring screws on smoothly and straightly, to prevent damage to the ring and improper connection.

4. Tighten the coupling ring. Push on the hood in all directions while tightening the coupling ring. Turn the coupling ring until it cannot be turned further.
For the six sided coupling ring, the torque is 1.8 - 2.0 N•m. Use a torque wrench with a diagonal width of 36 mm.

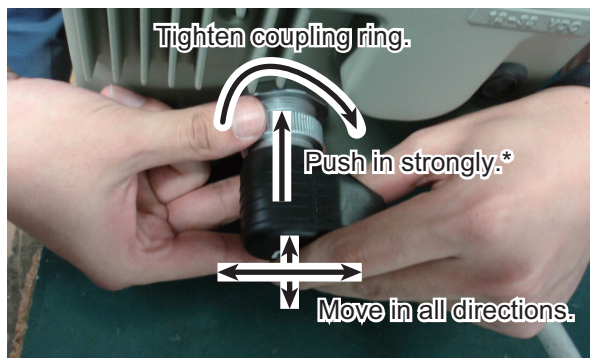

* Not necessary if a torque wrench is used.

5. Confirm that the MJ connector is tightly connected as shown below.

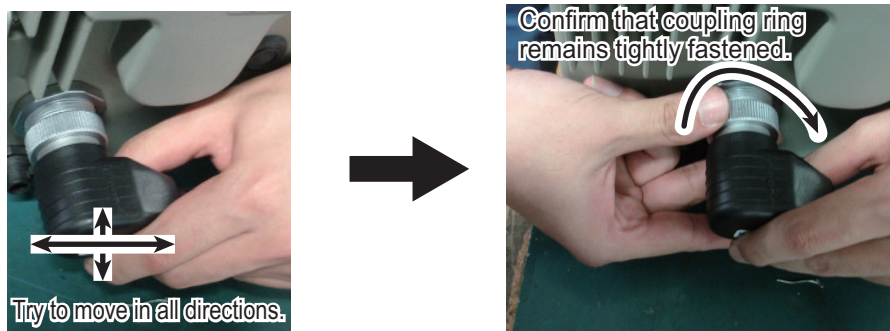

Try to move the hood in all directions. Confirm that the coupling ring remains tightly fastened.

PACKING LIST RDP-154

03HM-X-9853-4

1/1

| NAME | OUTLINE | DESCRIPTION/CODE No. | Q'TY |
|------------------------|---------|----------------------|------|
| ユニット | | | |
| 指示部 | | RDP154-* | 1 |
| DISPLAY UNIT | | 000-026-323-00 ** | |
| 予備品 | | | |
| 予備品 | | SP03-17701 | 1 |
| SPARE PARTS | | 001-303-810-00 | |
| 付属品 | | | |
| 付属品 | | FP03-12301 | 1 |
| ACCESSORIES | | 001-303-830-00 | |
| 工事材料 | | | |
| ケージ組品MJ | | MJ-A3PPF0017-050ZC | 1 |
| CABLE ASSY. | | 001-597-200-00 | |
| 工事材料 | | OP03-35601 | 1 |
| INSTALLATION MATERIALS | | 001-303-820-00 | |
| 図書 | | | |
| 技術認証要領 | | J32-02005-* | 1 |
| APPLICATION GUIDE | | 000-197-937-1* | (*1) |
| 取扱説明書(和) | | OMJ-36320-* | 1 |
| OPERATOR'S MANUAL (JP) | | 000-178-501-1* | (*1) |

1.コード番号末尾の「[*1]」は、選択品の代表コードを表します。

1.CODE NUMBER ENDING WITH " [*1]" INDICATES THE CODE NUMBER OF REPRESENTATIVE MATERIAL.

2.(*1)の書類は、和文仕様専用です。

2.(*1) MARKED DOCUMENTS ARE FOR JAPANESE SET ONLY.

(略図の寸法は、参考値です。DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

| NAME | OUTLINE | DESCRIPTION/CODE No. | Q'TY |
|--------------------------|---------|----------------------|------|
| 取扱説明書(英) | | OME-36320-* | 1 |
| OPERATOR'S MANUAL (EN) | | 000-178-502-1* | (*2) |
| 取扱説明書(中) | | OZS-36320-* | 1 |
| OPERATOR'S MANUAL (CN) | | 000-178-511-1* | (*3) |
| 操作要領書(和) | | OSJ-36320-* | 1 |
| OPERATOR'S GUIDE (JP) | | 000-178-503-1* | (*1) |
| 操作要領書(多言語) | | MLG-36320-* | 1 |
| OPERATOR'S GUIDE (MLG) | | 000-178-505-1* | (*2) |
| 操作要領書(中) | | NZS-36320-* | 1 |
| OPERATOR'S GUIDE (CN) | | 000-178-504-1* | (*3) |
| 装備要領書(和) | | IMJ-36320-* | 1 |
| INSTALLATION MANUAL (JP) | | 000-178-506-1* | (*1) |
| 装備要領書(英) | | IME-36320-* | 1 |
| INSTALLATION MANUAL (EN) | | 000-178-507-1* | (*2) |
| 装備要領書(中) | | IZS-36320-* | 1 |
| INSTALLATION MANUAL (CN) | | 000-178-512-1* | (*3) |
| フラッシュマウント型紙 | | C32-01308-* | 1 |
| FLUSH MOUNTING TEMPLATE | | 000-178-509-1* | |

3.(*2)の書類は、英文仕様専用です。

3.(*2) MARKED DOCUMENTS ARE FOR ENGLISH SET ONLY.

4.(*3)の書類は、中文仕様専用です。

4.(*3) MARKED DOCUMENTS ARE FOR CHINESE SET ONLY.

A-1

KR



C3632-Z03-F

PACKING LIST

RSB-0070-085A/-0070-086A/-0070-086A-1*/-0070-087A, RSB-0073-085A/-0073-086A/-0073-086A-1*/-0073-087A

036T-X-9854 -2 1/1

A-2
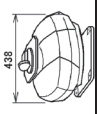
| NAME | OUTLINE | DESCRIPTION/CODE No. | Q'TY |
|----------------------------------|---|---|------|
| ユニット | | | |
| 空中線本体部 SCANNER UNIT |  | RSB-0070-085A*/-0073-085A* 001-125-220-00 ** | 1 |
| 空中線部工材 | | | |
| 空中線部工材 INSTALLATION MATERIALS |  | CP03-33801 001-141-670-00 | 1 |

コード番号末尾の[**]は、選択品の代表コードを表します。
CODE NUMBER ENDING WITH "**" INDICATES THE CODE NUMBER OF REPRESENTATIVE MATERIAL.

(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)






C3539-Z04-C

PACKING LIST

03HM-X-9852 -0 1/1

A-3

OP03-228
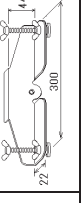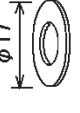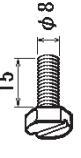
| NAME | OUTLINE | DESCRIPTION/CODE No. | Q'TY |
|-----------------------------------|---|---------------------------------|------|
| フラッシュ外部部品 | | | |
| フラッシュ外部部品 FLUSH MOUNT SPONGE H |  | 03-185-1603-1 100-381-961-10 | 2 |
| フラッシュ外部部品 FLUSH MOUNT SPONGE V |  | 03-185-1602-1 100-381-951-10 | 2 |
| フラッシュ外部部品 FLUSH MOUNT FIXTUREY |  | OP03-228-1 001-258-040-00 | 2 |
| フラッシュ外部部品 FLAT WASHER |  | M8 SUS304 000-167-464-10 | 2 |
| 六角頭ボルト HEXAGONAL HEAD BOLT |  | M8X15 SUS304 000-162-916-10 | 2 |

型式/コード番号が異なる場合、下段より上段に代わる過渡期品であり、どちらかが入っています。なお、品質は変わりません。
TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT. QUALITY IS THE SAME.

(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

C3632-Z02-A

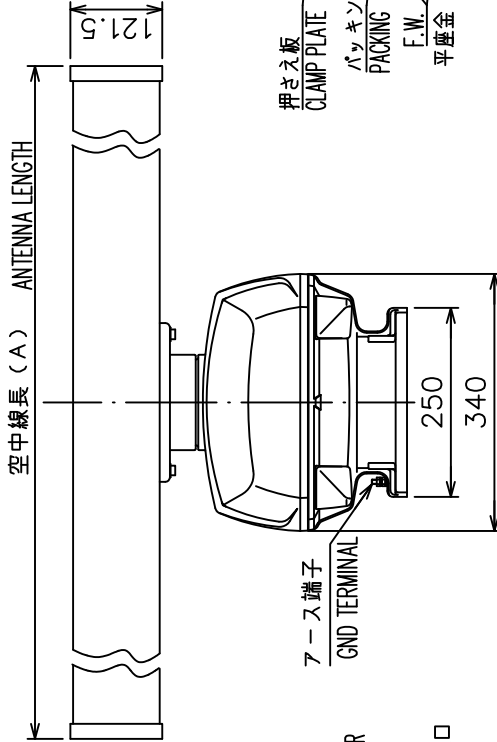
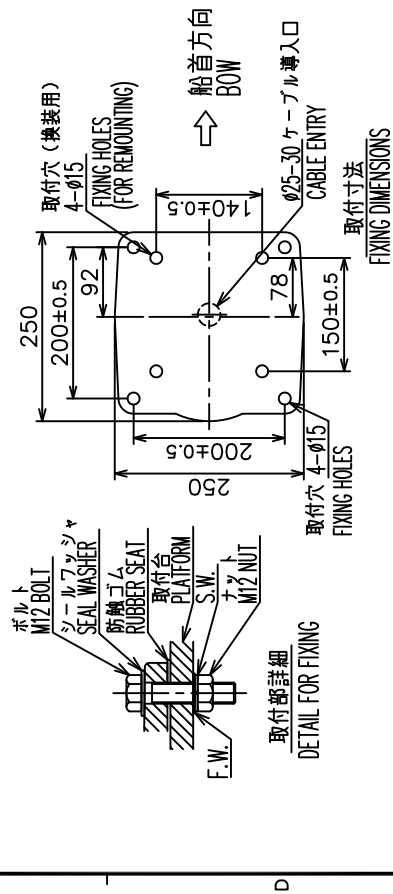
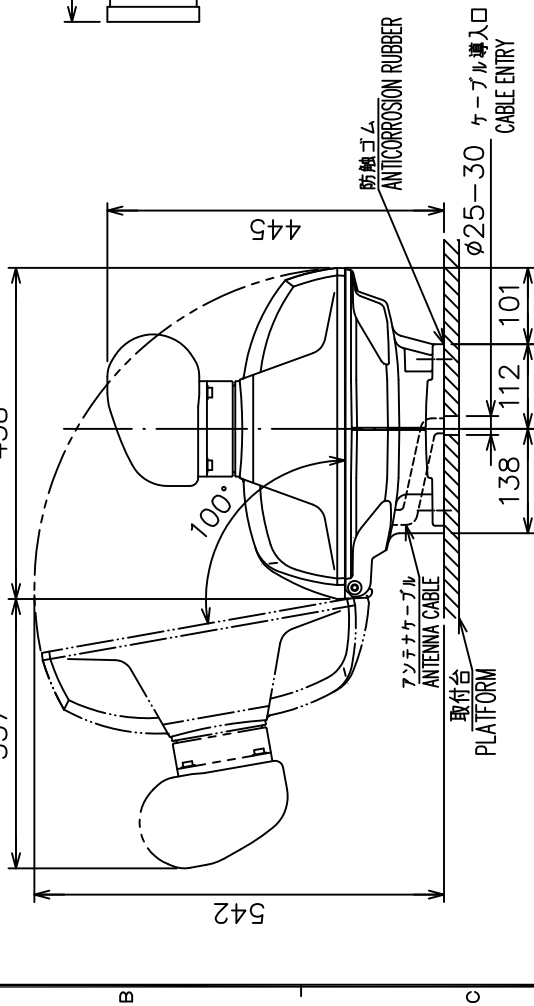
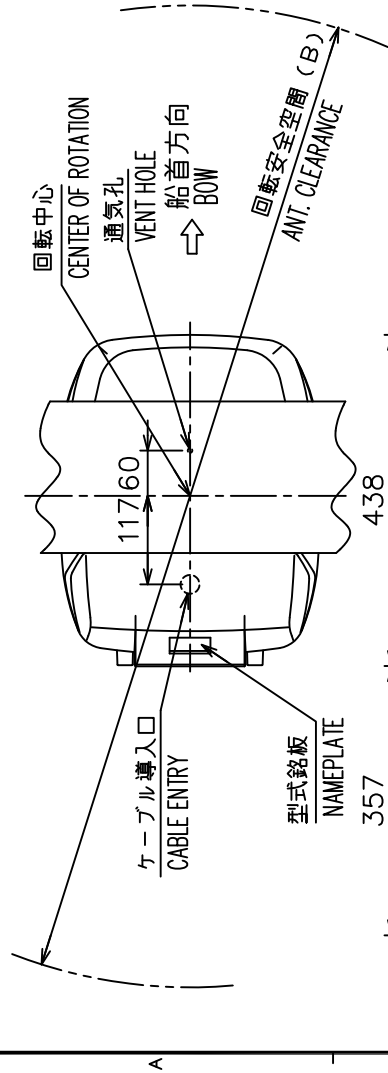


表 2 TABLE 2

| 種類 (TYPE) | XN10A | XN12A | XN13A |
|----------------------------------|---------|---------|---------|
| 空中線長 (A) (ANT. LENGTH (mm)) | 1036±10 | 1255±10 | 1795±10 |
| 回転安全空間 (B) (ANT. CLEARANCE (mm)) | 1200 | 1400 | 1940 |
| 質量 (kg±10%) (MASS) | 22 | 25 | 27 |

表 1 TABLE 1

| 寸法区分 (mm) (DIMENSION) | 公差 (mm) (TOLERANCE) |
|-----------------------|---------------------|
| L ≤ 50 | ±1.5 |
| 50 < L ≤ 100 | ±2.5 |
| 100 < L ≤ 500 | ±3 |
| 500 < L ≤ 1000 | ±4 |
| 1000 < L ≤ 2000 | ±5 |




- 注記 1) 指定なき寸法公差は表 1 による。
 2) 取付には M12 ボルトを使用のこと。
 3) 通気孔は塞がないこと。

- NOTE 1. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.
 2. USE M12 BOLTS FOR FIXING THE UNIT.
 3. DO NOT COVER THE VENT HOLE.

| | | | |
|----------------------|-------------------------|---------------|--------------------------------|
| DRAWN 18/Sep/2015 | T. YAMASAKI | TITLE | RSB-0070/0072/0073 |
| CHECKED 18/Sep/2013 | H. MAKI | 名称 | 空中線部 |
| APPROVED 18/Sep/2015 | H. MAKI | OTHERS | MODEL 6472E, MODEL 1954C, ser. |
| SCALE 1/10 | 質量 表 2 参照 (SEE TABLE 2) | 外寸図 | |
| DWG. No. | C3539-G03-D | NAME | ANTENNA UNIT |
| | REF. No. | 03-142-300G-6 | OUTLINE DRAWING |

表 1 TABLE 1

| 寸法区分 (mm) DIMENSION | 公差 (mm) TOLERANCE |
|------------------------|----------------------|
| L ≤ 50 | ±1.5 |
| 50 < L ≤ 100 | ±2.5 |
| 100 < L ≤ 500 | ±3 |

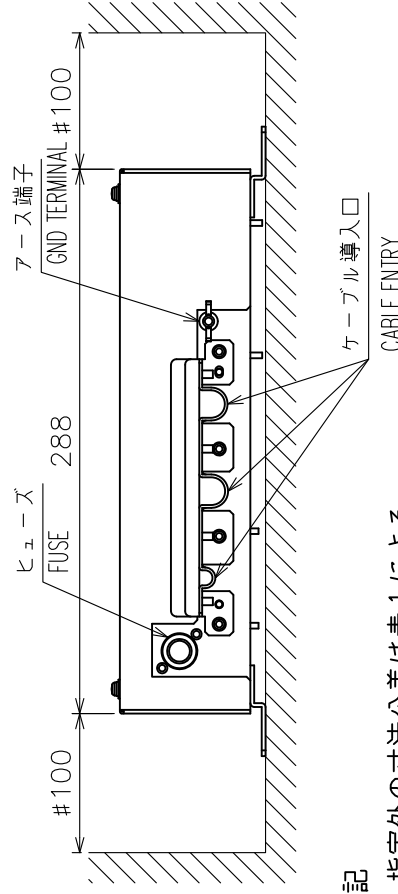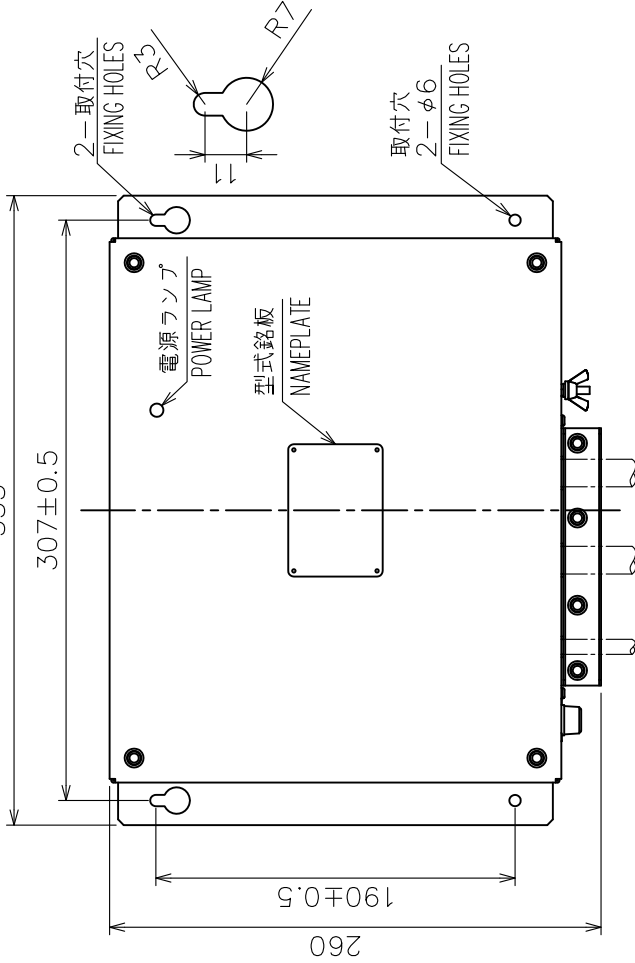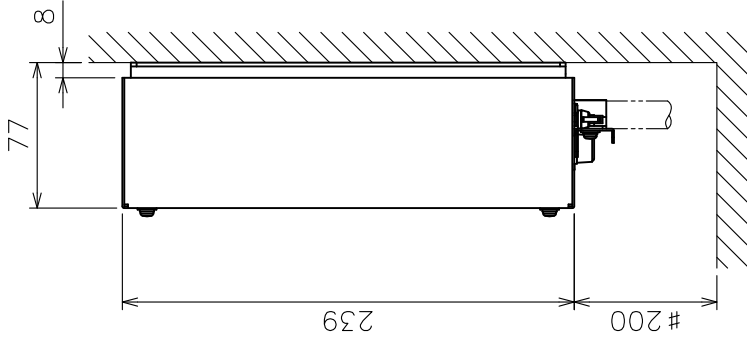

注 記

- 1) 指定外の寸法公差は表 1 による。
- 2) # 印寸法は最小サービス空間寸法とする。
- 3) 取付用ネジはトラスタス呼び径5×20を使用のこと。

NOTE

1. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.
2. #: MINIMUM SERVICE CLEARANCE.
3. USE TAPPING SCREWS $\phi 5 \times 20$ FOR FIXING THE UNIT.

| | | | | |
|----------|-------------|-------------|-----------------|-------------------|
| DRAWN | 11/Jul/2014 | I. YAMASAKI | TITLE | PSU-008 |
| CHECKED | 11/Jul/2014 | H. MAKI | 名称 | 空中線電源部 |
| APPROVED | 11/Jul/2014 | H. MAKI | 外寸図 | |
| SCALE | 1/4 | MKS 2.7 kg | NAME | POWER SUPPLY UNIT |
| DWG.No. | C3548-G01-B | | OUTLINE DRAWING | |
| | | | | 19-025-400G-0 |

取付穴
4-φ7
FIXING HOLES




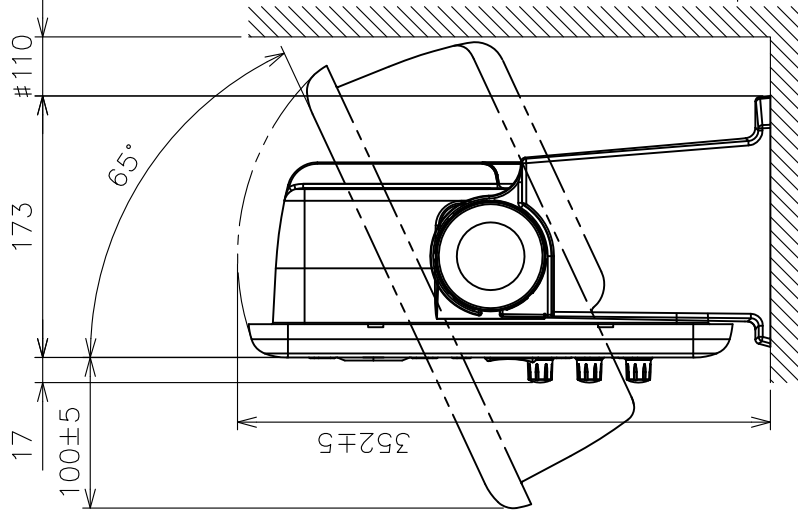


表1 TABLE 1

| 寸法区分 (mm) DIMENSION | 公差 (mm) TOLERANCE |
|------------------------|----------------------|
| L ≤ 50 | ±1.5 |
| 50 < L ≤ 100 | ±2.5 |
| 100 < L ≤ 500 | ±3 |

空中線コネクタ
ANTENNA CONNECTOR

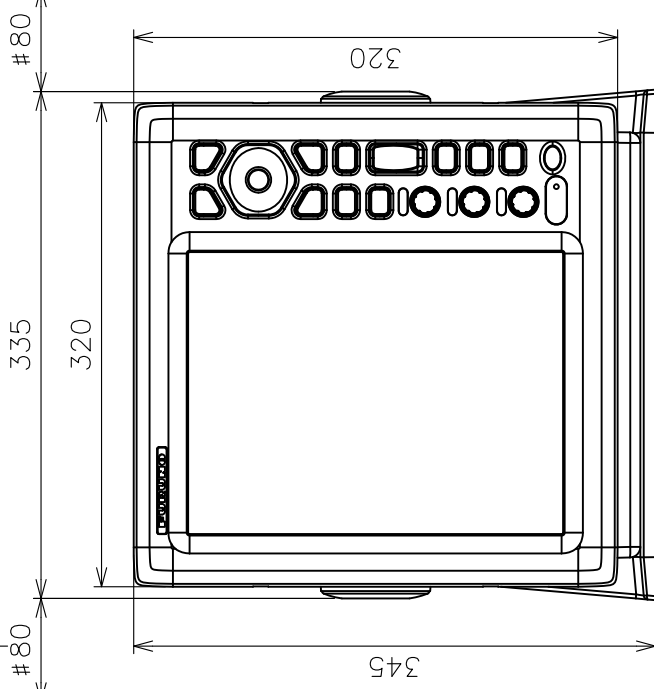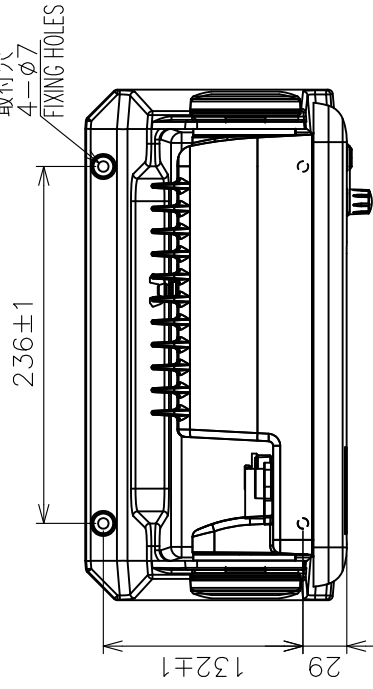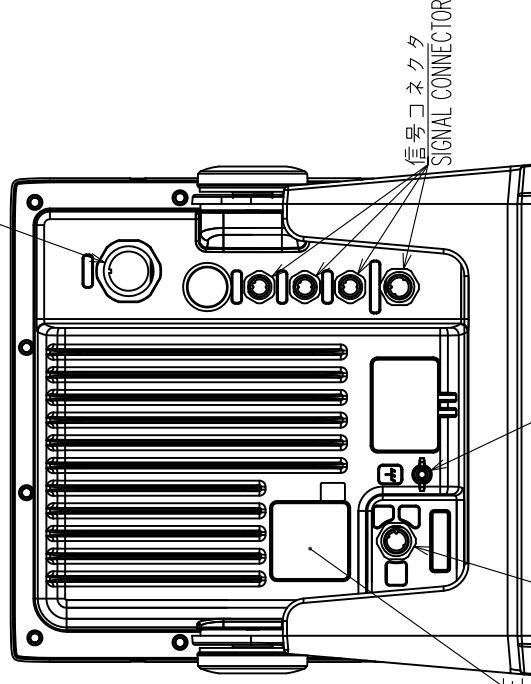

注記 1) 指定外の寸法公差は表 1 による。

2) # 印寸法は最小サービス空間寸法とする。

3) 取付用ネジは + トラスタッピンネジ呼び径 5 × 2.0 を使用のこと。

NOTE 1. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.


2. #: MINIMUM SERVICE CLEARANCE.

3. USE TAPPING SCREWS φ5x2.0 FOR FIXING THE UNIT.




| | | | | |
|----------|-------------|------------------|---------------|-------------------------------|
| DRAWN | 10/Dec/2014 | T.YAMASAKI | TITLE | RDP-154 |
| CHECKED | 10/Dec/2014 | H.MAKI | 名称 | 指示部 (卓上装備) |
| APPROVED | 11/Dec/2014 | H.MAKI | 外寸図 | |
| SCALE | 1/5 | WASS 5.6 #10M kg | NAME | DISPLAY UNIT (TABLETOP MOUNT) |
| DWG.No. | C3632-G01-C | REF.No. | 03-185-100G-2 | OUTLINE DRAWING |

表1 TABLE 1

| 寸法区分 (mm) DIMENSION | 公差 (mm) TOLERANCE |
|------------------------|----------------------|
| L ≤ 50 | ±1.5 |
| 50 < L ≤ 100 | ±2.5 |
| 100 < L ≤ 500 | ±3 |

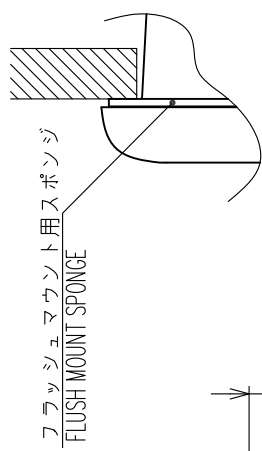


A部 詳細 (尺度: 1/3)
DETAIL FOR A (SCALE: 1/3)

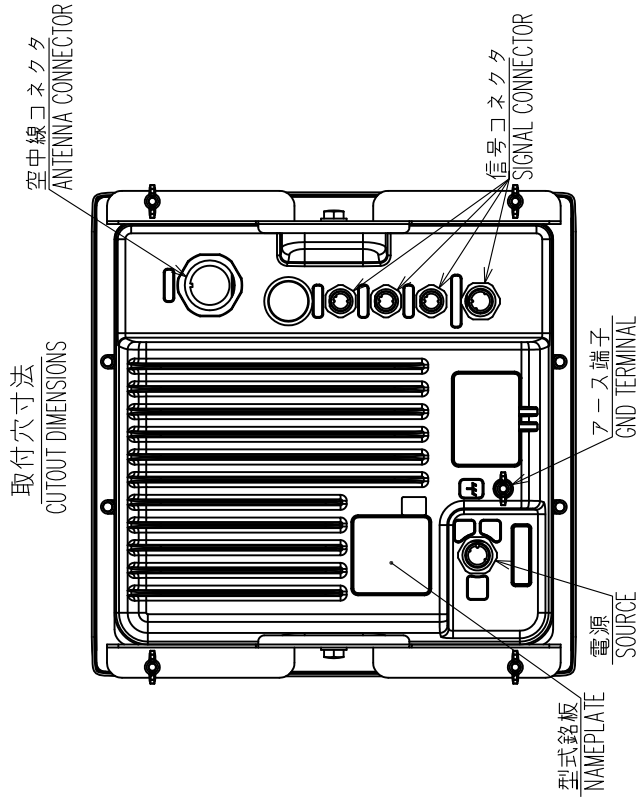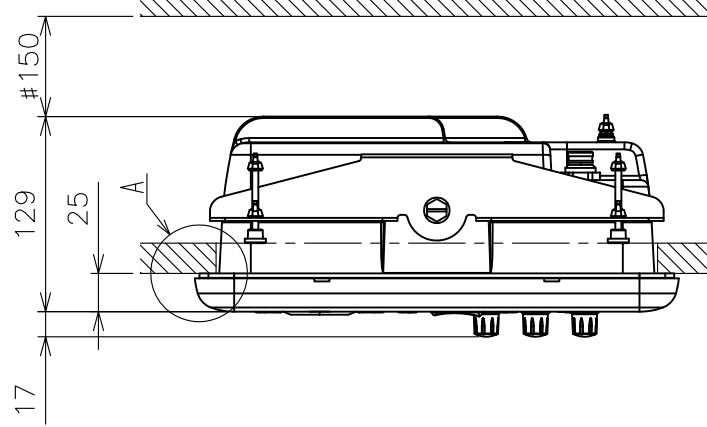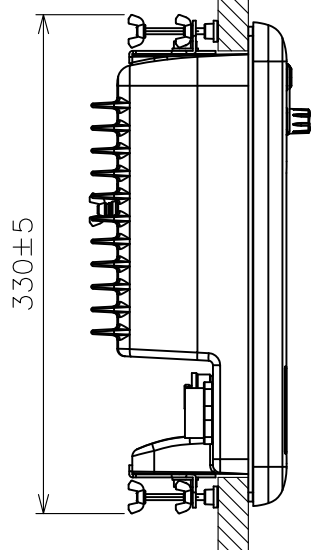

- 注記 1) 指定外の寸法公差は表1による。
 2) #印寸法は最小サービス空間寸法とする。
 3) 壁の厚さ (t) は最小10mm、最大20mmとする。
- NOTE 1. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.
 2. # MINIMUM SERVICE CLEARANCE.
 3. BULKHEAD THICKNESS (t): 10 ≤ t ≤ 20.

| | | | | |
|----------|-------------|------------|---------|---------------|
| DRAWN | 25/Nov/2013 | T.YAMASAKI | TITLE | RDP-154 |
| CHECKED | 25/Nov/2013 | H.MAKI | 名称 | 指示部 (埋込装備) |
| APPROVED | 27/Nov/2013 | H.MAKI | NAME | 外寸図 |
| SCALE | 1/5 | WASS 5.3 t | REF.No. | 03-185-110G-1 |
| DMC.No. | C3632-G02-B | | | |

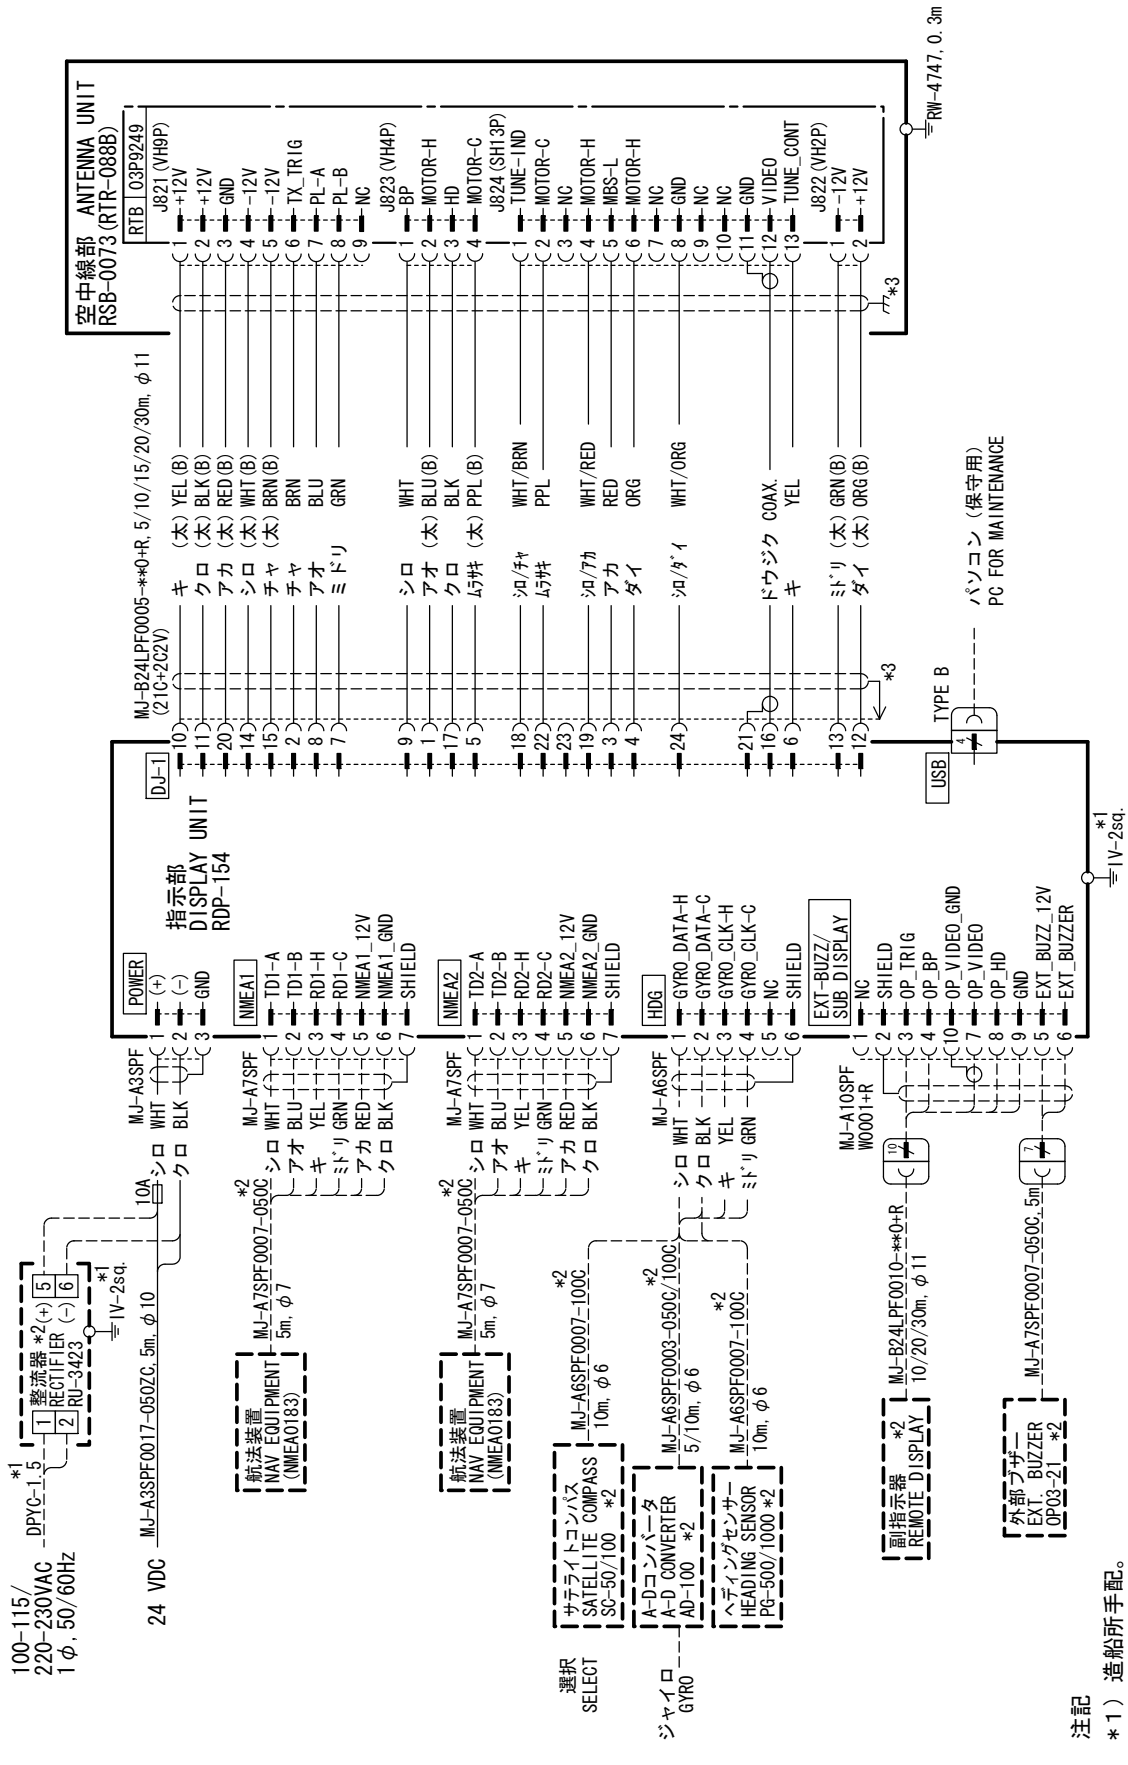

| | | | | |
|----------|--------------|-------------|---------------|-------------------------|
| DRAWN | 24/Feb./2014 | T. YAMASAKI | TITLE | FR-8045 |
| CHECKED | 24/Feb./2014 | H. MAKI | 名称 | 船舶用レーダー |
| APPROVED | 25/Feb./2014 | H. MAKI | | 相互結線図 |
| SCALE | MASS | | NAME | MARINE RADAR |
| DWG. No. | C3635-001-C | REF. No. | 03-185-6002-0 | INTERCONNECTION DIAGRAM |

100-115/220-230VAC DPY-G-1.5
1φ, 50/60Hz

24 VDC MJ-A3SPF0017-050ZC, 5m, φ10

10A

1V-2sq.

1 整流器 *2(+)|5|
2 RECTIFIER (-)|6|
RU-3423

*1

指示部 DISPLAY UNIT RDP-154

POWER

NMEA1

TD1-A
TD1-B
RD1-H
RD1-C

NMEA2

TD2-A
TD2-B
RD2-H
RD2-C

HDG

GYRO_DATA-H
GYRO_DATA-C
GYRO_CLK-H
GYRO_CLK-C

EXT-BUZZ/SUB DISPLAY

NC
SHIELD
OP_TRIG
OP_BP
OP_VIDEO_GND
OP_VIDEO
OP_HD
GND
EXT_BUZZ_12V
EXT_BUZZER

MJ-A3SPF

MJ-A7SPF

MJ-A7SPF0007-050C, 5m, φ7

MJ-A6SPF

MJ-A6SPF0003-050C/100C, 5/10m, φ6

MJ-A6SPF0007-100C, 10m, φ6

MJ-A10SPF

MJ-B24LPE0010-000+R, 10/20/30m, φ11

MJ-A7SPF0007-050C, 5m, φ7

外部ブザー
EXT. BUZZER
OP03-21 *2


1

1V-2sq.

*1 造船所手配。
*2) オプション。
*3) シールドは両端で完全にアースする。

NOTE

*1: SHIPYARD SUPPLY.
*2: OPTION.
*3: GROUND SHIELD EFFECTIVELY AT BOTH ENDS.

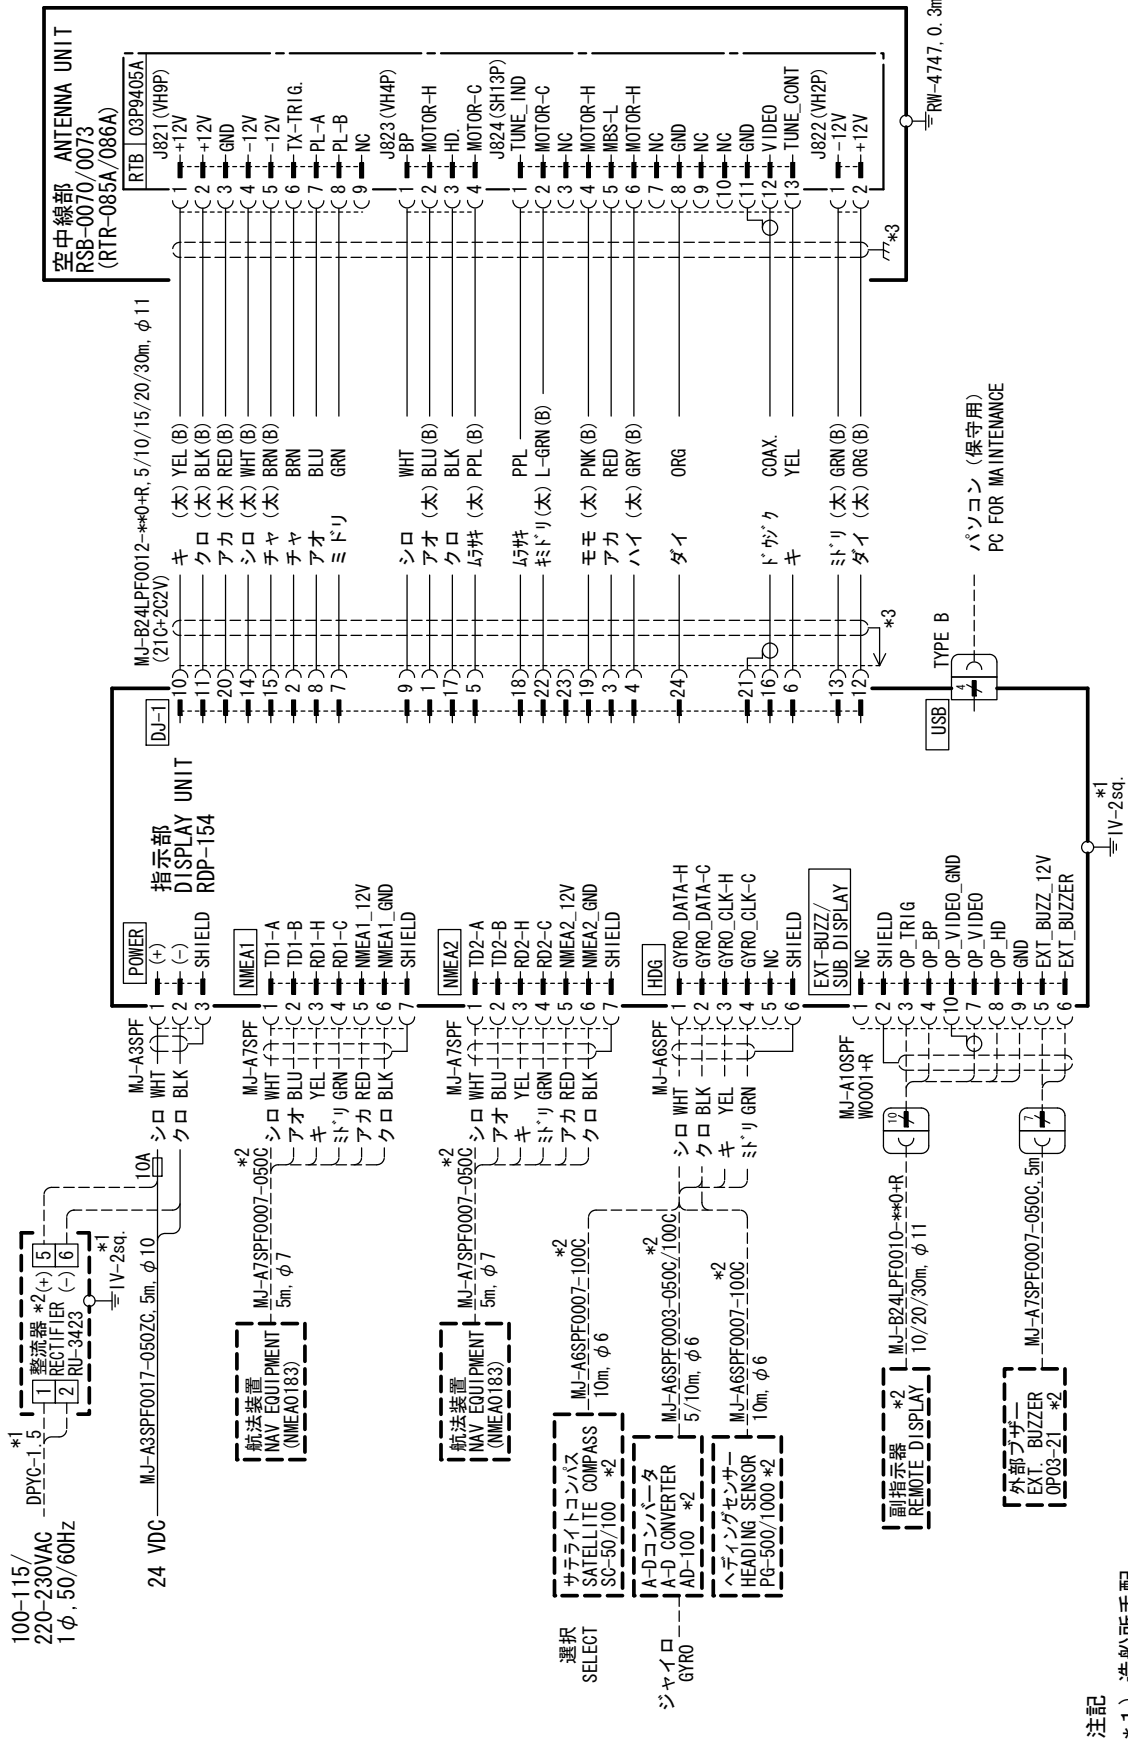

注記

- *1) 造船所手配。
- *2) オプション。
- *3) シールドは両端で完全にアースする。

NOTE

- *1: SHIPYARD SUPPLY.
- *2: OPTION.
- *3: GROUND SHIELD EFFECTIVELY AT BOTH ENDS.


| | | | | |
|----------|-------------|-------------|---------------|-------------------------|
| DRAWN | 24/Feb/2014 | T. YAMASAKI | TITLE | FR-8065/8125 |
| CHECKED | 24/Feb/2014 | H. MAKI | 名称 | 船舶用レーダー |
| APPROVED | 25/Feb/2014 | H. MAKI | | 相互結線図 |
| SCALE | 1/25 | kg | NAME | MARINE RADAR |
| DWG. No. | C3632-001-C | REF. No. | 03-185-6003-0 | INTERCONNECTION DIAGRAM |

4

3

2

1

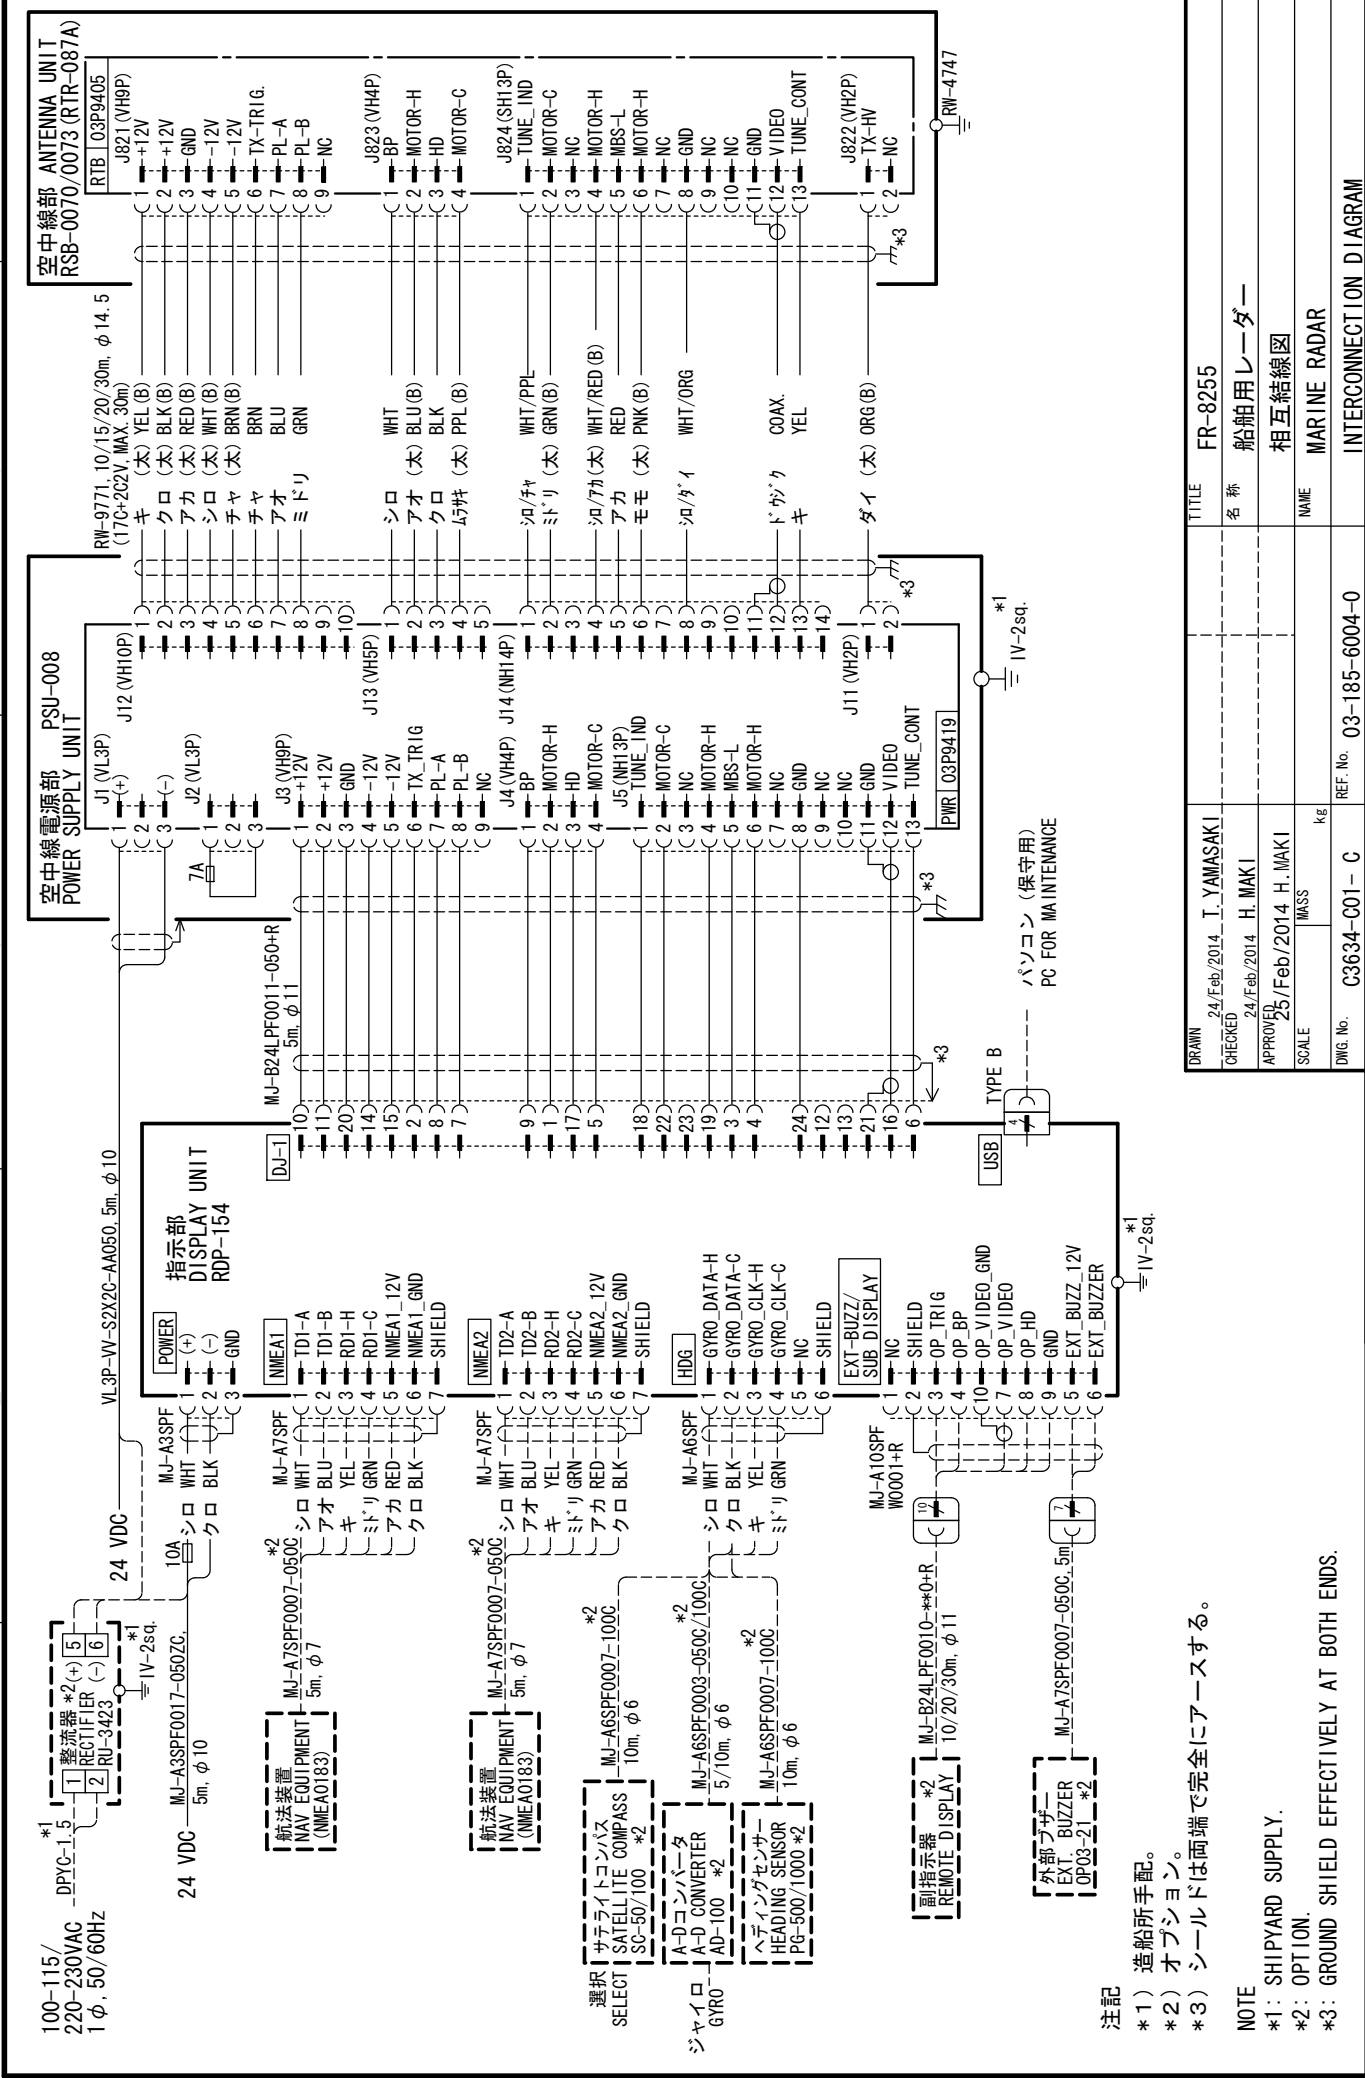

A

B

C

| | | | | |
|----------|-------------|-------------|---------------|-------------------------|
| DRAWN | 24/Feb/2014 | T. YAMASAKI | TITLE | FR-8255 |
| CHECKED | 24/Feb/2014 | H. MAKI | 名称 | 船舶用レーダー |
| APPROVED | 25/Feb/2014 | H. MAKI | | 相互結線図 |
| SCALE | | 1/100 | NAME | MARINE RADAR |
| DWG. No. | C3634-001-C | REF. No. | 03-185-6004-0 | INTERCONNECTION DIAGRAM |

NOTE

*1: SHIPYARD SUPPLY.
*2: OPTION.
*3: GROUND SHIELD EFFECTIVELY AT BOTH ENDS.

ECF

(Elemental Chlorine Free)

The paper used in this manual
is elemental chlorine free.

FURUNO ELECTRIC CO., LTD.

9-52 Ashihara-cho,
Nishinomiya, 662-8580, JAPAN

• FURUNO Authorized Distributor/Dealer

All rights reserved. Printed in Japan

Pub. No. IME-36320-C3

(AKMU) FR-8045/8065/8125

A : JAN. 2014

C3 : AUG. 30, 2021



0 0 0 1 7 8 5 0 7 1 2